

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**Kids Electric Scooter with 6.5"**  
**Durable Wheels**

SKU: PD-LFST010

# Table of Contents

Package Contents	2
Assembly Guide	2
Product Overview	3
Safety Precautions	4
Instructions for Use	4
Specifications	5
Charging Instructions	5
Cleaning and Maintenance	6
Battery Maintenance	7
Warranty	7
Contact Us	7

## Package Contents

1. Handlebars
2. Accessories
3. Electric Scooter
4. Charger
5. Hex Wrench

## Assembly Guide


1. Insert the handlebars as shown in the illustration and securely tighten the screws.
2. Conduct an initial check by powering on the scooter.

### Step 1



Flip upwards to secure


### Step 2

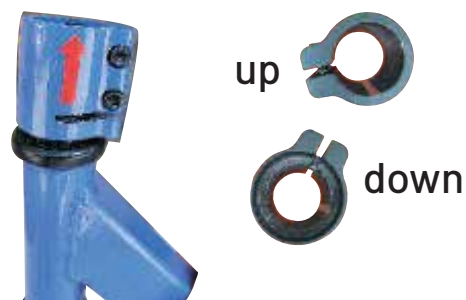

### Step 3



Insert the upper tube

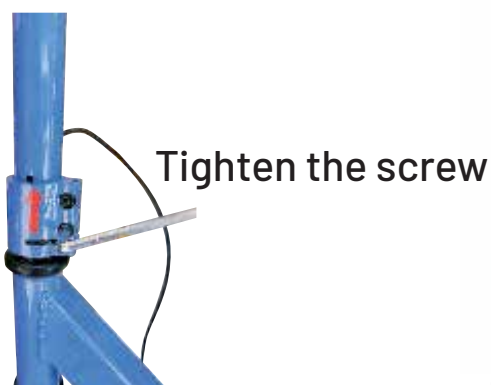

Tighten the screw



Switch on to test the scooter.

## Product Overview



## Safety Precautions

1. Ensure your child wears appropriate safety gear, including a helmet, wrist guards, and knee pads before using the scooter.
2. Avoid using the electric scooter on wet, slippery surfaces, steep inclines, or in complex traffic environments.
3. Stop using the scooter if the battery is low to prevent it from over-discharging.
4. Do not operate the throttle while walking alongside the scooter.
5. Navigate clear of obstacles while riding.
6. Refrain from hanging heavy items on the handlebars.
7. Do not ride the scooter with only one foot.
8. Do not operate the scooter on public roads, motorways, or highways.
9. Avoid making sharp turns at high speeds.
10. Do not ride in standing water.
11. Only one person should ride the scooter at a time. Do not carry passengers.
12. Avoid stepping on the folding switch while riding.
13. The motor can get hot during use; avoid contact to prevent burns.
14. Always hold the handlebars when driving; do not ride with one hand.
15. Do not attempt to ride the scooter over steps or jump obstacles.
16. Hold the handlebars firmly with both hands to maintain balance and prevent injury.

## Instructions for Use

1. Ensure the scooter's battery is fully charged.
2. Power on the scooter and check the battery indicator light. If the battery is low, charge it immediately.
3. Stand on the scooter with one foot and use the other foot to push off to start moving.
4. Place the other foot on the scooter and keep both feet steady. Once balanced, gently press the throttle on the right handle to accelerate. For safety, the motor will not engage until the scooter reaches 3 km/h.
5. Release the throttle to slow down. For emergency braking, quickly pull the

brake lever and use your foot to press the rear mudguard to activate the mechanical brake.

**6.** When turning, slightly lean your body weight in the direction of the turn and gradually turn the handlebars.

**7.** When your child is finished using the scooter, turn off the power switch on both the scooter and the controller.

## Specifications

Input	100-240V
Rated Frequency	50HZ
Rated Power Output	130W
Motor Power	130W
Battery Capacity	2.5Ah, 24V
Recharge Time	3H
Max Speed	14Km/H
Max Distance	8Km
Slope	10°
Wheel Size	6.5"
Brake	Electronic Brake and Fender Brake
Net Weight	8.2kg
Dimension	820×370×900mm

## Charging Instructions

**1.** Plug the charger's power cord into a power socket.

**2.** Insert the charger's plug into the charging port on the scooter or controller.

**3.** The battery is fully charged when the charger's indicator light changes from red to green.

**4.** Use only the recommended model and brand of battery, as using other types may pose safety risks.

**5.** Avoid touching the battery contacts, disassembling the battery, or puncturing its casing.

- 6.** Keep metal objects away from the battery contacts to prevent short circuits, which could damage the battery or cause injury.
- 7.** Dispose of used batteries properly to avoid environmental pollution.
- 8.** Follow local regulations for battery disposal and avoid discarding batteries carelessly to help protect the environment.
- 9.** Do not expose the battery to high temperatures above 50°C or low temperatures below -20°C (e.g., do not leave the scooter or battery in a car exposed to sunlight in summer).
- 10.** Avoid throwing the battery into a fire, as it may lead to failure, overheating, or fire risks.
- 11.** Use only the original charger for charging. Using other chargers may increase the risk of damage or fire.
- 12.** Do not attempt to open the charger casing. Avoid touching the charger's contacts with metal objects while it is powered on, as this could cause electric shock or charger damage.

## **Cleaning and Maintenance**

- 1.** Clean the main frame with a soft, damp cloth. For stubborn stains, apply toothpaste and gently scrub with a toothbrush, then wipe off with a soft, damp cloth.
- 2.** If scratches are present on the plastic parts of the body, polish them with fine sandpaper.
- 3.** Avoid using alcohol, gasoline, kerosene, or other corrosive and volatile solvents to clean your scooter. These substances can damage both the appearance and internal structure of the scooter. Do not use pressure washers or hose sprays.
- 4.** Before cleaning, ensure the scooter is turned off and the charging cable is unplugged. The rubber cap of the charging port should be securely fastened to prevent damage to electronic components.
- 5.** When not in use, store the scooter in a cool, dry place. Do not leave the scooter outdoors for extended periods.
- 6.** Exposure to extreme temperatures (both overheating and overcooling) can cause the plastic parts to age prematurely and may reduce battery life.

## Battery Maintenance

1. When storing or charging the battery, ensure that the temperature does not exceed the limits specified in the model parameter table. Do not damage the battery.
2. For battery recycling or disposal, please adhere to local laws and regulations.
3. A well-maintained battery remains effective even after extensive use. Recharge the battery after each use and avoid completely draining it.
4. At a normal temperature of 22°C, the battery operates at peak efficiency.
5. Performance can decrease in temperatures below 0°C, where a battery might only deliver half the endurance compared to at 22°C.
6. The performance of the battery improves as the temperature increases.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**