

PORODO
LIFESTYLE



Porodo Lifestyle
Counter-Top Dishwasher
with Dual Mode, Water
Tank, and Inlet Pipe

SKU: PD-LFST046

Table of Contents

Schematic View	2
Specifications	2
Control Panel	3
Installation	3
Loading the Dishwasher	4
Operating Instructions	4
Function Selection Guide	5
Troubleshooting	6
Cleaning and Maintenance	7
Prohibited Actions	7
Safety Precautions	8
Attention	8
Warranty	9
Contact Us	9

Schematic View

Water tank filling port

Upper cover

Upper shelf


Bowl basket



Specifications

Rated Voltage	220V
Rated Frequency	50Hz
Rated Power	1000W
Inlet Water Pressure	0.3-1MPa
Water Tank Capacity	5L
Noise Level	52dB
Net Weight	13kg
Dimension	460×410×460mm
Power Cord	UK 3pin Plug
Standard	GB14706.1-2005, GB4706.25-2008


K Control Panel

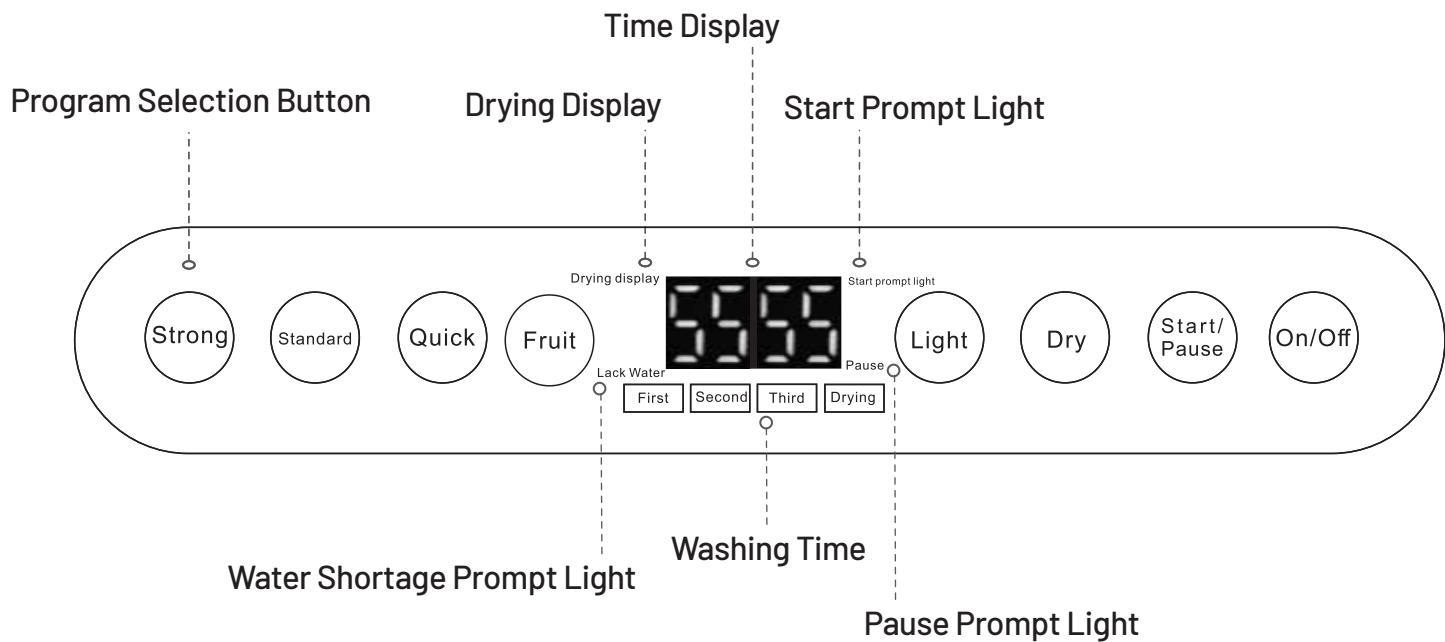


K Installation

[A] Water Inlet Installation


1. Attach the elbow end of the inlet pipe, ensuring it is straight.
2. Align this end with the dishwasher's water inlet.
3. Securely tighten the connection.
4. Fill the water tank until you hear a beep indicating it is full.
5. Ensure the water shortage indicator light on the display has turned off before proceeding to the next installation step.

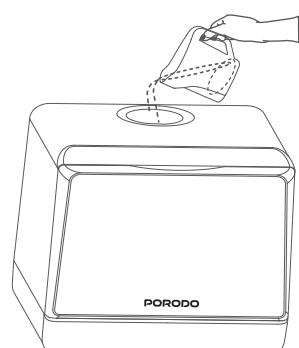

Fill the water tank with water

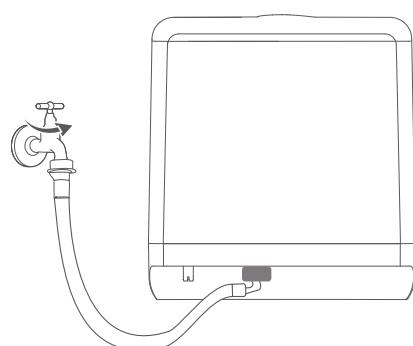


Water Inlet from faucet

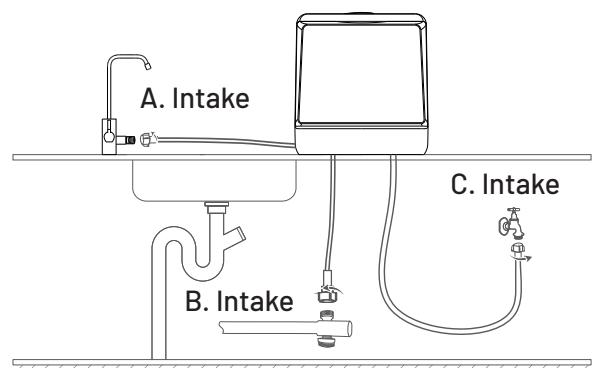

Installation of faucet end

[B] Installation and Connection of Drainage Pipes


1. Remove the drainage pipe and attach a clamp to its elbow end.
2. Connect it to the outlet pipe located at the back of the dishwasher.
3. Tighten the clamp using a screwdriver to ensure there is no water leakage.

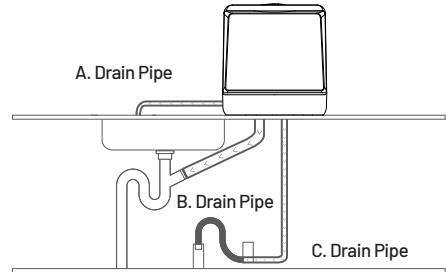

Loading the Dishwasher


1. Remove large pieces of food residue from the tableware to prevent clogging the waterways and to enhance the effectiveness of the washing cycle.
2. Follow the standard layout for placing dishes. Arrange each piece individually to ensure optimal cleaning.

Note: To ensure efficient cleaning, it is necessary to position the dirty surfaces of the tableware diagonally facing inward so that the spray jets can reach and clean effectively.

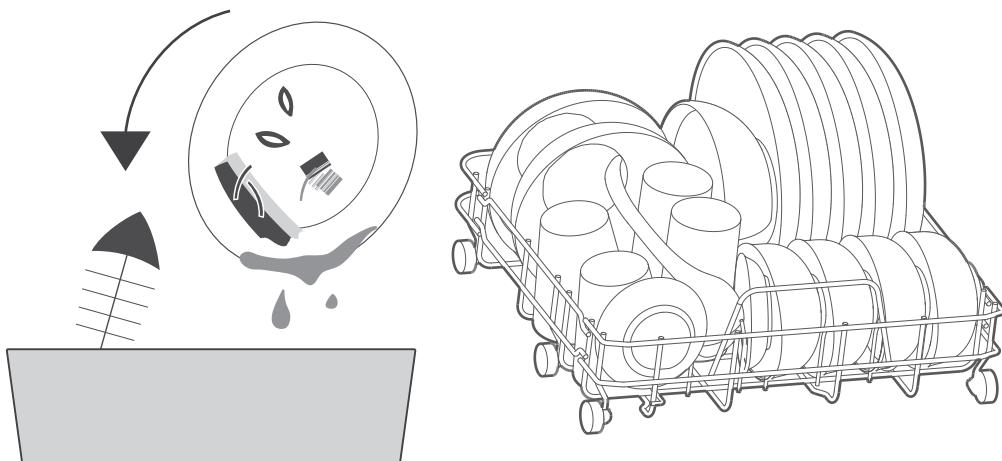

Operating Instructions


1. Turn on the machine by pressing the "On/Off" button.

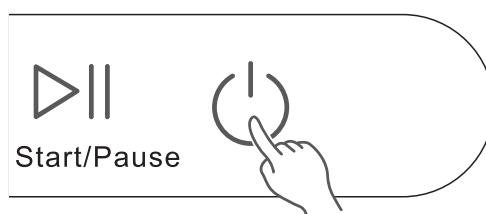

2. To adding the dishwashing powder, open the door and load the recommended amount of powder into the dispenser. Use one detergent block per cycle. Ensure the door is securely closed after adding the detergent.

Note: Washing fruits does not require detergent. The size and type of detergent blocks can vary by brand but can be placed directly into the dispenser.

3. Choose the appropriate program by tapping on your desired option. The corresponding program light will flash. Press the "Start/Pause" button to start the selected program.

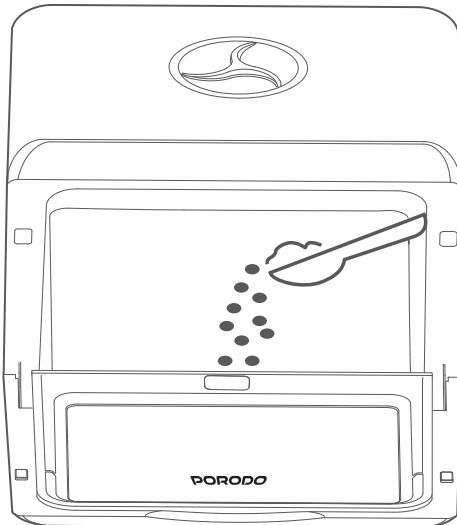

Function Selection Guide

Function	Washing Time	Washing Temperature	Dry	No Dry Function
Strong washing	About 120 minutes	70°C	60 minutes	About 72 hours
Standard washing	About 70 minutes	70°C	60 minutes	About 72 hours
Quick wash	About 29 minutes	70°C	60 minutes	About 72 hours
Fruit washing	About 15 minutes	/	/	/
Dry	/	/	60 minutes	About 72 hours

Troubleshooting

Problem	Possible Causes	Solution
Dishes remained unclean	Incorrect placement of tableware	Refer to the "Loading the Dishwasher" section to ensure that dishes are adequately spaced for effective cleaning.
	The spray arm does not operate smoothly	Ensure there are no utensils obstructing the movement of the spray arm.
	Spray arm nozzle is clogged	Clean the spray arm thoroughly.
	Dirty filter screen	Clean the filter screen.
	Filter installation error	Install the filter screen correctly.
	Unsuitable program selection	Consult the "Function Selection Guide" section to select the appropriate washing program.
Machine fails to start	Lack of dishwashing powder	Refer to the "Function Selection Guide" to add the correct amount of dishwashing powder.
	The water tank is not filled with water	Continue adding water until the water shortage indicator light turns off.
Program settings did not work	The door was not securely closed	Ensure the dishwasher door is free from obstructions and close it securely.
	Program is operational	To terminate the current program or select a new program after the program is completed:
Foam accumulation in tank	Incorrect use of dishwashing powder	1. Use dishwasher-specific dishwashing powder. 2. Turn on the dishwasher and allow the foam to evaporate. 3. Add 3-2 liters of water, run any program for about 2-1 minutes, then exit to discharge the water.
Clicking noise during operation	The spray arm contacts the dishes	When placing the dishes, ensure it is properly positioned and secured.
	Light dishes slightly move	If there are any important utensils not properly placed, this is considered a normal occurrence.
Egg residue on dishes	Protein residue sticks to dishes	It is recommended to manually clean such tableware or additionally clean manually after the dishwasher cycle.
Wet inside walls and moisture after cycle ended	Water droplets remain on the inner wall after the program	If the dishwasher is not used for an extended period, it is normal and not indicative of a malfunction. The machine might require maintenance services.
Dishes remain wet after the cycle	Select the 'Fruit Wash' program	Choose another washing program.
	The plastic tableware were not correctly dried	Before use, please wipe the interior clean with a dry cloth.
	Inaccurate stacking and placement of dishes	Position the tableware correctly, ensuring that the bottom of the bowl, cup, etc., is not filled with water and that the opening of the tableware is not facing upwards.
	The wash cycle has finished, but the drying cycle has not started	Await the completion of the additional drying program.
	Use of wooden dishes	After washing, remove the dishes and place them separately.
Discoloration of plastic dishes	Washing temperature is too high	Opt for a program that operates at lower temperatures.
Dishwashing powder residue	Water flow is blocked and did not reach the detergent	Arrange the tableware properly to ensure it does not hinder the movement of the spray arm or block the detergent dispenser.
	Detergent has expired	Replace the detergent.

Cleaning and Maintenance

1. Filter Cleaning and Maintenance


Disassembly: Rotate the filter counterclockwise to completely disassemble it. The filter device consists of three parts, each of which can be cleaned individually when removed.

Cleaning: Rinse the disassembled filter with running water or use a soft bristle brush for cleaning.


2. Cleaning and Maintenance of Spray Arms

Disassembly: Open the dishwasher door, pull out the basket to confirm the temperature inside the chamber is normal, and then remove the spray arm by lifting it upwards.

Cleaning: Rinse the disassembled spray arm with running water or use a soft bristle brush for cleaning. If a spray hole is blocked, use a sharp object, such as a toothpick, to clear it.

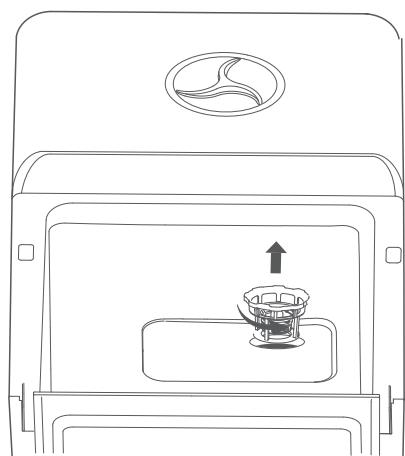

①

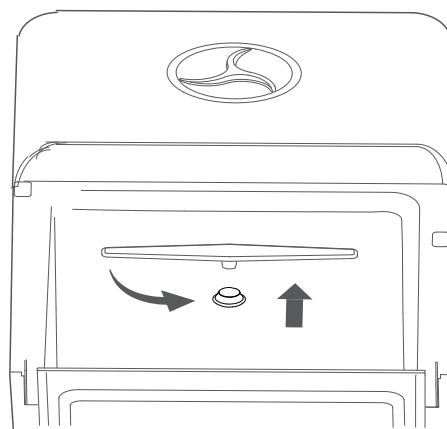

②

Prohibited Actions

1. The power socket must be securely grounded. Failure to install a grounding device may result in electrical leakage and pose a risk of electric shock.
2. Use a single-phase power socket with a rated current of 6A/10A and a rated voltage of 220V exclusively. Do not share the socket with other electrical appliances to prevent excessive current and wire heating, which could cause a fire.
3. If electrical components or power cords are damaged, they must be replaced by qualified professionals from the authorized service centers.

- 4.** When handling old machines, dispose of them in accordance with local regulations.
- 5.** Do not install or store the dishwasher in environments with temperatures below 0°C, such as outdoors or in cold storage areas.
- 6.** Use dishwasher-specific salt instead of regular table salt or other types of salt that can damage the water filter.

Safety Precautions

- 1.** Do not place the dishwasher on an unstable, damp, smooth, or flammable surface to avoid the risk of electric shock, fire, or tipping, which could lead to personal injury and property damage.
- 2.** Keep the dishwasher away from heat sources such as gas stoves or water heaters, maintaining a distance of at least 150mm.
- 3.** After opening the dishwasher, do not place heavy objects on the door to prevent tipping, which could cause injury or financial loss.
- 4.** Use only dishwasher-specific detergent. Do not use detergents containing foam, such as hand soap, washing powder, or general-purpose cleaning agents.
- 5.** Avoid splashing water onto the dishwasher, as it may cause fire, electric shock, or other hazards.
- 6.** Residual water inside the machine may contain detergent and cannot be consumed directly.
- 7.** Do not allow children to operate or play with the dishwasher. Keep it out of reach of infants and young children to avoid risks such as electric shock or injuries.

Attention

- 1.** During the washing process, do not open the door to prevent hot water from splashing out and causing burns. If you need to open the door mid-cycle, press the "Start/Pause" button first, and then open the door.
- 2.** Do not touch or obstruct the side air outlet.
- 3.** Do not tilt or move the dishwasher while it is running.
- 4.** When placing knives or other sharp objects on the upper shelf or basket, ensure that the sharp edges and tips are not aligned with people to avoid injuries.
- 5.** In case of abnormalities or malfunctions, immediately stop using the dishwasher, unplug the power cord, and turn off the water supply.

6. To ensure optimal washing performance, regularly inspect and clean the interior, including the filter.
7. Securely attach the drainage pipe outlet to prevent it from detaching during operation, which could cause sewage to spill onto the table or floor.
8. Do not forcefully pull the power cord, drainage pipe, or press on the upper shelf, as this may cause damage.
9. Do not operate the machine with wet hands or while plugging or unplugging the power cord.
10. Keep children away from dishwasher-related consumables, such as dishwashing powder, soft water salt, or brighteners, to avoid risks such as burns or ingestion that could harm the mouth, throat, or eyes.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](#)