

porodo



Porodo LifeStyle

Nut Milk Maker


SKU: PD-LFST060

Table of Contents


Schematic View	2
Package Contents	2
Safety Precautions	3
Instructions for Use	5
Food Preparation Guide	6
Function Guide	8
Using a Measuring Cup	8
Basic Recipe	9
Cleaning and Maintenance	10
Constituent Material Standards	11
Environmental Statements	11
Specifications	12
Troubleshooting	13
Before First Use	13
Disposal	14
Warranty	14
Contact Us	14

Schematic View


1. Transparent Lid
2. Jar Lid
3. Main Unit
4. Handle
5. Control Panel
6. Base
7. Non-Slip Base

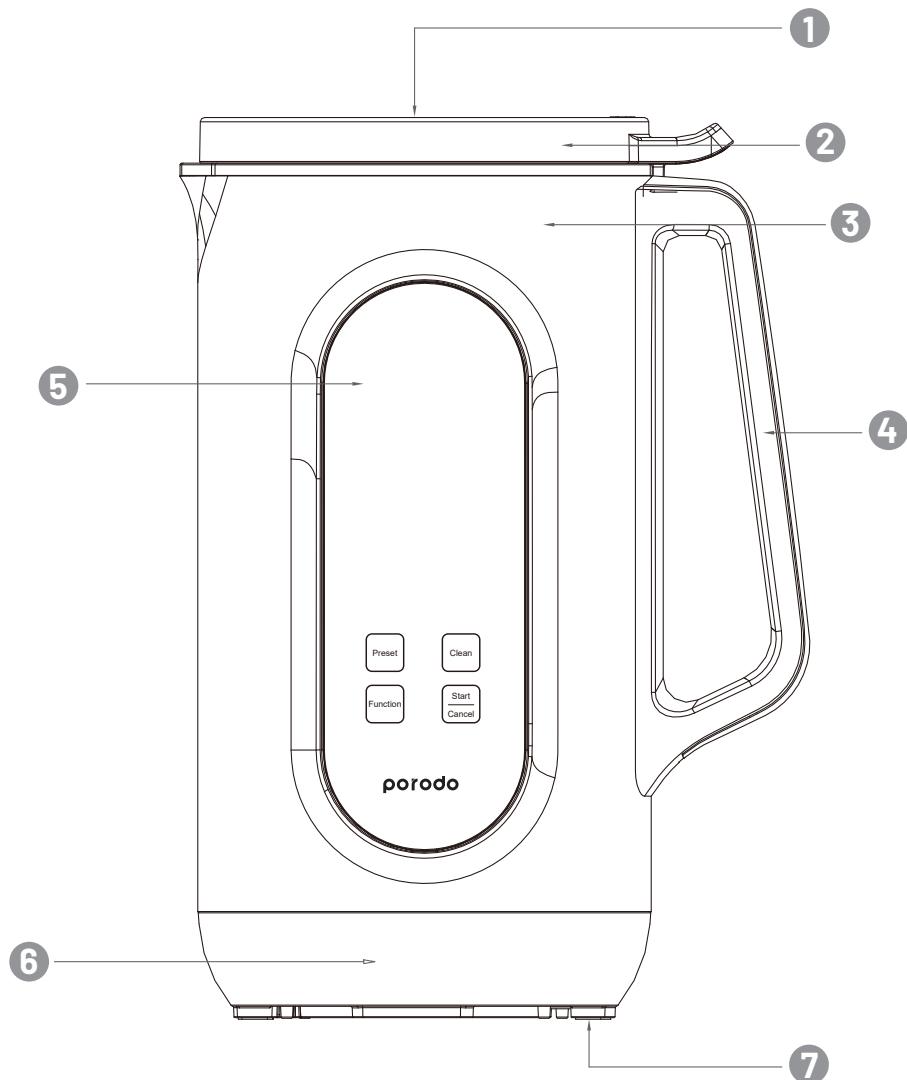


Package Contents

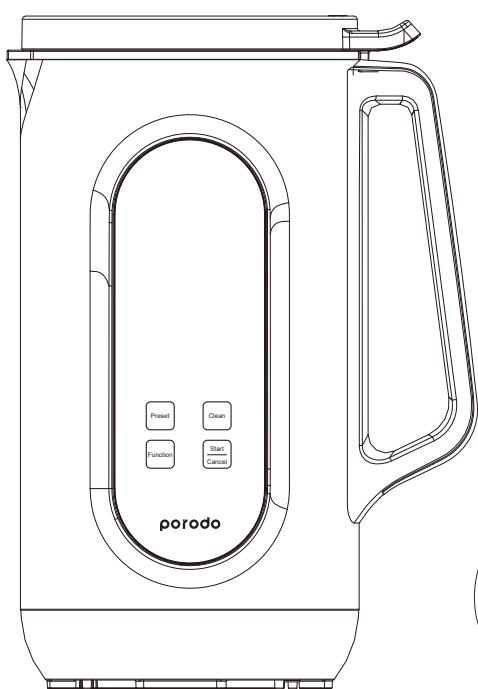


Main Unit

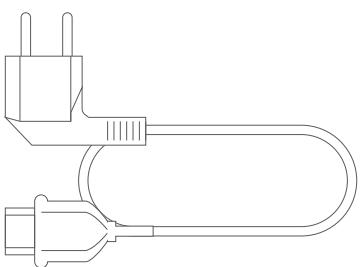


Power Cord (Three-pin Plug)

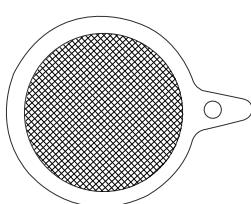

Sieve

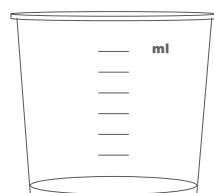

Measuring Cup

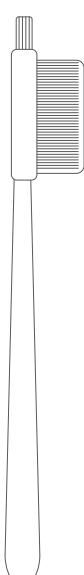


Cleaning Brush

Safety Precautions


 Use the appliance only for its intended use. Otherwise, the product may be damaged or it will pose a risk to personal safety.




1. This appliance is intended for household use only.
2. Do not operate the appliance unattended.
3. Unplug the appliance when not in use for extended periods or when no one is at home.
4. Keep the appliance out of reach of children, infants, and pets. Never leave the operating appliance unattended.

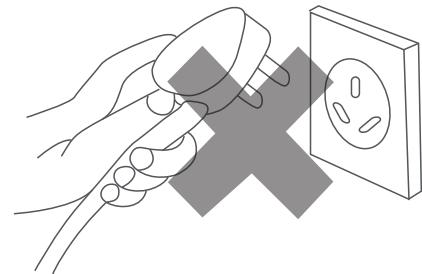


5. Always unplug the appliance before cleaning.
6. When unplugging, do not pull on the power cord; ensure the plug is detached from the socket.

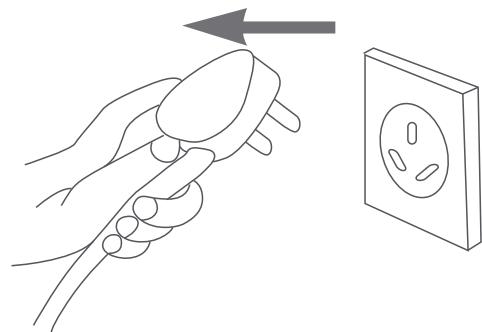

7. Do not use the appliance near flammable or explosive materials, and avoid placing it near heat sources (e.g., ovens).

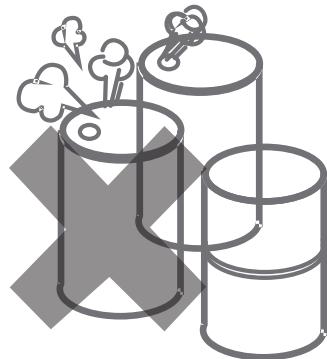


8. Do not use or store the appliance in areas with high humidity.
9. Do not immerse the appliance in water.

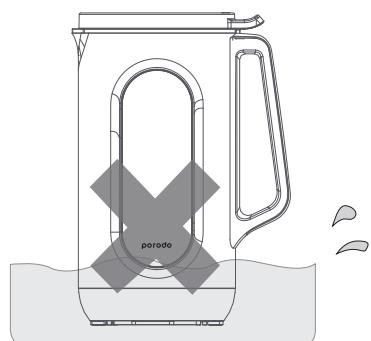



10. Ensure the power cord is properly plugged in before use.

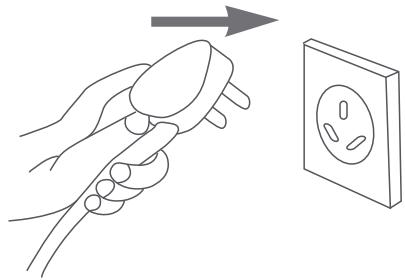


11. Check that the plug is securely connected and not loose.




12. Do not use damaged power cords or plugs.

13. Do not operate the appliance when the power cord is bundled. Avoid damaging, modifying, or pulling the power cord.

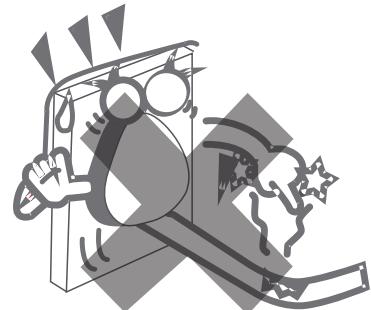


14. Avoid using extension cords that may cause overheating of the socket.

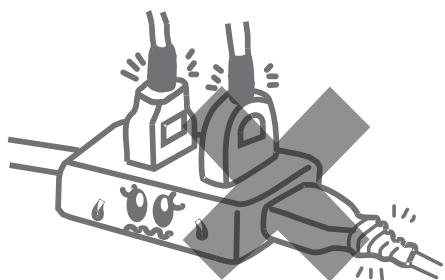

15. Do not place heavy objects on the power cord or apply pressure.



16. If the power cord is damaged, contact a professional technician for repairs.

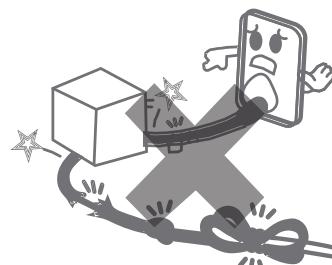

17. Do not attempt to repair, disassemble, or modify the appliance yourself, as this may cause injury and void the warranty.



18. Never unplug the power cord with wet hands.




19. The plug should not be cleaned with a wet cloth.



20. Do not touch the main unit or the jar lid while the appliance is in operation.

21. Exercise caution, as hot water or steam may spill after the liquid in the cup begins to boil. Do not open the lid of the cup.

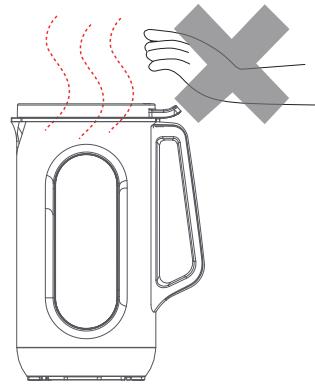

22. This appliance is not suitable for use by individuals including children with reduced physical, sensory, or mental capabilities, unless supervised or instructed by a responsible person.

23. Do not place the appliance in the cabinet while in operation.

24. Place the appliance on a stable, flat surface.


25. Do not use the appliance outdoors.

26. This appliance is intended for household and similar uses, including:

- Staff kitchen areas in shops, offices, and other work environments
- Farms
- Hotels, motels, and other residential accommodations
- Bed and breakfast environments

Instructions for Use

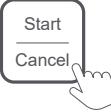

 	<p>After plugging in the power cord, the indicator light on the operation panel will illuminate, emitting a "beep" sound, and "—" will appear on the LED screen. Press the "Start/Cancel" button to display 8 icons and enter the function selection mode.</p>
	<p>Press the "Function" button to select a function (Soy Milk / Solid Foods / Rice Cereal / Porridge / Corn Juice / Fresh Juice / Boil / Warm). The indicator lights for the selected function will flash, while the indicator lights for the other functions will remain illuminated.</p>
	<ol style="list-style-type: none"> 1. After selecting the function, press the "Start/Cancel" button to begin cooking. 2. If you press the "Start/Cancel" button while the product is running, the cooking process will stop and the appliance will return to standby mode.
	<ol style="list-style-type: none"> 1. Press the "Preset" button, then press the "Function" button to select the desired cooking mode, and finally press the "Start" button to set the reservation. 2. The indicator light for the selected function will remain on, and the LED screen will display the set time, beginning the countdown to confirm the successful reservation. 3. Press the "Preset" button to select the countdown time. Each time you press the "Preset" button, the time will accumulate (1H/2H/... 11H/12H), with a maximum reservation time of 12 hours.
	<p>Press the "Clean" button, then press the "Start/Cancel" button to enter cleaning mode. Once cleaning is complete, the appliance will automatically return to standby mode.</p> <p>Warning: Do not add highly corrosive cleaning agents to the jar.</p>



Food Preparation Guide


Adjust the amount of ingredients based on actual needs or personal preference.

Food Type	Instructions	Ingredients	Precautions
Soy Milk	Place 70g of soybeans into the mixing cup, then add water up to the "maximum" water level.	Soy Bean	<ol style="list-style-type: none"> 1. Adding excessive water or soybeans may cause overflow and affect the taste. 2. Do not open the lid to add ingredients while the product is operating to avoid the risk of burns.
Solid Food	Place 50g of ingredients into the mixing cup, then add water up to the "maximum" water level.	Rice, millet, pumpkin, lotus seeds, etc.	Do not add too many ingredients, as it may cause overflow and affect the taste.
Rice Cereal	Place 70g of rice into the mixing cup, then add water up to the "maximum" water level.	Rice paste, millet paste, pumpkin paste, etc.	
Porridge	Place 100g of rice into the mixing cup, then add water up to the "maximum" water level.	Rice, millet, cooked peanuts	—
Corn Juice	Place 150g of ingredients into the mixing cup, then add water up to the "maximum" water level.	Corn Kernels	
Fresh Juice	Do not add more than 300g of fruit, and ensure that the pieces are no larger than 3cm. Add water until it just covers the ingredients, ensuring the water level does not exceed the "maximum" scale line.	Watermelon, Apple, Pineapple, Mango, Lemon, Grape, Banana, Strawberry, Honeydew	<ol style="list-style-type: none"> 1. If the water level does not exceed the fruit, it will affect the blending effect. 2. Never exceed the maximum water level.

K Function Guide

Function	Instructions	Ingredients	Precautions
Boil	Add water, ensuring that the highest water level does not exceed the "maximum" scale line.	—	Do not add water beyond the maximum water level, and avoid opening the lid during the mixing process to prevent water splashing.
Warm	—	—	—
Preset	Refer to the ingredients based on the selected function.	—	—
Clean	Add water, ensuring that the highest water level does not exceed the "maximum" scale line.	Non-corrosive and Non-abrasive cleaning agent	—

K Using a Measuring Cup

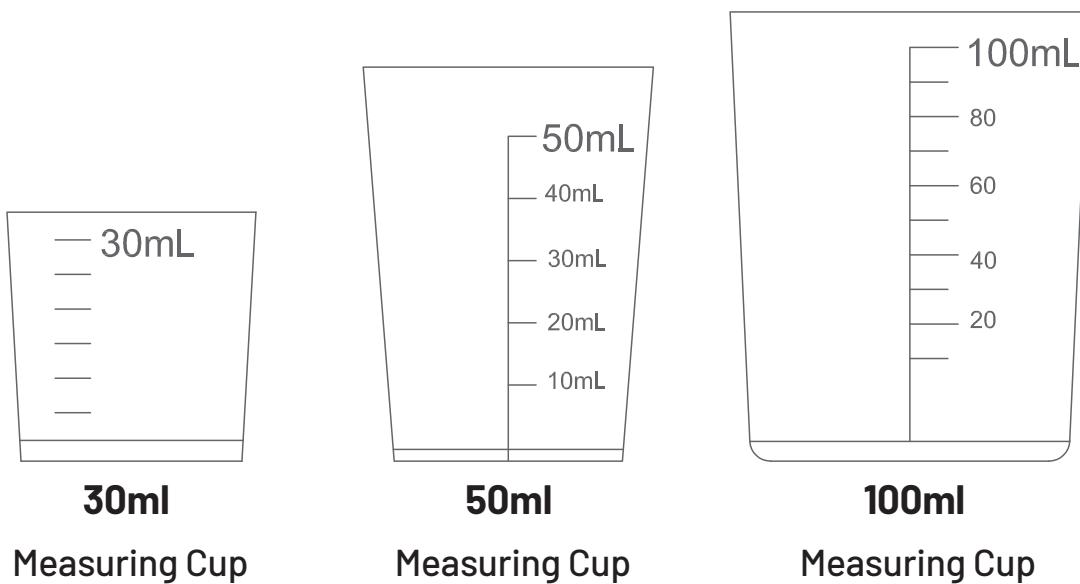

30ml

Measuring Cup

50ml

Measuring Cup

100ml

Measuring Cup

Soybeans about 20g	Soybeans about 40g	Soybeans about 80g
Rice about 24g	Rice about 47g	Rice about 95g
Corn about 17g	Corn about 34g	Corn about 68g

Basic Recipe

Soy Milk Preparation



Unsweetened soy milk

Ingredients

Soy Beans: 70g

Water 1000ml (Maximum)

Steps

Wash the soybeans, add all ingredients into the mixing bowl, and press the "Soy Milk" function to start.

Pumpkin Soup Preparation



Pumpkin Soup

Ingredients

Pumpkin 100g

Water 500ml

Rice 70g

Steps

Wash the pumpkin and rice, cut the pumpkin into small pieces, add all the ingredients, and press the "Rice Cereal" function to start.

Rice Porridge Preparation



Porridge

Ingredients

Rice 100g

Water 1000ml (Maximum)

Steps

Wash the rice, add all the ingredients, and press the "Porridge" function to start.

Fresh Juice Preparation



Apple Juice

Ingredients


Apple 200g

Water 300ml

Steps


Wash the apple and cut into small pieces, add all the ingredients, and press the "Fresh Juice" function to start.

Cleaning and Maintenance

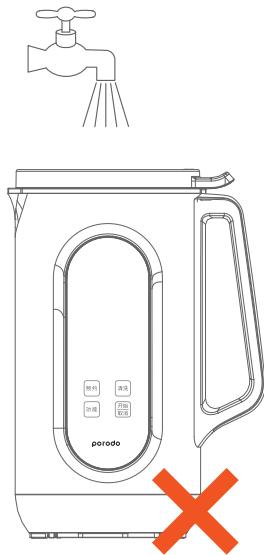


A. Incorrect Method

The main unit cannot be washed with water.

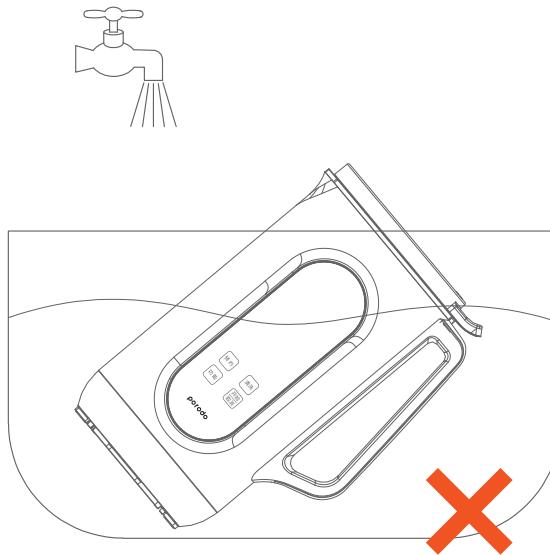

B. Incorrect Method

The main unit must not be immersed in water or any liquid for cleaning.

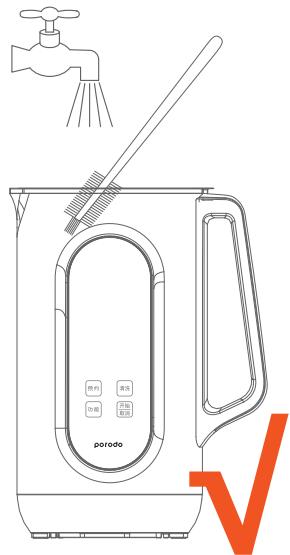

C. Correct Method

The inner parts and blades can be cleaned with a cleaning brush.

1. Remove the power cord from the machine, unplug it from the power supply, and wait for it to cool before cleaning.
2. The appliance socket must be wiped dry before the appliance is used again.
3. The main unit must not be immersed in water or any liquid for cleaning.
4. Do not use highly corrosive detergents for cleaning, and avoid using a wire brush to clean the inner parts.
5. Due to the water quality, water will naturally produce a mixture of calcium carbonate and magnesium carbonate during the heating process. Heavier

sediments can form scale at the bottom of the jar. Scale can increase the time needed to boil water and increase the noise when boiling. To clean scale, use edible vinegar (mix water and vinegar in a 2:1 ratio, boil it, and leave overnight. The next day, pour out the water, rinse with clean water, boil again, and then discard).

6. The inner parts and blades can be cleaned with a brush (Figure C).

Note: For first use, fill the machine with water to the highest water level, boil it, pour out, and rinse with clean water. Repeat once or twice to remove any dust that may have accumulated during production and storage.

7. The blades in the jar are very sharp and cannot be removed. Handle with care during cleaning. Never remove the blade yourself or touch any moving parts.

8. This product uses a high-speed motor, so intermittent sounds during crushing are normal.

Constituent Material Standards

Material Information		Standard
Mixing Jar	Stainless Steel 304	GB4806.9-2016
Blade and Shaft	Stainless Steel 304	GB4806.9-2016
Jar Lid Seal Ring, Mixing Jar Seal Ring	Food Grade Silicone	GB4806.11-2016
Jar Lid	PP	GB4806.7-2016
Measuring Cup	PP	GB4806.7-2016

Environmental Statements

1. This product complies with the "Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products."

2. During the environmentally friendly use period, consumers will not experience any leakage of harmful substances that could affect their health during normal

use, and they can use the product with confidence.

3. The environmental protection use period of our company's products is 10 years. The "environmental protection use period" is valid only when the product is used under normal conditions as described in this manual.

Part Name	Toxic and Harmful Substances or Elements					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Motor Component	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Circuit Board Component	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Heating Plate Components	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Plastic Parts	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Blade Parts	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Silicone Parts	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Power Cord	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

This form is prepared in accordance with the provisions of SJ/T 11364.



O: It means that the content of the toxic and hazardous substances in all homogeneous materials of the part is below the limit requirements specified in GB/T 26572.

X: It means that the content of the toxic and hazardous substance in a homogeneous material of the part exceeds the limit requirements specified in GB/T 26572.

Specifications

Rated Voltage	220-240V
Rated Frequency	50-60Hz
Capacity	1L
Heating Power	800W
Blending Power	200W
Power Plug	UK 3-Pin Plug

Troubleshooting

Problem and Error Code	Description	Solution
The indicator light does not turn on.	The power cord is not plugged in properly.	Plug in the power cord properly.
Function buttons do not work.	The jar lid is not aligned with the indicator line.	Close the cup lid as required and align with the indication mark.
The machine does not operate.	No function has been selected. Machine failure.	Select the corresponding function. Contact a service center and send it for repair.
E1	NTC short circuit.	Contact a service center and send it for repair.
E2	The jar lid is not closed, or the indicator mark is not aligned.	Close the cup lid as required and align with the indication mark.
E3	Machine dry burning, high-temperature fault code.	Cut off the power and turn off the device.
The ingredients does not get chopped and mixed.	Wrong function selected. Too few or too many ingredients. Machine failure.	Select the appropriate function. Add ingredients according to the recipe instructions. Contact a service center and send it for repair.
Residue stuck on the food jar.	The inside of the jar is not cleaned. Too much ingredients were added.	Clean the interior of the cup. Add ingredients according to the recipe instructions.

Note: If the issue persists, please contact a service center.

Before First Use

Note:

- a.** This product is equipped with an altitude adaptive function.
- b.** Please perform altitude adaptation before using it for the first time in high-altitude areas.

- 1.** Add water up to the water level mark (no ingredients needed).
- 2.** After powering on and in standby mode, press the "Start/Cancel" button for 3 seconds. When the digital display shows "hh," press the "Start/Cancel" button again to enter the water boiling program.

3. Once the water boiling process is complete, the intelligent altitude recognition will be finished, and the product will be ready for use.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](https://www.instagram.com/porodo)