

PORODO
LIFESTYLE



Porodo Lifestyle
Air-Popped Popcorn Maker

SKU: PD-LFST061

Table of Contents

Specifications	2
Features	2
Safety Instructions	2
Schematic View	3
Instructions for Use	4
Cleaning Instructions	4
Safety Notice	5
Disposal	5
Warranty	5
Contact Us	5

Specifications

Rated Voltage	240-220V
Rated Frequency	60/50Hz
Rated Power	1200W
Power Plug	UK 3-Pin Plug
Capacity	60g Corn Kernel
Net Weight	1.2KG
Product Dimension	260×145×260mm

Features

1. Popcorn is made without oil, making it a healthier option for those looking to control calorie intake or reduce fat consumption, providing a guilt-free snack.
2. The advanced air technology ensures that you can enjoy a fresh batch of popcorn in just 4-2 minutes, allowing for a fast and convenient snack preparation.
3. With an incredibly short 2 to 4 minutes prep time, you can have freshly popped popcorn ready in no time, making it perfect for quick cravings.


Safety Instructions

1. Always read these instructions before using the appliance.
2. Keep away from children, infants, and pets.
3. **Warning:** Do not immerse the appliance in water or other liquids, and avoid using it near wet conditions (e.g., water splashes). Never use with wet hands.
4. Do not use oil in the popping chamber of the popcorn maker.
5. Always unplug the appliance when it is not in use, while in storage, before attaching or removing accessories, and before cleaning.
6. If the appliance has been dropped or damaged, do not use it until it has been examined by a qualified professional.
7. Do not allow the mains lead to come into contact with hot objects. If the mains lead is worn or damaged, have it replaced immediately by a professional with an approved lead of the same type and size.

8. Use the appliance only for its intended purpose, and only with accessories supplied by the manufacturer or an authorized service provider.
9. Do not use the appliance outdoors, near hot gas or electric burners, or place it in a heated oven.
10. Do not operate the appliance underneath or near flammable materials such as curtains, drapes, or any other combustible materials.
11. Do not let the cord hang over the edge of a table or counter.
12. Never leave the appliance unattended while plugged in.
13. This appliance is intended for household use only and should not be used for commercial or industrial purposes.
14. Always ensure the popcorn maker has completely cooled down before storing it.
15. In the event that the power cord is damaged, it must be replaced by an authorized service agent, or a similarly qualified professional to prevent any potential hazards.

Caution: Do not attempt to repair or service this appliance yourself. Any servicing should be carried out by qualified personnel only.

Schematic View

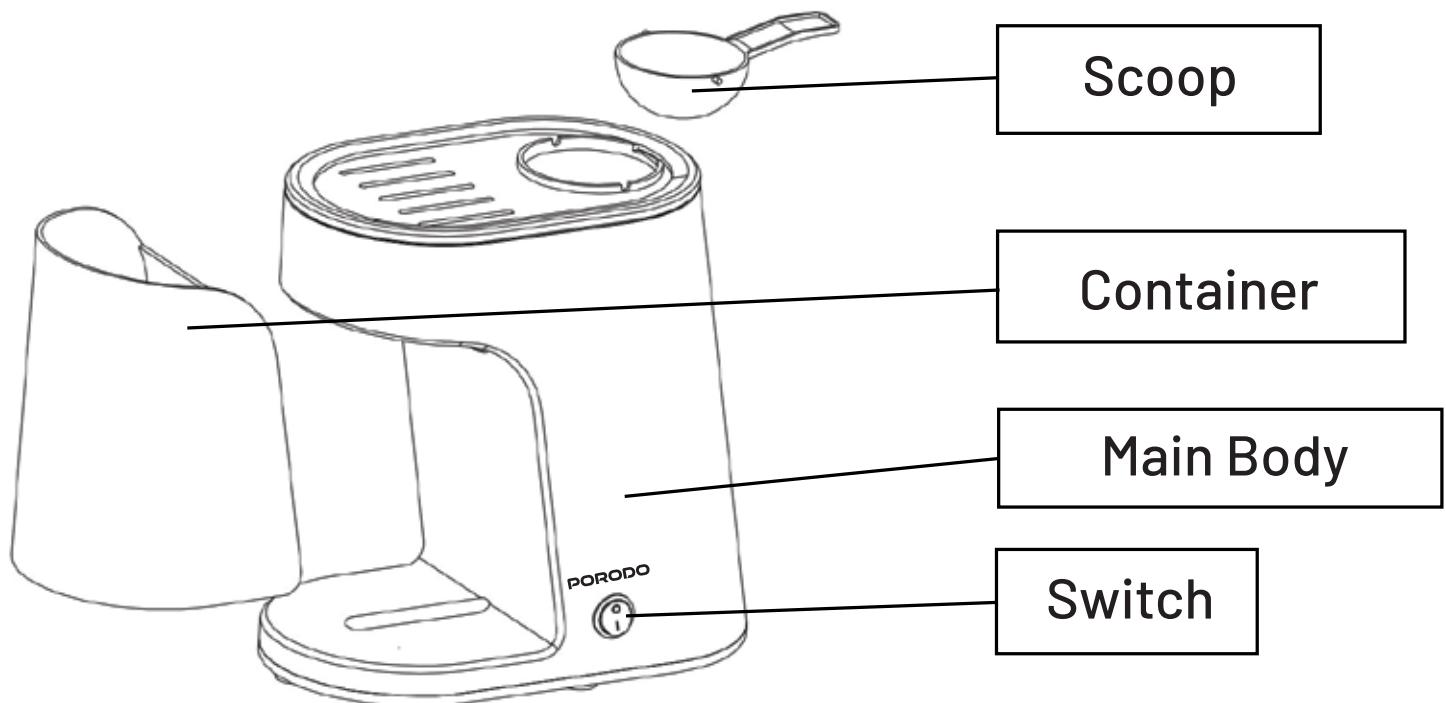

Instructions for Use

1. Carefully unpack the popcorn maker and remove all packaging materials before the initial use.

2. Thoroughly clean and dry the top cover before use.

Warning: Do not immerse the product in water. Do not expose to water. Use a slightly damp cloth.

3. Fill the measuring cup with up to 60g of corn (maximum capacity).

4. Pour the corn into the popping chamber.

5. After each use, replace the measuring cup into its designated position inside the top cover.

6. Close the lid and install the container.

7. Ensure that the measuring cup is placed back into its proper position in the cover.

8. Plug the appliance into the mains supply.

9. Set the power switch to the "I" position to begin operation.

10. Never remove the measuring cup while popping is in progress.

11. Once the popping has stopped, return the power switch to the "0" position.

Note: Before preparing another batch of popcorn, ensure that any unpopped kernels are removed from the popping chamber.

12. For optimal results, use fresh corn kernels. Once a packet of corn kernels is opened, store any remaining kernels in an airtight container in the refrigerator.

Warning: Allow the appliance to cool down for at least 10 minutes before using it again.

Cleaning Instructions

1. To clean the outer surface of the popcorn maker, use a soft damp cloth and dry it with a towel.

2. Avoid using abrasive creams, steel wool, or scouring pads. Ensure the appliance is unplugged before cleaning.

3. Wipe the interior of the popcorn maker with a dry cloth, taking care not to allow any water into the popping chamber, as this could damage the appliance.

4. Detach all removable parts and clean them thoroughly with warm, soapy water at regular intervals.

Safety Notice

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental abilities, or those lacking experience and knowledge, unless supervised or instructed on its use by a person responsible for their safety. Children should always be supervised to ensure they do not play with the appliance.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net
Website: **porodo.net**
Service Support: **support@porodo.net**
Instagram: **porodo**