

PORODO
LIFESTYLE



Porodo Lifestyle
Portable Washer
with Dry Function


SKU: PD-LFST064-WH

Table of Contents

Schematic View	2
Features	2
Specifications	3
Warning	3
Instructions for Use	3
Drying Function	4
Safety Precautions	4
Package Contents	5
Using Pressing Tablets	5
Installation Instructions	6
Preparation Before Washing	6
Warranty	7
Contact Us	7

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Schematic View

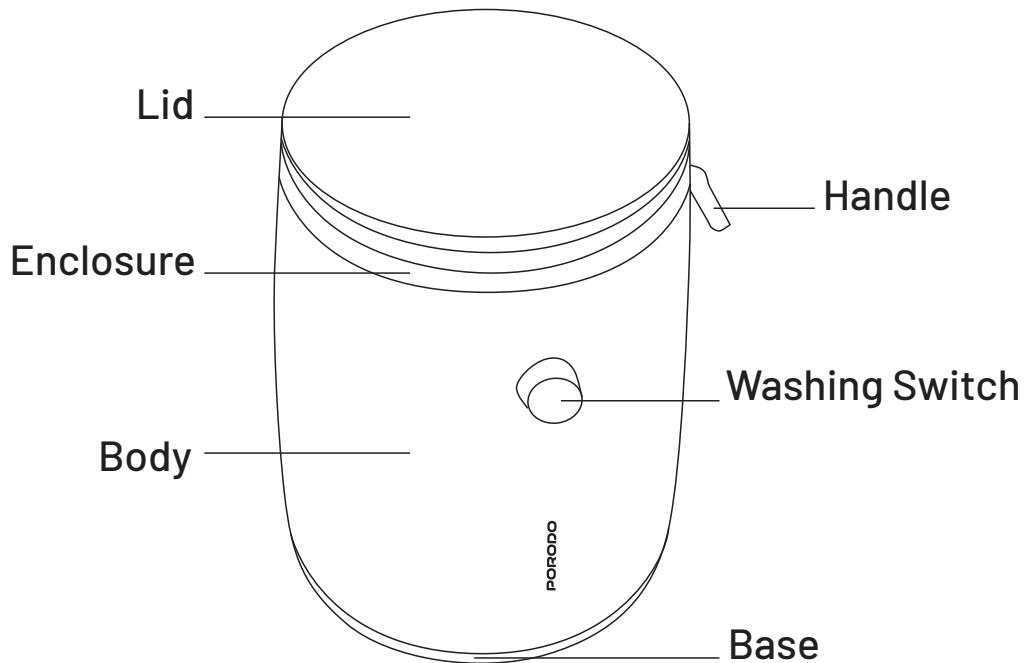

Features

1. This compact unit offers both washing and drying capabilities, providing a complete laundry solution that saves space.
2. The appliance operates efficiently with a low power consumption, featuring a washing power of 90W and a drying power of 110W, ensuring energy efficiency while maintaining peak performance.
3. Designed to mimic hand washing, this machine offers a gentle wash cycle that effectively cleans while being gentle on fabrics, making it ideal for delicate clothing.
4. The mini single barrel washing machine boasts a fashionable design with a high-quality plastic shell that is durable, rust-resistant, and affordable. Its small size and ease of movement make it perfect for saving water, electricity, and space.
5. Ideal for individuals or families needing to wash small items separately to prevent cross-contamination, it ensures better sanitation and environmental protection.

Specifications

Rated Voltage	110-240V
Rated Frequency	50Hz
Rated Power	90W (Washing), 110W (Tumble Dry)
Capacity	1.5L
Power Plug	3-Pin UK Plug

Warning

1. Ensure the product is placed on a hard, flat surface. The area must be dry to prevent water ingress that could damage the motor.
2. Always supervise children near the washing machine to prevent accidents.
3. Only use low-foaming detergents and washing powders. Keep the area around the washing machine clear to avoid accidents.
4. If the power cord is damaged, stop using the product and refer the product to an authorized service professional.
5. Do not rinse down heavy or bulky items.
6. Avoid using the product on carpeted areas. Ensure the bottom vent is not obstructed.
7. Always unplug the machine after washing to ensure safety.

Instructions for Use

[A] Initial Use

Note: This mini washing machine is designed for small items such as socks and underwear.

You may notice a slight odor when you first use the machine. This is from the motor and is normal. It should disappear after three to five uses and is not harmful.

[B] Washing Operation

1. Connect one end of the water inlet pipe to a faucet and the other end to the washing

machine's water inlet. Attach the drainage pipe securely.

2. Fill the machine with water according to the load size to ensure clothes move freely. Avoid using water hotter than 50°C to prevent damage to the machine's plastic components.

3. Add a suitable amount of detergent.

4. Close the machine's lid, plug in the appliance, and set the timer by turning the dial to the required washing time.

5. The machine will stop automatically once the washing is finished.

6. Lift the drain pipe to start draining the used water. Once drained, lower the pipe to stop the flow.

7. Avoid putting your hands inside the machine during operation to prevent accidents.

Elevate the drain pipe to prevent water from escaping.

Lower the drain pipe to allow the water to drain out.

Drying Function

1. After washing, lower the drain pipe to release the water from the bucket. Ensure your hands remain clear of the bucket to avoid accidents.

2. Arrange the clothes flat and evenly within the drying bucket. Ensure they align with the wave wheel's positioning slot. Once in place, close the lid, set the program knob to the desired drying time by turning it counterclockwise, and start.

3. Ensure clothes are laid flat and pressed down with cloth pressing aids to prevent uneven loading and reduce vibrations during drying.

4. Once the drying cycle is complete and the bucket has stopped spinning, open the lid, rotate the bucket clockwise to unlock, and remove the clothes.

Note: Due to the appliance's design, slight residual moisture in the clothes is normal. They may require additional hand-wringing.

Safety Precautions

1. When disconnecting the plug, hold it securely and pull. Do not pull the cord.

2. Avoid placing heavy objects on the cord and use a leakage protector if possible.

3. If the power cord or plug is damaged, contact the professional service agents.

4. The washing machine should be connected to a separate, dedicated outlet that

meets safety standards and is properly grounded to prevent electrical hazards.


- 5.** Do not use flammable substances like gasoline, kerosene, or alcohol for cleaning, as they pose a fire risk.
- 6.** Avoid washing items such as down-filled products that could be damaged or are not designed for washing with machines.
- 7.** Delicate garments may be deformed during washing. Select the appropriate wash settings to minimize damage.
- 8.** Do not install the washing machine in bathrooms or damp areas where it can be exposed to gas fumes, steam, or direct sunlight, as this can cause poor insulation and overheating.
- 9.** Do not attempt to disassemble, repair, or alter the machine yourself. Avoid placing heavy objects on the machine.
- 10.** Keep away from children, infants, and pets.
- 11.** Prevent children from playing with the washing machine, which can be hazardous. Ensure young children are supervised to prevent accidents.
- 12.** Avoid inserting your hands into the machine while it is operating to prevent injuries.

Package Contents

- 1.** Portable Washer
- 2.** Inlet Pipe


Using Pressing Tablets

- 1.** Clothes pressing tablets are located within the drainage section of the washing machine. During the draining process, place the clothes evenly inside the drum and cover them with the pressing tablet.
- 2.** Ensure the clamping foot of the pressing tablet is securely inserted into the designated grooves in the basket to keep it in place during operation.
- 3.** The pressing tablets are made of plastic. Handle them carefully to avoid bending or breaking, as damage may impact their functionality.

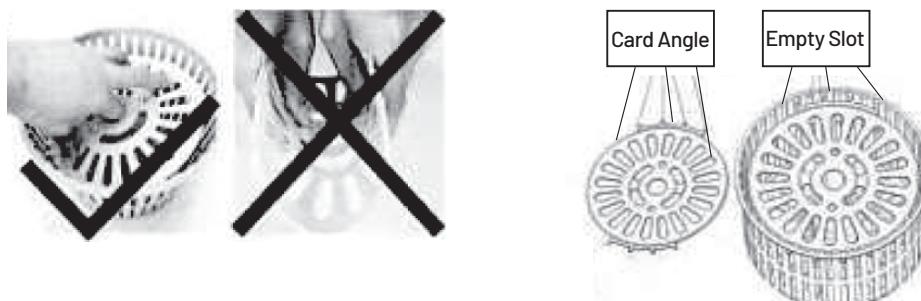

K Installation Instructions

Place the washing machine on a stable, flat surface. Ensure the ground is firm, with a maximum allowable inclination angle of 2 degrees to maintain proper functionality.

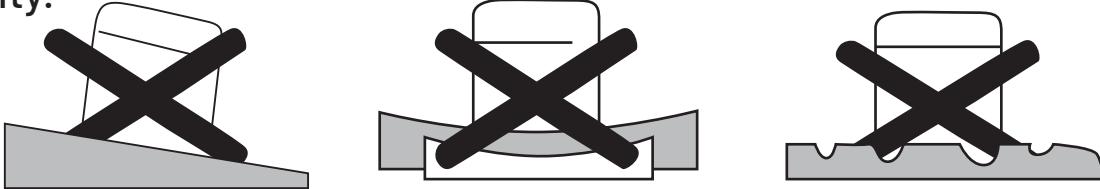

Ensure the washing machine is positioned at least 5 cm away from the wall to minimize noise during operation.

1. Do not modify or replace any parts of the washing machine.
2. Protect the power cord from damage to prevent electric shocks and other hazards.
3. Avoid washing or cleaning the control panel or motor after use, as moisture may cause electrical malfunctions or leakage.
4. Ensure the power socket is correctly wired and grounded. The live (L), neutral (N), and earth (E) wires must be connected properly.
5. Do not stretch, bend, or compress the drain pipe to avoid cracks or water leakage.
6. The height of the drainage pipe should not exceed 15 cm above the fence or be lower than 3 cm from the drainage outlet.
7. For safe operation, securely connect the grounding wire to the main grounding electrode of the building.
8. Never insert your hands into the drum while the machine is operating to prevent injury.
9. Keep the air vent at the bottom of the machine clear of obstructions such as carpets or packaging materials to ensure proper ventilation.

K Preparation Before Washing



Remove all items such as keys, pins, coins, or similar objects from the clothes before washing to prevent damage to the machine or clothing.



When washing fluffy garments, turn them inside out to preserve their texture and maintain optimal cleaning performance.



Garments containing chemical reagents should not be washed in the washing machine to prevent damage or safety risks.



For delicate or high-end garments, it is recommended to place them in a washing net bag for added protection during the washing process.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty



Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: [porodo](#)