

PORODO
LIFESTYLE



Porodo Lifestyle
High-Pressure Washer
with Dual Mode-Tank and Hose

SKU: PD-LFST066

Table of Contents

Package Contents	2
Specifications	2
Product Overview	3
Battery Installation	3
Connector and Filter Installation	4
Instructions for Use	4
Operation Precautions	5
Troubleshooting	5
Warning	6
Battery Safety Precautions	7
Disposal	7
Warranty	8
Contact Us	8

Package Contents



2



1



3



4



5



6



7



8



9



10

- | | |
|--------------------------|----------------------|
| 1. Machine body | 6. Water Filter |
| 2. Multi-function Nozzle | 7. 5m Hose |
| 3. Li-ion battery | 8. Hose Connector |
| 4. Li-ion battery | 9. Nylon Storage Bag |
| 5. Battery Charger | 10. Soap Bottle |

Specifications

Motor Type	3820 Brushless Motor
Motor Speed	18000RPM
Voltage	21V
Motor Power	200W
Battery Capacity	3000mAh
Water Pressure	1.6 to 1.8MPa
Flow Rate	4.2 L/min
Product Weight	3.4kg
Dimension	13.5×28.8×34.5cm

Product Overview

1. Power ON/OFF Button
2. Removable filter nipple connector
3. Hose Connect Position



Battery Installation

1. Red Light On: Indicates that the device is currently charging.
2. Green Light On: Signifies that the battery is fully charged and ready for use.



Connector and Filter Installation



Failing to install the filter will lead to damage to the internal components of the machine and may prevent water from being dispensed.




Instructions for Use

1. Insert the nozzle, press down, and then rotate it 90 degrees clockwise to securely lock it into place.

2. To remove the nozzle, press down on it and rotate 90 degrees counterclockwise, then gently pull out the nozzle.

Note: The installation position for the soap bottle is identical to that of the spray nozzle.

3. Insert the connector into the interface, then rotate it to lock securely.

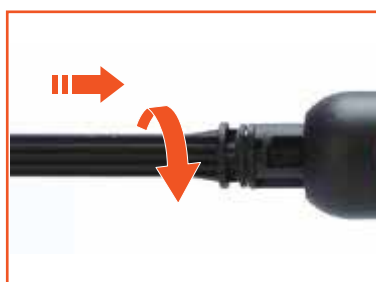

1



2



3

- 4. Insert the water hose into the connector, tighten the thread to ensure a firm connection, and secure the hose.
- 5. Properly insert the battery into the device's body and make sure it snaps firmly into place.
- 6. After using the water spray, remove the nozzle, insert the soap bottle in the same position, and proceed to spray the car with soapy water.



4



5



6

Operation Precautions

- 1. During the initial start-up, once assembly is complete, initiate operation by holding the trigger for 15-10 seconds to purge any air from the water inlet pipe. If water does not begin to flow, verify that the water inlet end is properly connected.
- 2. After use, run the machine empty for a few seconds to expel any remaining water, preventing oxidation and accumulation of dirt. Store the machine in a dry and cool environment when not in use.

Troubleshooting


Problem	Possible Cause	Solution
The machine is running, but the pipes are not drawing water.	The machine is positioned too high above the water surface.	The machine is positioned too high above the water surface.
	The filter is clogged.	The filter is clogged.
	The water pipe is either not connected properly or is broken.	The water pipe is either not connected properly or is broken.
	The air inside the machine has not been exhausted.	The air inside the machine has not been exhausted.

The battery is unable to charge.	The lithium battery or charger is broken.	The lithium battery or charger is broken.
The outlet water pressure has suddenly decreased.	The spray nozzle is blocked by debris.	The spray nozzle is blocked by debris.
The machine fails to start.	The battery is not installed properly.	The battery is not installed properly.
	The battery is out of power.	The battery is out of power.
	The battery is broken.	The battery is broken.
Water is leaking from various directions, including the back.	The spray nozzle head is not rotated to the corresponding angle.	The spray nozzle head is not rotated to the corresponding angle.
The water pressure from the machine is inconsistent.	There is air in the pump.	There is air in the pump.
	The machine is in low pressure mode.	The machine is in low pressure mode.
The machine stops automatically.	The battery is out of power (repeated).	The battery is out of power.
There are water leaks inside the machine.	Incoming water contains chemical acidity or is not assembled correctly.	Incoming water contains chemical acidity or is not assembled correctly.

Warning



To avoid water back spray, ensure that the arrow is pointing exactly at the number indicated.

 **1.** Batteries contain lithium; for environmental protection, dispose of waste batteries through classified recycling and avoid random littering.

 **2.** Do not direct water spray from the machine at people or electrified items.

 **3.** Keep lithium batteries away from sources of fire.

Battery Safety Precautions

- 1.** Do not expose the battery pack to direct sunlight or other heat sources to prevent overheating.
- 2.** Ensure the positive and negative poles of the battery are correctly connected and keep the battery away from metal objects to avoid short circuits.
- 3.** Avoid dropping the battery or subjecting it to mechanical shocks.
- 4.** Keep the battery clean and dry. If contaminated with dust or water, wipe it off with a clean cloth. Avoid using a hair dryer or heater for drying.
- 5.** Do not overcharge the battery; monitor the charger's indicator light where red indicates charging and green indicates fully charged.
- 6.** If not using the machine for a long time, periodically charge and discharge the battery to ensure optimal performance, ideally 1-2 times a month.
- 7.** Only use chargers and battery packs provided by the manufacturer to prevent damage or injury.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**