

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**  
**Dual Mode-Tank and Hose**  
**High-Pressure Washer**

SKU: PD-LFST067

# Table of Contents

Product Overview	2
Specifications	2
Battery Installation Guide	3
Package Contents	3
Connector and Filter Installation	4
Instructions for Use	4
Operation Precautions	5
Troubleshooting	5
Battery Safety Precautions	7
Disposal	7
Warranty	8
Contact Us	8

## Product Overview

- 1. Power ON/OFF Button
- 2. Removable filter nipple connector
- 3. Hose Connect Position



## Specifications

Motor Type	755 Brushed Motor
Motor Speed	18000RPM
Voltage	21V
Motor Power	200W
Battery Capacity	3000mAh
Water Pressure	1.6 to 1.8MPa
Flow Rate	4.2 L/min
Product Weight	3.2kg
Dimension	13.5×28.8×34.5cm

# Battery Installation Guide



- 1. Red Light On: Indicates that the battery is currently charging.
- 2. Green Light On: Signifies that the battery is fully charged.



1



2

# Package Contents



2



1



3



4



5



6



7



8



9



10

1. Machine body
2. Multi-function Nozzle
3. Li-ion battery
4. Li-ion battery
5. Battery Charger
6. Water Filter
7. 5m Hose
8. Hose Connector
9. Nylon Storage Bag
10. Soap Bottle

## Connector and Filter Installation



Failing to install the filter will cause damage to the internal parts of the machine and result in no water being dispensed.




## Instructions for Use

1. Press the nozzle in, press down and rotate it 90 degrees clockwise to lock it into place.
2. Press down on the nozzle and rotate it 90 degrees counterclockwise, then pull out the nozzle.
3. Insert the connector into the interface, then rotate to lock it securely.



1

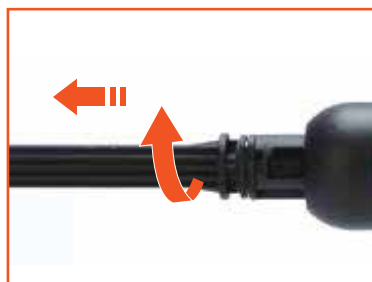

2



3

4. Insert the water hose into the connector, tighten the threading to ensure a secure fit.
5. Insert the battery correctly into the body of the device and ensure it snaps firmly into place.
6. After spraying water, remove the nozzle, insert the soap bottle, and proceed to spray the car with soapy water.



4



5



6

## Operation Precautions

1. For initial start-up, after completing the assembly, initiate the machine and hold the trigger for 15-10 seconds to expel any air trapped in the water inlet pipe. If no water flows, ensure the water inlet end is properly connected.
2. Run the machine empty for a few seconds after use to clear any remaining water, which helps prevent oxidation and accumulation of dirt. Store the machine in a dry and cool place when not in use.

## Troubleshooting


Problem	Possible Cause	Solution
The machine is operating, but the pipes are not drawing water.	The machine is positioned too high above the water surface.	Lower the machine to within 1.5 meters of the ground.
	The filter is clogged.	Remove and clean the filter.
	The water pipe is either not connected properly or is broken.	Check and secure the water pipe connection.
	The air inside the machine has not been exhausted.	Direct the nozzle upward to facilitate the discharge of air.


The battery is unable to charge.	The lithium battery or charger is broken.	Replace the faulty lithium battery or charger.
The outlet water pressure has suddenly decreased.	The spray nozzle is blocked by debris.	Use a tool to remove any blockages in the nozzle.
The machine fails to start.	The battery is not installed properly.	Reinstall the battery correctly in its place.
	The battery is out of power.	Charge the battery or replace it with a new one.
	The battery is broken.	Install a new battery.
Water is leaking from various directions, including the back.	The spray nozzle head is not rotated to the corresponding angle.	Ensure the nozzle head is rotated to the correct position.
The machine's water pressure is inconsistent.	There is air in the pump.	Properly connect the water hose.
	The machine in low pressure mode.	Switch to second gear to increase water pressure if the machine is in normal status.
The machine stops operating automatically.	The battery is out of power (repeated).	Recharge the battery.
Water is leaking inside the machine.	Incoming water contains chemical acidity or is not assembled correctly.	Avoid using water sources that contain chemical acidity.


## Warning



To avoid water back spray, ensure that the arrow is precisely aligned with the designated number.

 **1.** Batteries contain lithium. To protect the environment, dispose of waste batteries through proper recycling channels, not by random littering.

 **2.** Do not direct the machine's water spray at people or electrified items to prevent accidents.

 **3. Battery Safety:** Store lithium batteries away from any sources of fire to avoid risks of explosion or fire.

## **Battery Safety Precautions**

- 1.** Do not expose the battery pack to heat sources or direct sunlight as high temperatures can cause damage.
- 2.** Avoid incorrect connections of the positive and negative poles of the battery and keep it away from metal objects to prevent short circuits.
- 3.** Avoid dropping the battery or subjecting it to mechanical shock to maintain its integrity.
- 4.** Keep the battery clean and dry. If dusty or wet, wipe it with a clean cloth. Do not use hair dryers or heaters to dry the battery.
- 5.** When not using the machine, avoid overcharging the battery. Monitor the charger's indicator light; red indicates charging, and green indicates fully charged.
- 6.** If the machine is not used for an extended period, periodically charge and discharge the battery (recommended 1-2 times a month) to ensure optimal performance.
- 7.** Only use chargers and battery packs that are factory-configured to avoid risks of machine failure or personal injury.

## **Disposal**

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**