

**PORODO**  
**LIFESTYLE**



**Porodo Lifestyle**  
**T-Blade**  
**Hair and Beard Trimmer**  
SKU: PD-LFST154

# **Table of Contents**

Important Notes	2
Schematic View	3
Detaching and Attaching the Trimmer Blade	4
Specifications	5
Attaching and Detaching Limit Combs	5
Steps for Use	7
Travel Lock	8
Cleaning and Maintenance	8
Charge Your Trimmer	9
Battery Disposal Instructions	9
Disposal	10
Warranty	10
Contact Us	10

## Important Notes

Please read the following safety guidelines carefully and adhere to all recommended safety precautions:

### **Warning:**

1. This product is not intended for use by young children or individuals with reduced physical, sensory, or cognitive abilities, or those who lack experience and knowledge. However, it can be used by such individuals if they are under the supervision or instruction of a responsible person to ensure it is used safely.
2. Always keep the body of the trimmer dry.



**Note:** The symbol indicates that the trimmer should not be cleaned under running water.

3. The product contains a built-in rechargeable battery. Do not drop it into fire, avoid charging it in extremely hot conditions, and never use it in places with high temperatures.


### **Notice**

1. Do not drop or knock the product. If the product is damaged due to dropping or impact, do not use it again.
2. Do not attempt to repair or disassemble the product yourself.
3. If the product does not operate correctly, please contact the seller or an authorized service center for inspection.
4. The trimmer blade has a limited service life. For optimal performance, it is recommended to replace the blade regularly.


## Schematic View

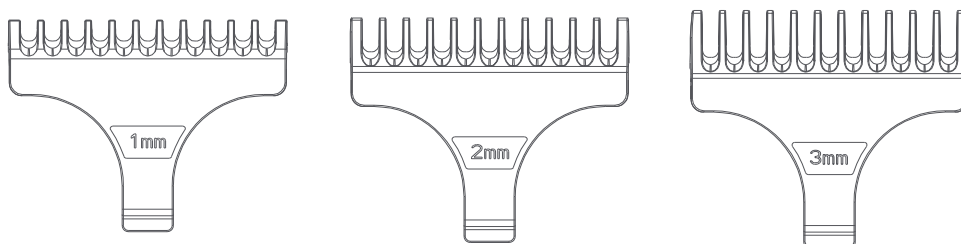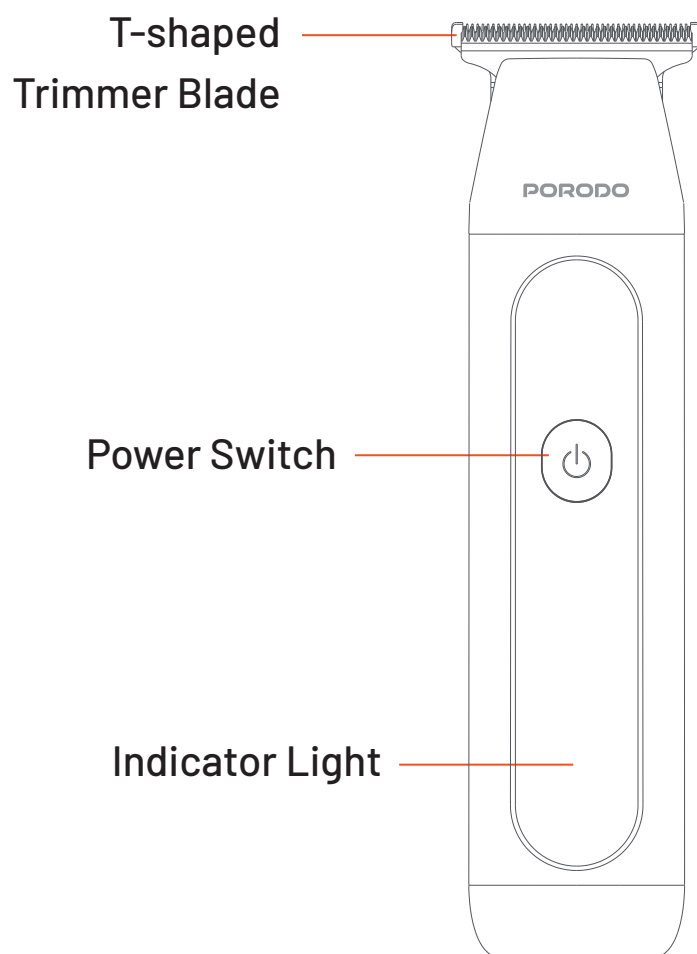


Guided Combs (3-1mm)

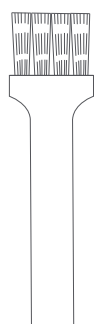

Cleaning Brush

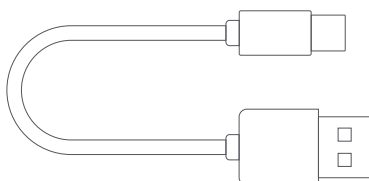


Charging Cable

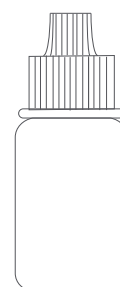


Lubricant Oil

## Detaching and Attaching the Trimmer Blade

To detach the trimmer blade, gently push upward against the teeth and lift it off the handle.

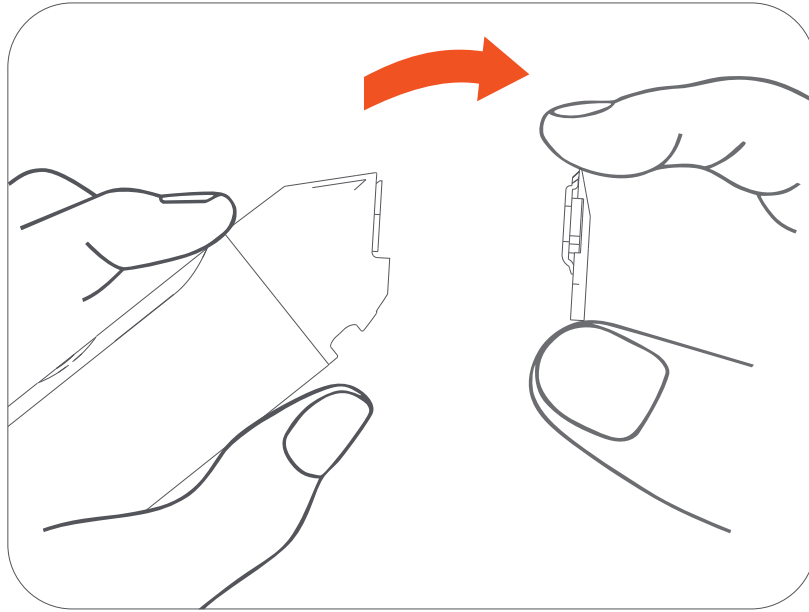

To attach the trimmer blade, align the lug with the guiding slot at the front of the trimmer, then press the back of the blade onto the trimmer until it clicks into place.

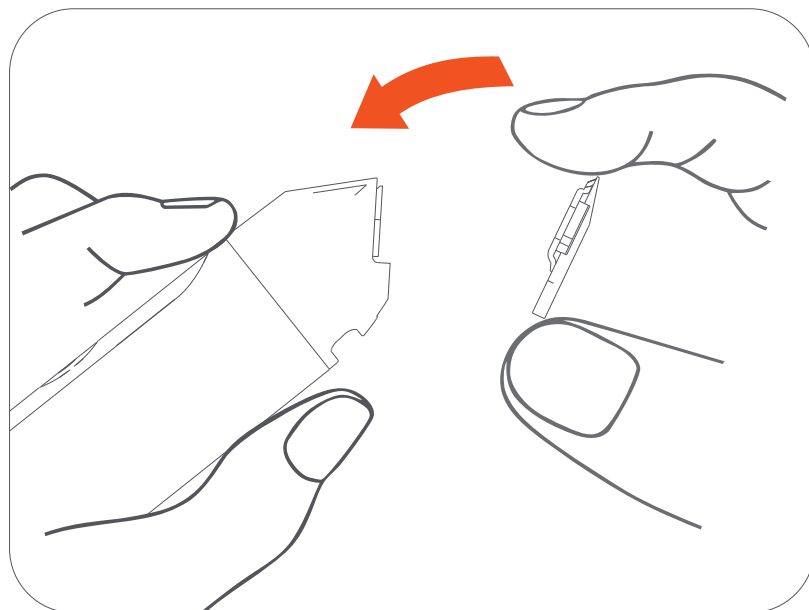


## Specifications


Input	5V/1A
Rated Power	8W
Battery Capacity	1200mAh
Working Time	120 Minutes
Charging Interface	USB-C
Motor Speed	6000-8000RPM
Model Number	LFS154

## Attaching and Detaching Limit Combs

To attach a limit comb to the trimmer blade, align the front portion of the comb with the teeth of the blade. Gently slide it onto the blade, then apply pressure to the center of the comb using your fingers or the palm of your hand until it clicks into place.

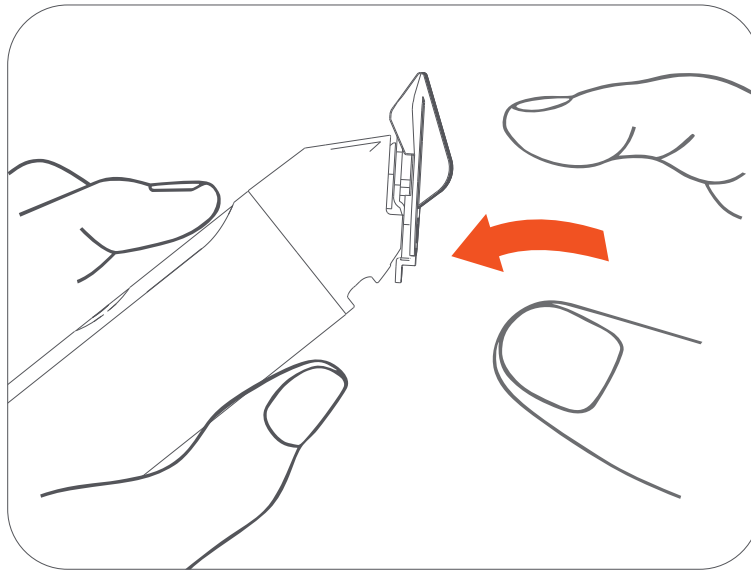

To detach the limit comb, carefully pull the back section of the comb off the trimmer, then slide it away from the blade.

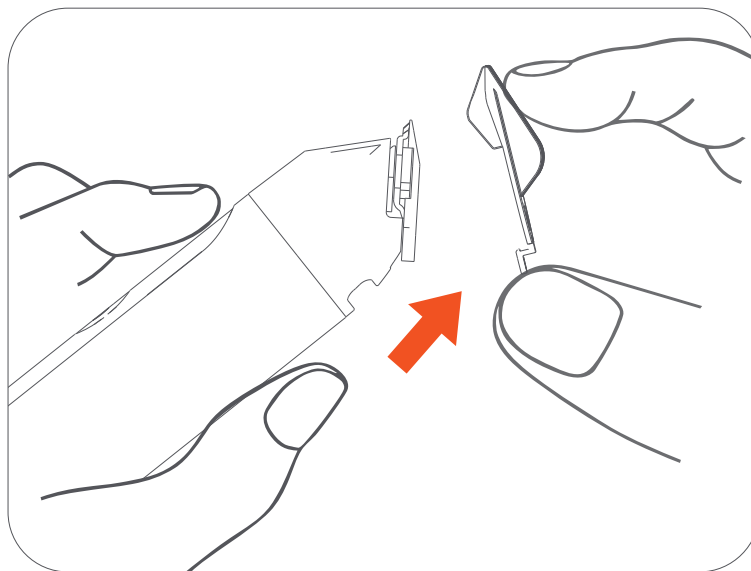

**Note:**

- 1.** Ensure the trimmer is turned off before detaching the blade. Press the power switch to activate the travel lock for added security.
- 2.** To prevent the trimmer blade from falling or breaking, use one hand to push the blade and the other hand to catch it while detaching.

## Steps for Use

To achieve the best trimming results, ensure your hair is clean and smooth before beginning the trimming process.

### **Step 1:** Turn on and off the trimmer

Gently press the switch button to turn the trimmer on. Press it again to turn it off.

### **Step 2:** Trim your hair

**2.1** Install the T-type cutter head and select the appropriate T-type guided comb height.

**2.2** Hold the trimmer firmly, ensuring the bottom of the guided comb touches the scalp. Move the trimmer slowly forward, against the direction of hair growth, from front to back.

**2.3** Trim the hair on the sideburns and the back of the head by moving the trimmer from bottom to top until the desired length is achieved. If excess hair accumulates in the hair collection area during trimming, detach the trimmer blade and clean it with the cleaning brush.

### **Step 3:** Trim the Beard / Moustache Line

Gently place the trimmer blade against the skin and trim slowly from the edge of the beard or moustache to achieve the desired shape.

### **Notice:**

Improper use of the product may damage the blade. Before use, ensure that the blade is in good condition. If the blade is damaged, cease using the trimmer immediately.



## Travel Lock



1. The trimmer features a travel lock function to prevent it from accidentally turning on while in your luggage.
2. To activate the travel lock: With the trimmer turned off, press and hold the Power Switch for three seconds. The indicator light will blink to confirm the activation.
3. To deactivate the travel lock: Press and hold the Power Switch for three seconds while the trimmer is locked, and the trimmer will be unlocked.

## Cleaning and Maintenance

1. Turn off the trimmer and detach any guided comb or trimmer blade.
2. Rinse the guided comb and trimmer blade under warm water.
3. Use the included cleaning brush to clean the hair collection area and trimmer blade.

### Note

1. This trimmer is not waterproof; avoid rinsing the body of the device with water.
2. After cleaning, gently shake off any excess water and allow all components to air dry completely.
3. Regularly lubricate the trimmer blade with oil to maintain its performance.

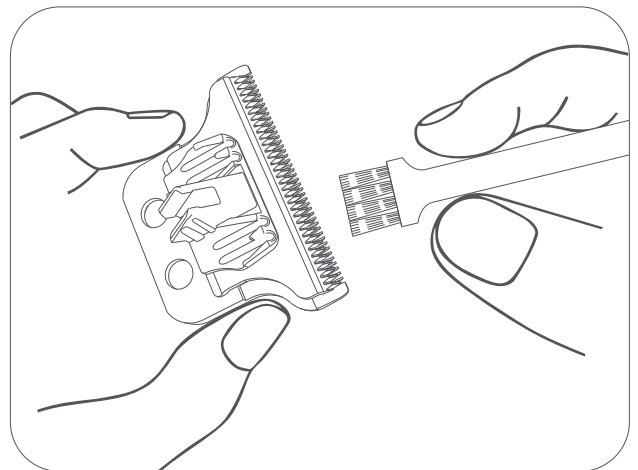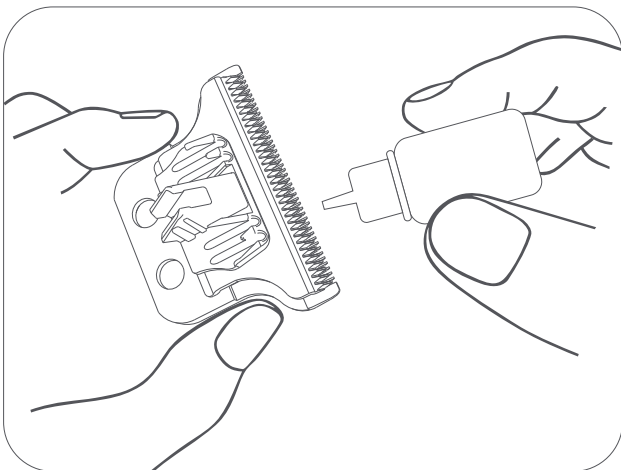


## Charge Your Trimmer

1. Before charging, ensure the trimmer is turned off. When the battery is low, the red charging indicator will blink to alert you to charge it.
2. While charging, the red indicator light will blink, and the trimmer will be fully charged in approximately 70 minutes. The white indicator light will remain on throughout the charging process.
3. Alternatively, you can connect the charging cable to both the trimmer and a USB port to charge.

### Note:

1. If the trimmer is not to be used for an extended period, ensure it is fully charged at least once every six months.
2. After 70 minutes of charging, the trimmer provides approximately 90 minutes of cordless trimming time.

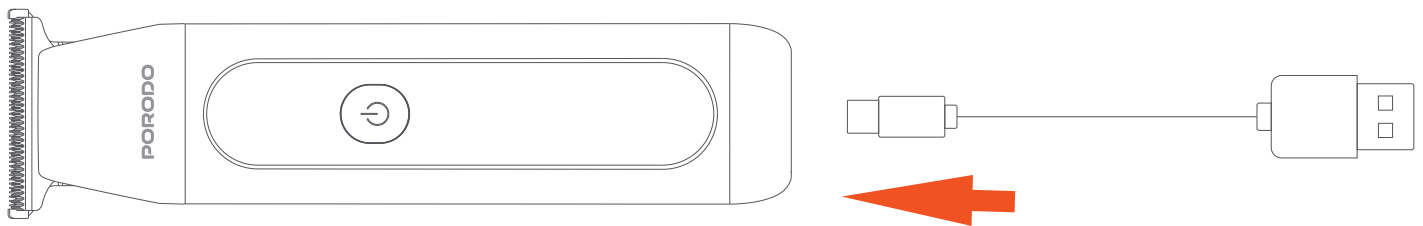

## Battery Disposal Instructions

1. Ensure the battery is removed from the appliance before disposal.
2. Make sure the appliance is powered off before removing the battery.
3. Dispose of the battery in a safe and environmentally responsible manner.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**