



Porodo Soundtec
TUNEPOD with
Speaker, MP3 Player, and FM Radio

SKU: PD-STWLEP036

Table of Contents

Attention	2
Main Buttons	2
Instructions for Use	3
[A] Power On/Off	3
[B] Charging	3
[B.1] Charging through Adapter	3
[B.2] Charging via Computer USB	3
Connecting to PC	4
Music Playback	4
Recording Instructions	4
Additional Menu Items	4
OTG Functionality	5
Bluetooth Connection	5
Specifications	5
Warranty	6
Contact Us	6

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference. This manual includes an introduction to the product, usage instructions, system settings, and safety precautions.


Attention

This manual is designed to ensure the proper use of this device and to help maintain optimal performance. Please read carefully and follow these guidelines:

1. Do not strike the device.
2. Avoid contact with benzene or other harsh chemicals.
3. Keep the device away from strong magnetic or electric fields.
4. Do not expose the device to water or high temperatures.
5. Do not disassemble, repair, or modify the device yourself.
6. Avoid using the MP3 player and earphones while cycling, driving, or participating in other activities that require attention for safety.
7. Do not listen at high volumes to protect your hearing.
8. Do not expose the battery to direct sunlight, fire, or excessive heat.

Main Buttons

1. Power Button
2. A-B Button
3. Microphone Button
4. Volume +
5. Volume -
6. Headphone Hole
7. Type-C
8. TF Port
9. LCD
10. Home button
11. Loudspeaker

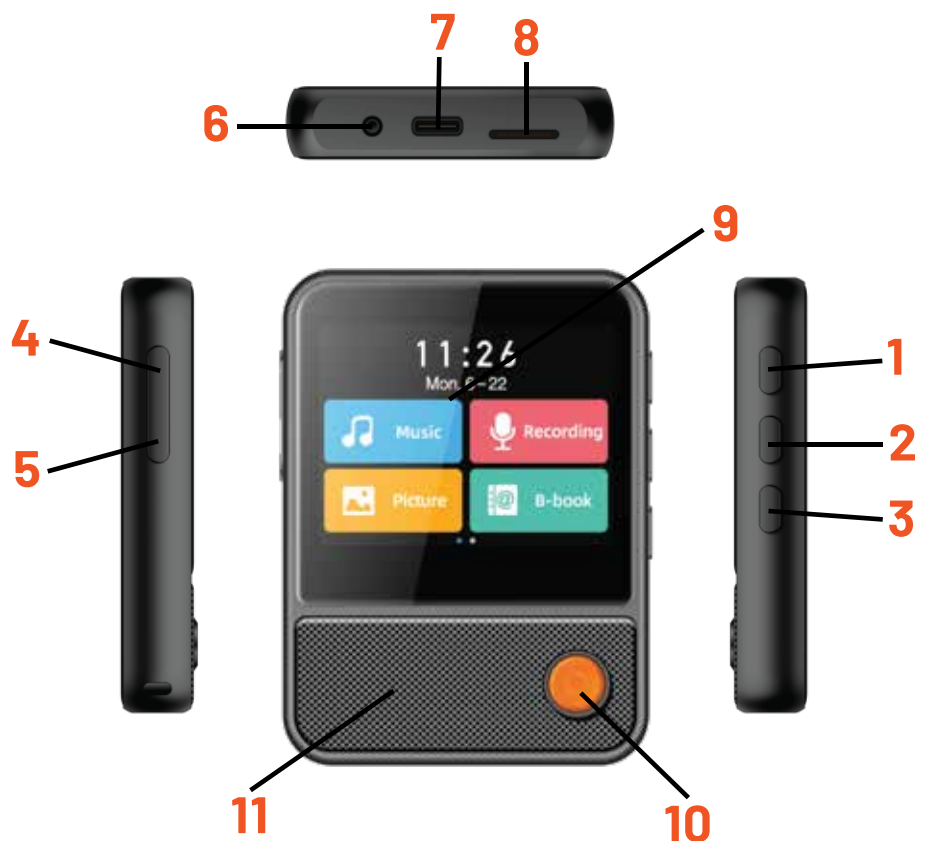

Instructions for Use

[A] Power On/Off

1. Press and hold the power button for 3 seconds to turn on the device. To turn it off, press and hold the power button for 3 seconds again.
 2. The player will automatically shut down after a period of inactivity, as specified in the user's shutdown timer settings.
- Note:** This function is disabled when the player is connected to a PC or charging.
3. Press the power button briefly to toggle the light on or off when the device is powered on.

[B] Charging

Check the remaining battery power after turning on the device. If the battery level is very low, charge it promptly to ensure normal operation. When the system enters a low battery state, it will display a low battery warning and automatically power off.

[B.1] Charging through Adapter

1. Connect the adapter to the power supply before charging.
 2. Insert one end of the USB cable into the adapter, and connect the other end to the USB (Type-C) port of the player to initiate charging.
 3. The player fully charges in approximately 3 hours under normal conditions.
- Note:** Use a 5V/1A DC power adapter that meets standards.

[B.2] Charging via Computer USB

1. Plug one end of the USB cable into a USB port on the computer.
 2. Connect the other end to the USB (Type-C) port on the player.
- Note:** The player can function as a mobile storage device while charging through a computer. However, charging via the computer USB interface may take longer than using an adapter.
3. When charging with a computer USB interface, note that the output capacity can vary between computers, which may affect charging time.
- Note:**
- a. For faster charging, it is recommended to charge the player while powered off.
 - b. During the charging process, a slight temperature increase in the charger and player is normal.

Connecting to PC

1. With the device powered on or off, connect it to the computer using a USB cable.
2. The device interface will prompt you to select the connection type: "Charging and Transmission" or "Charging and Playing."

Note: If no selection is made within 3 seconds, the system will default to "Charging and Transmission."

3. A USB connection icon will appear on the device interface, indicating a successful connection to the computer.
4. To safely disconnect, right-click the connection icon in the lower right corner of the computer screen and select "Safely Remove Hardware."
5. Alternatively, double-click the connection drive to activate the "Safe Eject" dialog box, then select "Exit Safely."

Music Playback

Select "Music" to access the menu, which includes options such as "Playing" "All Songs" "Favorites" and other settings and options.

Choose "Listening Play" to enter an additional menu, which also provides access to "Playing," "All Songs," "Favorites," and other options.

Recording Instructions

1. Select "Class Recording" to open the recording menu.
2. Press the lower left button to begin recording.
3. Press the lower left button again to pause, and press it once more to resume recording.
4. To finish the recording, press the lower right button.

Additional Menu Items

[A] Folder

Select "Folder" to access the next menu, where you can view information related to the TF card and the local file storage.

[B] FM Radio

Select "FM Radio" to open the menu, which includes options such as radio station, user radio station, manual tuning, automatic tuning, and FM recording.

[C] Tool

Select "Tool" to enter a menu that includes options for alarm clock, calculator, stopwatch, wallpaper settings, and other features.

[D] Setting

Select "Settings" to open the menu, which includes options for display settings, date and time, shutdown settings, information, format information, and additional options.

OTG Functionality

This device is compatible with Huawei, Oppo, Vivo, Samsung, and other mobile phones with OTG functionality for song transfers. For Oppo or Vivo devices, manually enable the OTG switch in Settings, then connect the phone to OTG download via USB cable for transmission.

Bluetooth Connection

The Bluetooth feature supports the connection to Bluetooth earphones. To connect, enable Bluetooth and search for nearby devices. When connecting to Bluetooth earphones, turn off the Bluetooth on your mobile phone first to prevent it from occupying the Bluetooth connection.

Note: Connection to mobile phone Bluetooth is not supported.

Specifications

Battery Capacity	800mAh
Speaker	1W 8Ω
Recharge Time	3h
Music Playtime	80h
FM Playtime	22h
Standby Time	133h

Video Format	AVI
Record Format	MP3, WAV
Image Format	JPG, BMP
E-Book Format	TXT
Display	TFT 320×240
TF Card	Up to 256GB (Not Included)
Audio Format	MP3, FLAC, AAC, WAV, APE, WMA
Product Weight	110g
Working Temperature	-5°C to 40°C
Product Size	13.3×59×78.8mm
Port	Type-C
Supported Languages	English (Default), Spanish, French, Japanese, Danish, Italian, Polish, Portuguese, Russian, Chinese

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**