



Porodo Soundtec

PRIMO Wireless Headphones

with ENC and Low-Latency Gaming Mode


SKU: PD-STWLEP038

Table of Contents

Schematic View	2
Features	2
Specifications	3
Pairing Instructions	3
Bluetooth Playback/Calling	3
Charging Instructions	5
Cautions	5
Battery Safety Notes	5
Warranty	6
Contact Us	6

Thank you for purchasing our wireless headphones. Please carefully read this user manual before using the product and retain it for future reference.

Schematic View

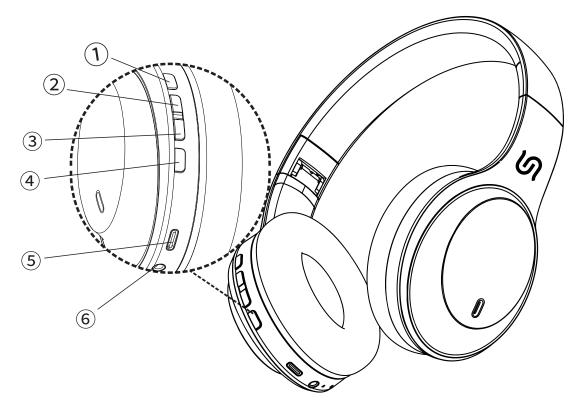

- 1. Pause/Play Music, Answer/End Calls, Voice Assistance
- 2. Increase Volume (+)/ Next Track
- 3. Decrease Volume (-)/ Previous Track
- 4. Power On/Off, Music/Gaming Mode Switch
- 5. Type-C Charging Port
- 6. 3.5mm Jack

Features

- 1. Equipped with a built-in lithium-ion battery and a Type-C charging port for efficient power management.
- 2. Features intelligent power saving that automatically shuts off the headphones if not paired within three minutes.
- 3. Supports Bluetooth calls and music for seamless wireless audio experience.
- 4. Bluetooth version 5.4+EDR for enhanced connectivity and audio quality.

Specifications

Battery Capacity	400mAh
Recharge Time	1.5h
Working Time	50h at %50 Volume, 44h at %100 Volume
Charging Port	Type-C
Bluetooth	V5.4
Transmission Distance	≥15M
Output Power	30mW
Driver Size	40mm
Impedance	2Ω
Sensitivity	3±103dB
Rated Input	5V/1A

Pairing Instructions


- 1. Press and hold the power key for 2 seconds to activate pairing mode, indicated by alternating blue and red LED flashes.
- 2. Enable the Bluetooth search mode on your device and select the headset model name "PD-STWLEP038".
- 3. The blue LED will turn off once pairing is successful.
- 4. Your device will display a Bluetooth icon and the battery level of the headset, which may vary depending on your mobile device.
- **5.** Once the headphones are connected to a phone, the connection record will be retained.
- 6. The headphones will automatically reconnect during subsequent uses if they were previously paired with that device.

Bluetooth Playback/Calling

- 1. Press the | button once to play music. Press it again to pause the music.
- 2. Press the | button to answer an incoming call. Press it again to end the call.
- 3. Hold the \parallel button for 2 seconds to activate the voice assistant.
- 4. Press and hold the (a) "+" button to skip to the next track. Press it briefly to


increase the volume.

5. Press and hold the (b) "-" button to return to the previous track. Press it briefly to decrease the volume.

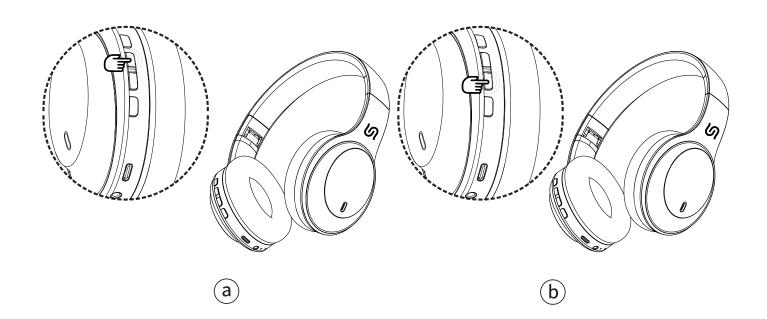

- 6. Double-click the Power button to switch between Music and Gaming modes.(c).
- 7. Press and hold the Power button for 2 seconds to turn on the device.
- 8. Press and hold the Power button for 3 seconds to power off the device.
- 10. The 3.5mm jack for AUX mode is signified in (d). Connect an AUX cable to your mobile phone or computer to use this mode.

Note: In AUX mode, Bluetooth will automatically turn off and the device will switch to AUX mode.

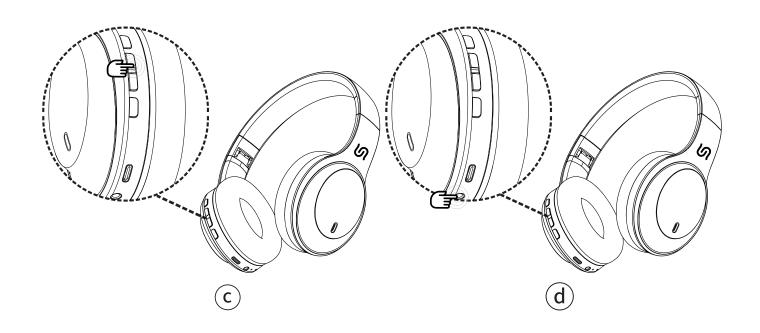

Charging Instructions

- 1. Use a Type-C cable to connect the headphones to a charger or a computer USB port for charging.
- 2. The red LED light will turn on during charging and turn off when fully charged.
- 3. A voice prompt will notify you when the battery voltage is low.

Cautions

- 1. Avoid placing the product in environments that are damp, dusty, oily, smoky, or steamy, and do not expose it to direct sunlight.
- 2. Refrain from leaving the product in a vehicle for an extended period, as this may cause malfunction.
- 3. Set the volume to a safe level, as high volumes may harm your hearing. For your safety, do not use the product while driving or cycling.
- 4. Clean the product using a soft, dry cloth to maintain its condition.
- **5.** Do not use the product during a thunderstorm to avoid potential damage or safety risks.
- 6. Do not immerse the product in water, as the headphones are not waterproof.
- 7. During charging, ensure the headphones are turned off and disconnected from the mobile device. Use a power adapter with an output of 5V.
- 8. Bluetooth products may be affected by environmental factors and distance. Avoid using the product near electromagnetic fields.

Battery Safety Notes

This product contains a rechargeable lithium battery. Battery Safety Warnings:

- 1. Do not strike, crush, or expose the battery to fire.
- 2. Avoid placing the battery in high-temperature environments.
- 3. Do not use the battery if it has been submerged in water.
- 4. Use an adaptive USB cable for charging. Do not use a fast-charging cable, as it damages the battery.
- 5. If the product is not used for an extended period, charge it at least once a month to maintain its performance.



Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **https://porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

https://www.porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: porodo