PORODO



Porodo

4G LTE 1200Mbps Dual Band Portable Wi-Fi Router

SKU: PDLFST207

Table of Contents

Features	2
Schematic View	2
Setup Guide	3
Indicator Guide	4
Button Guide	4
Connection Guide	5
Log in to Web UI	5
Firmware Update	5
FAQs	5
Specifications	6
Disposal	6
Warranty	7
Contact Us	7

Features

High-Speed Wi-Fi: Delivers up to AC1200 Mbps throughput, supporting 802. 11a/b/g/n/ac standards to ensure fast and stable wireless connections.


4G LTE Connectivity: Supports a wide range of 4G frequency bands for comprehensive global network compatibility.

Dual-Mode Wi-Fi Antennas: Features two external antennas optimized for enhanced Wi-Fi signal strength and four external antennas dedicated to LTE/UMTS to maximize cellular signal reception.

Built-in 4000mAh Battery: Provides reliable continuous operation during power outages or mobility, maintaining uninterrupted 4G connectivity.

Multiple Giga LAN Ports: Equipped with three Gigabit Ethernet ports for robust and consistent wired network connections suitable for both home and office setups.

Schematic View

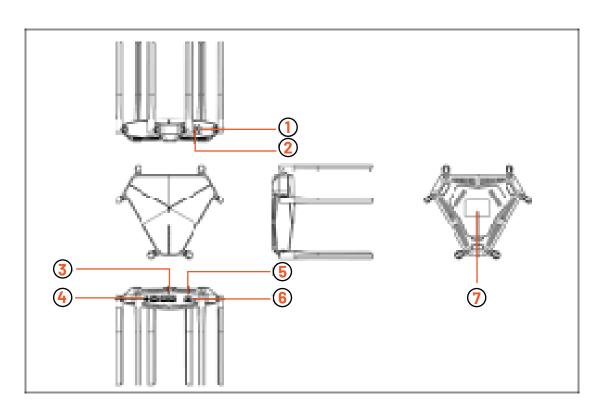


- 1. WPS & Reset Button
- 2. Power button
- 3. RJ45 ports
- 4. DC port for power adapter
- 5. SIM Slot (4FF/Nano)
- 6. Type C port for debug
- 7. Battery compartment

Setup Guide

1. Ensure you use the correct SIM card: a Nano SIM (4FF) as shown below.



2. Gently insert the SIM card into the SIM card slot following the orientation shown in the diagram. Push it in until you hear a click, indicating it is securely in place.

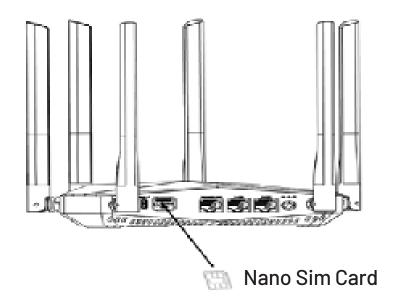

Remark:

To remove the SIM card, gently press it inward until you hear a click, then the card will automatically eject.

Do not insert or remove the SIM card while the router is operating, as this may affect performance and potentially damage the SIM card.

- 3. Connect the power adapter to the router.
- 4. Press the power button; the indicator light will flash, signaling that the router is initializing.
- **5.** When the indicator light stops flashing, the router has completed initialization and is ready for use.

Indicator Guide

SYS	The device is working.	Green
	The device is off.	Off
	FOTA function is working.	Green light flashing
	Battery is powering	Blue
	The battery is being charged	Blue light flashing
	Battery warning	Red
4G	4G	Green
	3G	Blue
	No signal	Off
WIFI	Wi-Fi is working.	Green
	Wi-Fi is off.	Off
	WPS Function is working.	Green light flashing
ETH	Ethernet port is working.	Green
	Ethernet port is not connected.	Off
NET	The network is connected	Green
	The network is not connected	Off

Button Guide

Power Button	Press the button for 3-5 seconds.	Turn on/off.
	Press the button	WPS is working
WPS & Reset button	Press the button for 3-5 seconds.	Reset is working

Connection Guide

- 1. Connect via Wi-Fi: Find the router's SSID and connect your mobile phone or computer to the router's Wi-Fi network. Please refer to the label on the bottom of the router for the Wi-Fi SSID and password.
- 2. Connect via Ethernet: Connect your computer to the router using an Ethernet cable. Once connected, your computer will have access to the Internet.

Log in to Web Ul

- 1. Connect your mobile phone or computer to the router.
- 2. Open a browser and enter "192.168.0.1" in the address bar. Log in to the Web Ul using the default password.
- 3. Once logged in, you can modify the settings through the Web UI interface.

Firmware Update

- 1. Online Update: Click the 'Check for New Update' button. The device will then automatically check for and install any available updates.
- 2. Manual Update: This method allows you to upgrade manually. Select the Firmware Update option, choose the desired software version, and then start the update process.

FAQs

1. How do I restore factory settings?

When the device is powered on, press and hold the reset button for 3 to 5 seconds until the indicator light begins to blink. Approximately 30 seconds later, the indicator will stop blinking, indicating the device has completed the reset process.

2. What should I do if I forget the Wi-Fi password or the login password? Restore the device to factory settings and use the default Wi-Fi and login passwords to reconnect.

- 3. What should I do if the device cannot connect to the Internet?
- **3.1** Verify that the SIM card is properly inserted.
- **3.2** Confirm that your SIM card service is active.
- 3.3 Check that the network connection settings are configured correctly.
- 4. What should I do if I cannot access the device's WebUI?
- 4.1 Ensure your computer is connected to the device via Ethernet cable or Wi-Fi.
- **4.2** Verify that your computer is set to obtain an IP address and DNS server address automatically.
- 4.3 Restart your web browser or try using a different browser.
- 4.4 If the issue persists, restore the device to factory settings.

Specifications

4G Bands Supported	B1, B3, B7, B8, B20, B28, B40, B41
3G Bands Supported	B1, B8
Wi-Fi Standards	TR802.11,5120a/b/g/n/ac 80MHz
Wi-Fi Configuration	2x2 MIMO, AC1200Mbps
External Antennas	4x LTE/UMTS, 2x Wi-Fi
Giga LAN Ports	3
Power Input	DC 12V/1A
Battery Capacity	4000mAh

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.





Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: porodo