

PORODO



Porodo

**Pocket Volt
5000mAh Power Bank**

SKU: PDPBFCH089

Table of Contents

Specifications	2
Schematic View	3
Scope of Application and Recharging	3
Charging Instructions	3
Safety Warnings	4
Material Contents Table	5
Troubleshooting	6
Disposal	7
Warranty	8
Contact Us	8

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Specifications



The power indicator displays the current power level. When the device is turned off, the button will have no output, and the digital display will turn off.

The display shows the current power level. When the power is low, the output button is disabled, and the digital display goes off.

Battery Capacity	5000mAh
Type-C Input	5V/3A, 9V/2A, 12V/1.5A, 18W Max
Type-C Output	5V/3A, 9V/2.22A, 12V/1.67A, 20W Max
Type-C Output (Cable)	5V/3A, 9V/2A, 10V/2.25A, 12V/1.5A, 22.5W Max
Total Output	5V/3A, 15W Max
Product Size	26 x 32 x 78mm
Product Weight	89g
Model Number	PB089

Schematic View

1. Type-C Output
2. Type-C Input Output
3. Switch Button

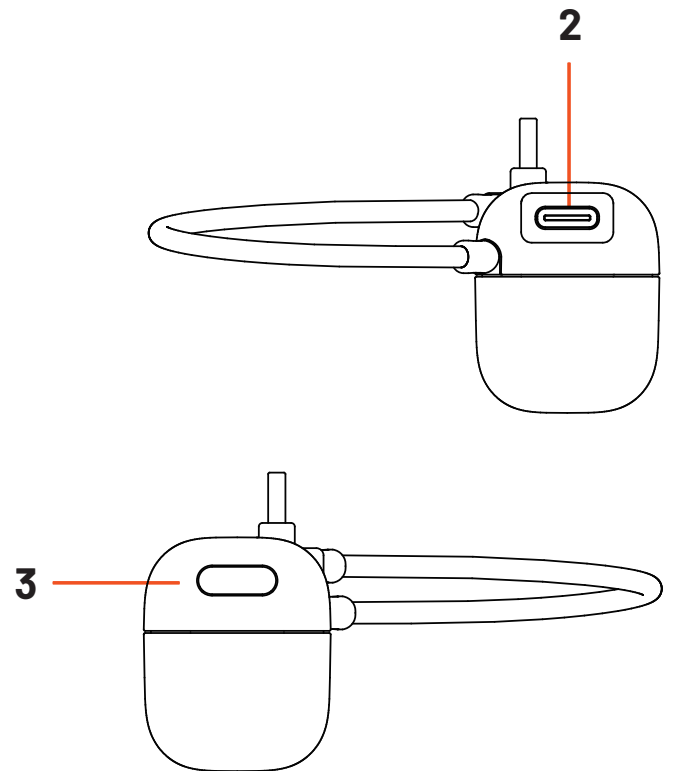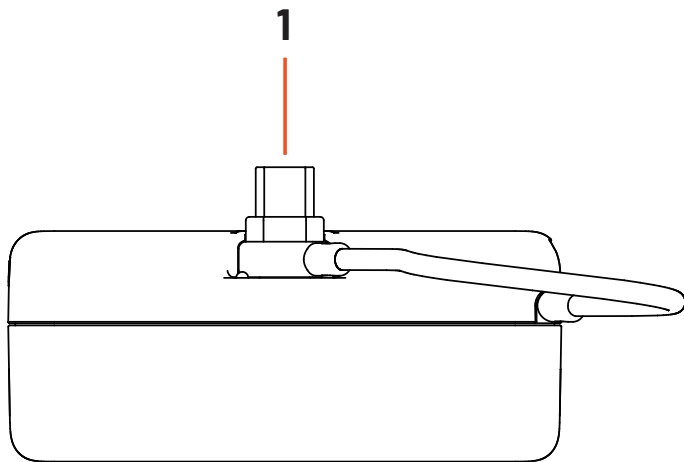

Scope of Application and Recharging

1. Product Usage: Use a Type-C cable with a compatible connector to charge various digital devices using the power bank.
2. Product Charging: When the power bank has low battery, recharge it using a proper charging cable through the USB port on a computer, AC adapter, or car charger.
3. Important Notice: Due to the weight of the product, please avoid hanging the power bank by the charging cable when charging your phone.

Charging Instructions

1. Power Status During Charging (Input)

While charging, the digital display will flash and show the current power level.

Once fully charged, it will display "100" and the light will remain on.

2. Power Status While Charging Other Devices (Output)

During discharge, the digital display will stay on, indicating the current battery percentage. If the power is below 0%, the display will show "0%" and flash at a rate of 1Hz to indicate low battery.

If the battery voltage drops below 3V, the power bank will automatically turn off.

Safety Warnings

- 1.** The product should be placed on a flat surface during use. If it needs to be used in contact with the human body, the contact time should not exceed 10 seconds.
- 2.** The recommended operating temperature range for the product is 0°C to 35°C. Avoid using the product in environments where the temperature exceeds 35°C or drops below 0°C.
- 3.** Do not expose the product to fire or water, and avoid scrubbing it with a damp cloth to prevent leakage, short circuits, or other malfunctions.
- 4.** Do not cover the product with paper or any other materials that may obstruct heat dissipation and cooling.
- 5.** Do not leave the product unattended while in use.
- 6.** Please do not attempt to disassemble the device yourself. This product does not contain components that are designed to be disassembled or maintained by the user.
- 7.** Do not drop, shake, knock, or squeeze the product.
- 8.** Avoid short-circuiting the anode and cathode of the product to prevent fire hazards.
- 9.** Keep the product out of reach of children.
- 10.** Ensure that the charger's output voltage is compatible with the product before use. Using an incompatible charger can cause overload, leading to smoke, fire, and other risks.
- 11.** Unplug the charger once the product is fully charged.

12. If you notice any abnormal situations, such as unusual odors, heat, discoloration, deformation, or leakage during use, immediately deactivate the product.

Note:

- 1.** If using a power adapter for the power supply, ensure it is a matching adapter with certification that meets the required standards.
- 2.** Improper battery replacement can lead to the risk of explosion. Only the same type or an equivalent battery can be replaced, and this should only be done by qualified maintenance personnel, not regular users.
- 3.** Batteries should never be exposed to environments such as direct sunlight, fire, or other sources of heat.
- 4.** Do not use the product after it has been submerged in water.

Material Contents Table

When disposing of this appliance, refrain from mixing it with ordinary household waste. Instead, deliver it to a government-approved recycling facility to support environmental sustainability.

Hazardous Material Contents						
Component	Pb	Cd	Hg	Cr6+	PBBBs	PBDEs
Shell	○	○	○	○	○	○
PCB	×	○	○	○	○	○
Battery	○	○	○	○	×	×
Screw	○	○	○	○	×	×
Metal Components	○	○	○	○	--	--
Data Line	○	○	○	○	○	○
<p>This table has been compiled in compliance with SJ/T11364 standards.</p> <p>○ : Indicates that the content of toxic and hazardous substances in all homogeneous materials of the component complies with the limit values outlined in GB/T 26572.</p> <p>× : Indicates that certain components marked with an 'X' contain toxic and hazardous substances exceeding the limit values specified in GB/T 26572 in at least one homogeneous material, due to current technological constraints. With ongoing technological advancements, these components may eventually be substituted or improved.</p>						

-- : According to GB/T 26572, metal components are exempt from the specified limits concerning PBBs and PBDEs.



The environmental protection lifespan for this product under typical operating conditions is 5 years.

The "hazardous substances" listed in this table pose no risk to human health or the environment during normal product usage.

The information on "hazardous substances" and their associated components presented here aims to guide consumers and recycling professionals regarding the presence of specific substances, facilitating proper disposal and recycling of the product.

Troubleshooting

Problem	Possible Cause	Solution
Indicators do not show fully charged status after extended charging periods.	<ol style="list-style-type: none">1. The charging time is insufficient.2. The adapter or product is malfunctioning.	<ol style="list-style-type: none">1. Charge the product continuously for 12 hours.2. Contact a service center for assistance.
Unable to detect remainin battery level.	<ol style="list-style-type: none">1. The battery is completely depleted.2. The power button or indicator is malfunctioning.3. The product has experienced a power failure.	<ol style="list-style-type: none">1. Recharge the product.2. Contact a service center for assistance.
Product is unable to charge other devices.	<ol style="list-style-type: none">1. The battery level of the product is low.2. There is no power transmission through the USB cable or adapter.3. An incompatible adapter has been used.4. The product's power management system is restricting device charging.	<ol style="list-style-type: none">1. Recharge the product.2. Replace the USB cable or adapter.3. Select a suitable connector compatible with the product interfaces.4. The product may not be compatible with the connected device.

Product charges other devices but does not fully charge them.	The battery of the product is exhausted.	Recharge the product fully.
Product unexpectedly stops working or no longer displays power while charging other devices.	An external short circuit or product overload has triggered an automatic shutdown for self-protection.	Recharge the product to reactivate it.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**