



# **Porodo Soundtec**

## **YOTOWAVE Kids Wireless Headphone**

SKU: PDSTC303

# Table of Contents

Charging Guide	2
Turn It On and Off	2
Pairing and Connection Guide	2
Function Guide	3
Button Function	3
Troubleshooting	3
Product Diagram	4
Specifications	4
Disposal	5
Warranty	5
Contact Us	5

## Charging Guide

1. On the right earcup, carefully insert the Type-C cable into the Type-C charging port. Connect the other end of the cable to either a computer USB port or a USB-compatible car or wall charger.
2. A solid red LED light will appear to indicate that the headphones are charging.
3. Once charging is complete, the LED light will turn blue.
4. Charging time is approximately 2 hours.

## Turn It On and Off

1. Press and hold the power button on the right side of the headphone for approximately 3 seconds until the LED indicator light turns on.
2. To turn the headphone off, press and hold the power button again for 4 seconds until the LED light turns off.

## Pairing and Connection Guide

1. Power on the wireless Bluetooth headphones (refer to the "Turn It On" section).
2. To pair the headphones with a new device, the red and blue LED lights will blink, indicating that the headphones are ready to be paired.
3. On your Bluetooth-enabled smartphone, tablet, or media player, navigate to the Bluetooth settings menu, enable Bluetooth, and search for available devices. After a few seconds, "PD\_STC303" should appear in the list of available devices.
4. Select "PD\_STC303" to establish the connection. A solid blue LED light will confirm that the device has successfully paired.
5. When Bluetooth is enabled on your previously paired device and it is within range, the headphones will automatically reconnect to the last device they were connected to.

**Note:** If the headphones are not used for a period of 5 minutes, they will automatically power off to conserve battery.

## Function Guide

1. Connect your device to the headphones via Bluetooth.
2. Open your preferred music app and press play.
3. Control music, track selection, and volume directly from your device, or adjust the music and volume using the headphone controls. Press the power button once to play or pause music and to answer calls.
4. Press the power button twice to redial the last number called on your phone, and press and hold to reject an incoming call.

**Note:** All audio, including music, games, videos, and notifications, will be played through the headphones.

## Button Function


1. Press the + area (refer to product diagram) to skip to the next track.
2. Press the - area (refer to product diagram) to go back to the previous track.
3. Press and hold the + area (refer to product diagram) to increase the volume.
4. Press and hold the - area (refer to product diagram) to decrease the volume.

**Note:** Proper press gestures and touching the correct areas will ensure a smooth and seamless experience.

## Troubleshooting

1. If there is no power: Recharge your wireless Bluetooth headphones using the provided Type-C cable.
2. If music is not playing over Bluetooth: Ensure your Bluetooth device supports the A2DP profile. Confirm that both devices are paired and connected over Bluetooth. Restart the headphones to reconnect your Bluetooth device.
3. If the Bluetooth device will not reconnect with the headphones:
  - 3.1 Navigate to the Bluetooth settings menu on your Bluetooth device, select "PD\_STC303," and choose "Forget." Follow the steps to pair your device again.
  - 3.2 Alternatively, press and hold the power button on the headphones (while powered on) to disconnect the headphones from any previously connected devices. Afterward, follow the steps to reconnect your device.

## Product Diagram

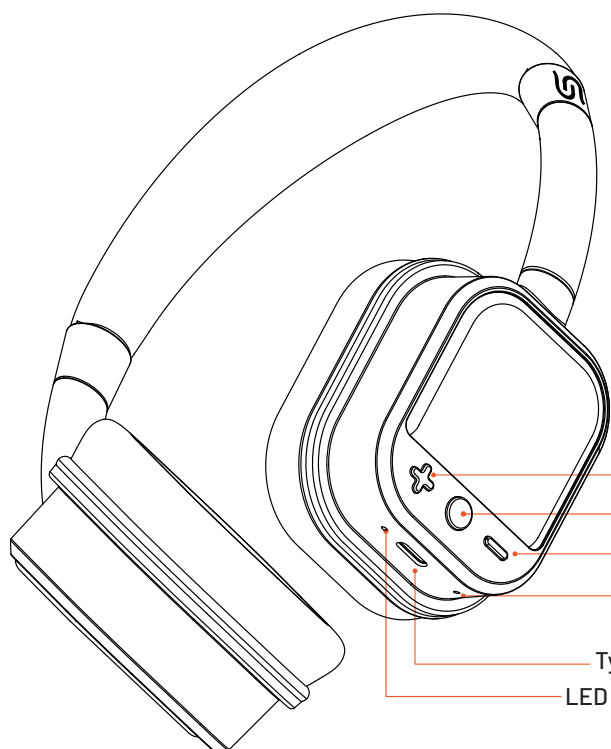

press & hold (3 Sec): Power On  
press & hold (4 Sec): Power Off  
Play/Pause, Answer/End Calls  
Double Click: Re-dial Last Dialed Phone Number  
press & hold (1-2 Sec): Reject Incoming Call

Next Track / Volume Up

Previous Track / Volume Down

Microphone

Type-C Charging Port

LED indicator

## Specifications

Model	PDSTC303
Bluetooth	V5.4
Transmission Distance	10m
Battery Capacity	200mAh
Charging Port	Type-C
Charging Time	2H
Talk Time	20H
Play Time	25H
Speaker Size	40mm
Frequency Response	20Hz-20KHz
Frequency Range	2402-2480MHZ

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
**[porodo.net/warranty](https://porodo.net/warranty)**

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:  
**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**