



Porodo Soundtec VIBEGO Mini RGB Speaker

SKU: PDSTQS001

Table of Contents

Overview	2
Package Contents	3
Specifications	3
Music Playback Function	4
Album Function Description	4
Connection Mode	5
Status Bar Icons	5
Display User Interface	6
Music Playback Function	7
Album Function Description	8
Alarm Function Introduction	8
Call Function Guide	9
Timer Function Description	10
Settings Interface	11
Disposal	12
Warranty	13
Contact Us	13

1



1. Screen On/Off Operation: Briefly press the button on the main dial interface to toggle the screen on/off.

Power On: In the off state, press and hold the button for 3 seconds to power on the device.

Power Off: In the on state, press and hold the button for 3 seconds to display the power-off confirmation screen.

Return to Main Screen: In a specific function interface, briefly press the button to quickly return to the main dial interface.

2. Light Control:


Short press to activate the light.

Short press again to cycle through light color modes.

Short press once more to deactivate the light.

- 3. TF Card Slot: Insert the TF card here for storage.
- 4. Charging Port: Use the included USB cable for charging (approximately 2 hours for a full charge).
- 5. Display Screen: Displays digital charging status and other relevant information.



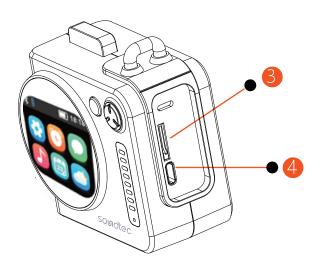

Package Contents





Specifications

Battery Capacity	2000mAh
Display Size	2.64"
Bluetooth Version	5.4
Transmission Distance	15m
Charging Time	2H
Charging Interface	Type-C
SNR	≥80dB
Working Time	10-15H (50 % Volume)
Rated Power	4Ω 5W
Frequency Range	2.4GHz-2.480GHz
Product Weight	330g
Product Size	46.8×85.5 × 87mm

Music Playback Function

To connect the Speaker to your mobile phone, press and hold the () button for 3 seconds to power on the device. After hearing the prompt tone, the device is powered on. Once powered on, go to your phone's Bluetooth settings. Look for the device name "PDSTQS001" in the device list and select it. You will hear a prompt saying, "Connection successful." Once connected, you can start playing music.

Album Function Description

Method 1: Download the app from the App Market

For iPhone Users (iOS): Open the "App Store" on your phone and search for "Joy Audio" to find and download the app.

For Android Users: Open the app store on your Android phone and search for "Joy Audio" to find and download the app.

Available app stores: Google Play Store, Huawei App Market, Xiaomi App Market, App Treasure, VIVO App Market.

Method 1: App market download

> iPhone users (iOS): Open the" App Store" on your phone Search for "Joy Audio* to find the app and download it

Android phone users:
Open the mobile app store
and search for the app "Joy
Audio" to find the app and
download it

Method 2: Scan the QR Code to Download



Download the app for more personalized settings.





Download APP

Scan the QR code below to access the official website and download the app.




Select the last item first, then go to the official website to download the app. Please note that the App Store version may not be the latest due to listing updates.

Connection Mode

Bluetooth Search Connection: To connect via Bluetooth, add the device and locate the Bluetooth name of the corresponding device (MAC address, which can be found in the About section), then connect the speaker device.

Ode Scanning Connection: After activating the speaker, locate the "Bluetooth QR Code" interface on the device. Open the app and scan the Bluetooth QR code displayed on the speaker to establish the connection.

Status Bar Icons

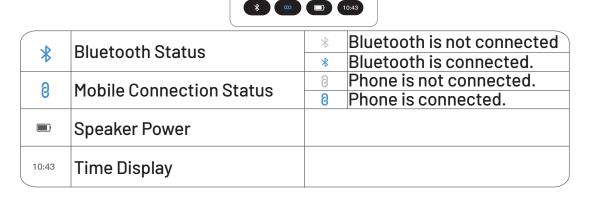

Display User Interface



Main Interface

Displays the main screen with the current time and date.



Main Menu Interface



Music Interface: Displays the music control screen.



Weather Interface: Displays the current weather information.



Calendar Interface: Shows the calendar with the current date.



Slide to view additional information or notifications.



Dial Switching Interface

Music Playback Function

There are two music modes: local music mode and Bluetooth music mode.

Bluetooth Music Mode: Connect your phone to Bluetooth for music playback.

Local Music Mode: Users can play music content directly from the SD card.

One-click Music Synchronization Function: Users can transfer their favorite songs from their phone to the audio SD card through the app.



Local Music Mode



Select and play your desired song.

Song Playback Modes: Sequential playback, random playback, and single loop.

Download Folder: Location where songs transferred via the appare stored.

Photo Folder: Folder for photos transferred via the app.



SD-Speaker: Switch between local storage and Bluetooth mode. Bluetooth Mode: Connect the device to your phone for Bluetooth music playback.



Slide Up: Enter the lyrics interface.



Slide Down: Exit the lyrics interface.



Bluetooth Not Connected: Displays the prompt interface when Bluetooth is not connected.

Please check if the Bluetooth switch in the audio settings is turned on and ensure the Bluetooth on your phone is connected.

Album Function Description

Open the album application to browse the local album on the stereo. Users can save photos from their mobile phone to the audio SD card through the app's album function. Users can also set these photos as the dial background according to their preferences.



Long Press to Access Photo Settings



Turn on Loop Play Mode: Photos will automatically cycle at a set speed.

Set Photo as Main Dial Background: Set the selected photo as the background on the main dial interface.

Delete Photos: Remove unwanted photos.

Exit This Feature: Exit the album feature and return to the main interface.



Click to exit the album interface.



Photo Damage Warning: If the photo transmission format from the app is incorrect, the photo may not display properly. It is recommended to delete the photo in such cases.

Alarm Function Introduction

Users can set the alarm clock according to their needs, including alarm time, repeat days, and on/off settings.

Number of Alarms: Up to five alarms can be set.

Users can set the alarm directly on the stereo.

Users can open the app and find the alarm function to set it.



Alarm Settings: Configure alarm time and label.



Alarm Bell Warning: The alarm will sound at the set time.



Turn off Alarm Immediately: The alarm can be turned off, and it will remind you again in 10 minutes.

Call Function Guide

Function Definition: In Bluetooth connection mode, users can answer calls, hang up, store common contacts, and save call records.

Dialing Function: When Bluetooth is connected, users can make calls directly through the dial.

Address Book Function: Users can store up to 10 frequently used contact details in the app, making it convenient for phone calls.

Call History: The device saves the call history for future reference.



Dial Function Interface



Dialing Interface



Incoming Call Answering



Interface for Connecting a Call

Timer Function Description

Function Definition: Set a specific countdown time (1/3/5/10/15/30/60 minutes). After the countdown ends, a sound reminder will be issued.



Timer Interface: Set the desired countdown time.



Countdown Interface



Countdown End Reminder Interface



User-Defined Duration Interface: Customize the countdown duration as needed.



Calculator Function Introduction

Function Definition: Users can directly perform simple mathematical operations and get the corresponding results.



Weather Function Introduction

 
Function Definition: After connecting the app to the device, the app will automatically sync weather information to the audio weather function interface, making it easy for users to check the weather.




Calendar Function Introduction

Function Definition: Users can simply view calendar information.

Settings Interface



 Manual Shutdown: Disconnects the phone's Bluetooth, which also disables the phone's sound.



- Ringtone Volume: Adjust the volume of the ringtone for alarms, countdowns, calls, and SMS. Mute Mode: If enabled, no prompt tone will be played.
- Language Settings: Set the displayed language information, typically set to the user's native language for convenience.



Restore Factory Default Settings: Resets all user settings to the default factory settings.



Restart: Restarts the device.



Shutdown: Turns off the device. If not in use for an extended period, it is recommended to shut the stereo down.



App Download QR Code: Scan this QR code to visit the official website, where you can download the "JoyAudio" app to unlock additional features.



Device Connection QR Code: Open the "JoyAudio" app and scan this QR code to connect devices.



Equipment Information: View current device details such as the device name, model, Bluetooth address, and software version.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.





Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: porodo.net

Service Support: support@porodo.net

Instagram: porodo