



Porodo Gaming
27 "120Hz Gaming Monitor with
Durable Metal Stand

SKU: PDX553

Table of Contents

Important Safety Precautions	2
Installation and Connection Guide	3
[A] Display Installation	3
[B] Base Installation	4
[C] Removing the Base	4
Installation Tips	5
Signal Line Connection	5
Audio Output	5
Display Safety Protection	5
Specifications	6
Troubleshooting	6
Disposal	7
Warranty	7
Contact Us	7

 
Important Safety Precautions

- 1.** Please read all instructions carefully before using this product.
- 2.** Always unplug the power cord when cleaning an LCD. Avoid using liquid detergents or sprays; instead, gently wipe with a damp, soft cloth. If stains persist, use a cleaner specifically designed for LCDs.
- 3.** Do not use accessories that are not authorized by the manufacturer, as they may pose safety risks.
- 4.** When disconnecting the power cord of the display or power adapter, remember to hold the plug itself rather than pulling on the cord.
- 5.** Keep the display away from water sources such as bathtubs, washbasins, sinks, or washing machines. Do not place the display on wet floors, near swimming pools, or apply pressure to the LCD surface with fingers or hard objects.
- 6.** The grooves and openings on the back and bottom of the casing ensure proper ventilation and reliability of components, preventing overheating. To avoid blocking these vents, do not place the display on soft surfaces like beds or sofas, near heat sources like radiators, or inside enclosed spaces without proper ventilation.
- 7.** Use only the type of power source indicated on the nameplate of the display. If you are unsure about your power source, consult the display dealer or your local power supply administration.
- 8.** Due to high voltage and other hazards, do not attempt to open or repair the display yourself. Always request service from qualified maintenance personnel.
- 9.** In any of the following situations, immediately unplug the display or power adapter and seek assistance from qualified maintenance personnel:
 - a.** The power cord or plug is damaged or worn.
 - b.** The display has been dropped or the casing is damaged.
 - c.** The display shows obvious signs of malfunction.
- 10.** Please position the display in a cool, dry, and well-ventilated area.

Installation and Connection Guide

[A] Display Installation

1. This machine should be installed near an easily accessible AC power socket for convenience.
2. For safety reasons, we recommend using a suitable wall-mounted bracket or base.
3. To avoid injury, ensure the machine is placed on a stable and level surface or securely fixed to a firm wall.
4. For wall-mounting, please hire a professional. Improper installation could compromise the stability of the machine.
5. Avoid placing the machine in areas subject to mechanical vibrations.
6. Ensure the machine is not positioned where insects can easily access it.
7. Do not install the machine directly opposite an air conditioner, as condensation could form on the inner panel and cause failure.
8. Avoid placing the machine in areas with strong electromagnetic fields, as this may cause interference and damage the machine.

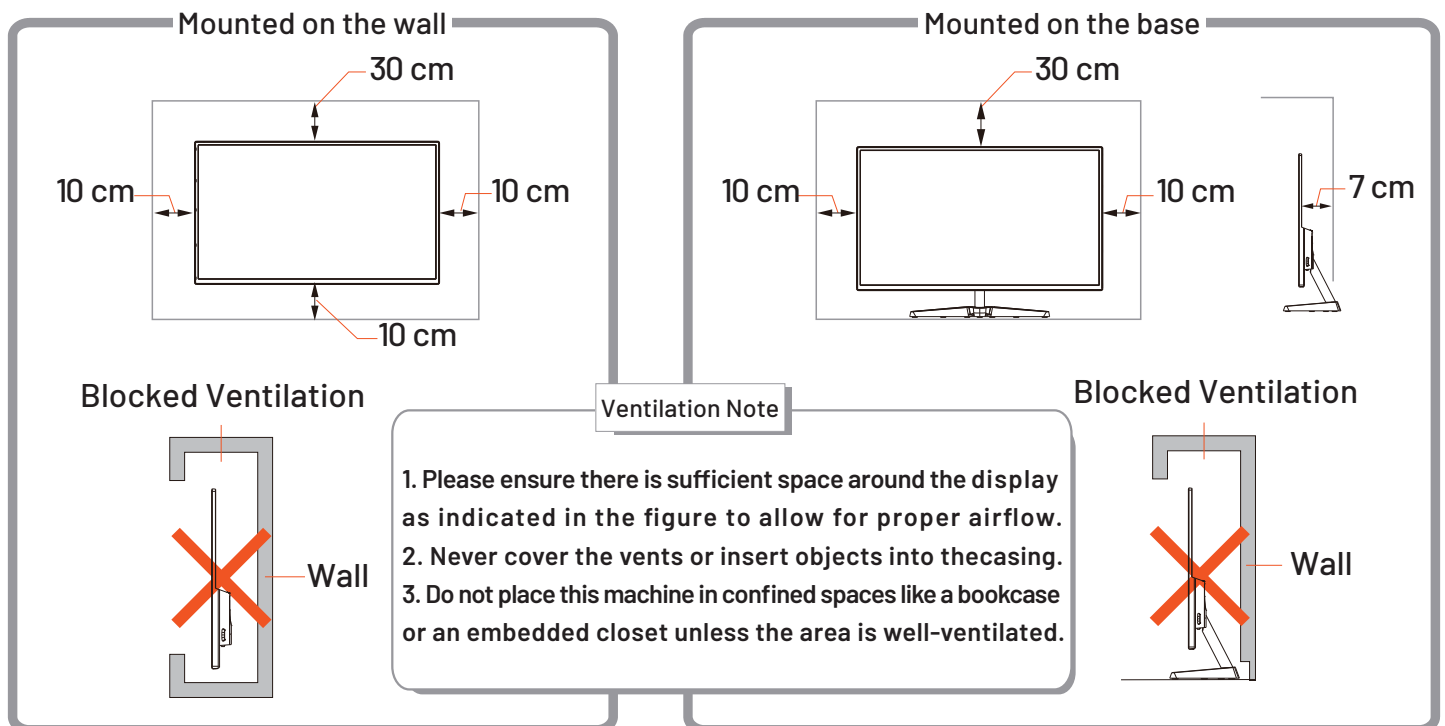

[B] Base Installation

1. Position the base so that it faces itself, and assemble the support onto the base following the direction indicated by the arrow in the figure. Ensure the front slot of the base support aligns with the two ribs of the base, as illustrated in Figure 1.
2. Insert the assembled base into the corresponding slot on the machine as shown in Figure 2. Continue until a click sound is heard, or the upper surface of the active button shown in the figure is level with both sides, as depicted in Figures 2 and 3.

Base installation steps:

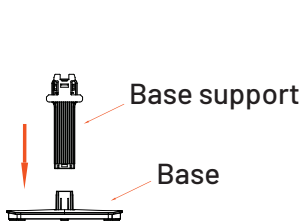


Figure 1

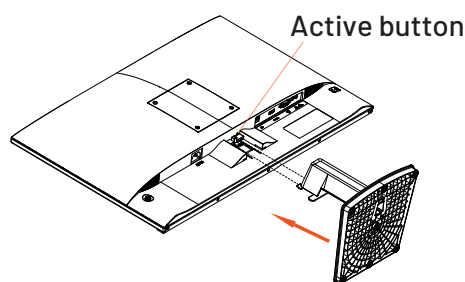


Figure 2

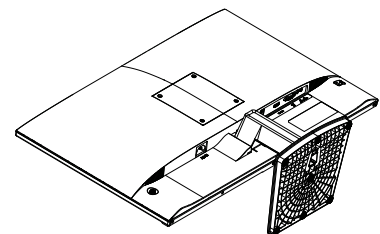


Figure 3

[C] Removing the Base

When you need to remove the base from the machine, follow these steps:

1. Lay the screen of the machine face down on a flat desktop. Press the activity button and pull the base outward to detach it, as illustrated in Figure 1 and Figure 2.
2. Place the base on a flat surface with the bottom facing upward. Press the adjustable buckle inward towards the center to release the base support completing the separation of the base and support, as shown in Figure 3.

Disassembly procedure:

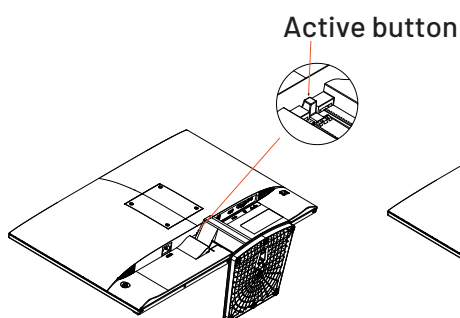


Figure 1

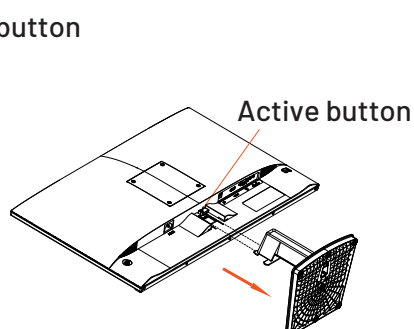


Figure 2



Figure 3

Installation Tips

1. When removing the base, first lay the monitor face down on the original packaging protection material to prevent damage to the screen.
2. For bases equipped with quick disassembly and assembly features, simply press the release button and perform the removal process in reverse to detach the base.

Signal Line Connection

1. Connect one end of the signal line to the VGA, HDMI, or DP output interface on your PC.
2. Connect the other end of the signal line to the corresponding signal input port on the display.

Audio Output

This machine supports audio output via headphones.

Display Safety Protection

1. If the video signals from the PC exceed the frequency range of the display the horizontal and field synchronizing signals will automatically shut down to protect the display.
2. You must adjust the PC output frequency to a range that the display can handle to ensure normal operation.

Specifications

Panel Size	27"
Panel Type	CSOT
Backlight Type	E-LED
Screen Resolution	1080×1920P
Contrast Ratio	1500:1
Response Time	14ms (Typical), 5.5ms (OD)
Viewing Angle	178°
Display Colors	16.7M
Power Cord	UK 3-Pin Plug
Product Dimension	364.3×46.4×616mm (Without Stand), 450.3×191×616mm (With Stand)
Input Interface	VGA ×1(75@1080×1920Hz), HDMI ×1(120@1080×1920Hz), Audio In ×3.5 1mm Mini Interface

Troubleshooting

Problem	Troubleshooting
The light is out and the power indicator is off.	Check whether the display and the socket are well connected to power, and verify if the display is in shutdown mode.
The image is blurred, overly large or overly small.	Enter the "Image Setting" menu and select "Auto Image Adjust" to automatically adjust the display. (Note: This function is only applicable to VGA signal input.)
The image is overly dark.	Access the "Brightness and Contrast" menu to adjust the brightness and contrast of the display.
The display is overheating.	Ensure at least 5cm of clearance around the display for ventilation and avoid placing objects on the display.
Dark or light spots appear when powering on.	The presence of dark or light spots upon powering on is a normal phenomenon, caused by uneven backlight illumination due to temperature differences. The backlight should normalize after 20 minutes, correcting the spots.
The image is distorted, blinking, or shaking.	Check the computer settings, select the correct resolution, and re-adjust the refresh frequency.
There is noise when powering off.	The noise heard during powering off is a normal phenomenon, caused by the display discharging.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**