



Porodo Gaming

ARCADE X Game Console with 7 Emulators and 50000+ Games

SKU: PDX637

Table of Contents

Schematic View	2
Function Overview	3
Instructions for Use	4
Language Settings	4
Saving or Loading the Game	5
Install or Delete a Game	5
Specifications	6
Connection Instructions	6
Warranty	7
Contact Us	7

Schematic View



X	Game/Submenu Key: Briefly press to display the submenu or to enable game search options.
Y	Game Function Key: Used for navigating and confirming selections within the search menu.
B	Confirm/Play Key: Acts as a confirmation button when selecting menu items and toggles between play and pause while playing media files.
A	Home/Exit Key: Brief press to exit back through menu levels step by step.
Charging Reminder: The device automatically enters screen saver mode when powered off for charging. Press the power switch briefly to check the charging status or hold the power button to turn the device back on.	

1. Arrow Keys: Navigate using the up, down, left, and right arrow keys.
2. Function Keys/Game Keys: Use ABXY for game-specific actions.
3. Select Key: Also known as the coin key for game selections.
4. Start Key: Initiates gameplay.
5. 3D Joystick Arrow Keys: Control movement with up, down, left, and right directions.
6. 3D Joystick Function Key: Execute actions with ABXY functions.
7. Ambient Lighting: Displays various colors to indicate low power or charging status.
8. L1/L2 Buttons: L1 for left selection on the main screen; L2 doubles as the coin button and has no function inside the game.
9. R1/R2 Buttons: R1 for right selection on the main screen; R2 also serves as the coin button but is inactive during gameplay.
10. Power Button: Hold to power on or off. Press briefly to activate sleep mode or wake the screen.
11. Volume Button: Adjust the device's sound level.
12. Type-C Port: For charging and data transfer.
13. Micro USB Port: Serves as an external controller connection.
14. HDMI Port: Connect to an HD output to project the screen to a TV.
15. TF Card Slot: Insert a TF card for additional storage.
16. Reset Hole: Perform a forced restart by inserting a small pin.
17. Speaker: Outputs audio for games and media.

Function Overview

1. Compatible with ten popular emulators, including PS1, MAME, GBA, GBC, GB, NES, SFC, FC, SMD, and MD.
2. Music Playback: Supports various audio formats such as WMA and MP3.
3. Video Playback: Plays 720P video files and supports formats like AVI, RMVB, FLV, MP4, and more.
4. Two-Player Mode: Allows external controller connection for two-player gaming.
5. Photo Browsing: Supports image formats including JPEG, BMP, and PNG.
6. E-Book Reading: Provides functionality for reading digital text files.

- 7. Recording Feature:** Includes a built-in voice or audio recording capability.
- 8. Settings Configuration:** Enables customization and adjustment of various functional attributes.
- 9. Picture Browsing with Effects:** Supports image viewing with enhanced interface display effects.
- 10. HDMI Output:** Projects the screen in high-definition via HDMI connection.
- 11. USB 2.0 Support:** Enables high-speed data transfer and supports restoring or upgrading software via USB.

Instructions for Use

1. Please use a charger with an output of 5V-2A or lower to charge the device. The device can also be charged using a USB cable connected to a computer. The estimated charging time is between 4 and 8 hours, depending on the power source and charging method.

Warning: Avoid using fast chargers, as they are not supported.

2. This device supports both single and dual player. In the single player scenario, ensure it is inserted first, and access the game menu to configure the handle.

3. The console functions as an extension for the device and can control the same character or actions as the main unit when directly connected.

4. To control different characters in a dual-player game, insert the console and access the game menu. Navigate to "Option Settings," then "Key Configuration," and select "Handle One." Press the "X" key and wait for the number "2" to appear next to "Handle 1." This setup completes the configuration process.

5. For two-player with a second game pad, simply connect the additional console. No additional setup is required. The gamepad is ready to use.

Language Settings

The default language of the machine is English. If the English menu appears when you start the device, navigate to "Setting," select "Language," choose your preferred language, and press the "B" button to confirm.

Saving or Loading the Game

To save your game progress, press and hold the "SELECT" and "START" buttons simultaneously during gameplay or when you wish to quit.

A prompt will appear on the screen.

Select "Save Progress" from the menu and press the "B" button to confirm. You can save up to six game progress files.

To continue from a saved game, select "Load Progress" after entering the game.

Note: Do not delete the existing folders on the device, as this may cause the system to malfunction. Since the machine supports multiple game console formats, key functions may vary between games. It is recommended to test each key for functionality, as operations may differ based on the specific game.

Install or Delete a Game

1. To delete a game, connect the device to a computer. Open the "GAME" folder to view the removable games. Games that are pre-installed on the device will not appear in this folder and cannot be deleted.

2. To download a game, search for the game online and download it to your computer. Use a USB cable to connect the game console to the computer. Copy the downloaded game file to the "GAME" folder on the device. Supported file formats include ".gba, .gbc, .gb, .sfc, .nes", and others. Since compatibility may vary depending on the website or file source, unsupported games might not work. If an issue occurs, try downloading the game from a different source.

Note: For smoother performance, unplug the data cable after transferring the game. A large number of games can slow down the interface. Use the save feature to shut down the game properly. Upon restarting, the game will not reload automatically.


3. As an alternative, you can copy downloaded games directly to the corresponding format folder on a memory card. Insert the memory card into the device, which will automatically read its contents. Locate the game in the correct folder and open it immediately.

K Specifications

Battery Capacity	2500mAh
Charging Interface	Type-C
Working Time	Up to 3H
RAM	DDR2 3GB
ROM	8GB
CPU	ATM7051 Quad-Core
Screen Size	4.3" IPS
Screen Resolution	480×800
Storage	TF Slot Up to 128GB
Game Compatibility	Supports Multiple Emulators PS1, MAME, CPS, NEOGEO, GBA, GBC, GB, SFC, FC, MD
Product Weight	350g
Product Dimension	2.5×10×20cm

K Connection Instructions

Note: The HDMI interface is specifically designed for connecting to screen projection devices.

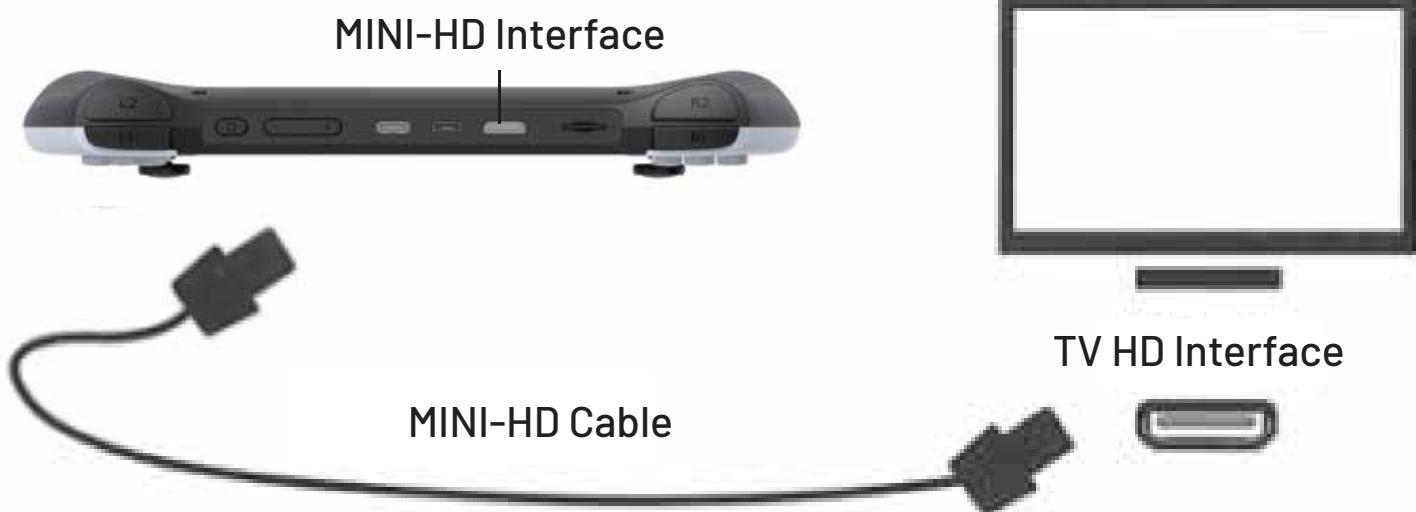

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net
Website: **porodo.net**
Service Support: **support@porodo.net**
Instagram: **porodo**