




Porodo Gaming
Retro Arcade Game Console
With 19 Emulators and Over
5000 Built-In Games

SKU: PDX638

Table of Contents

Schematic View	2
Specifications	2
Precautions	3
Power Off and Reset	3
Usage Instructions	4
Features	5
Charging Guide	6
Install Game	6
Settings	6
Warranty	7
Contact Us	7

Schematic View

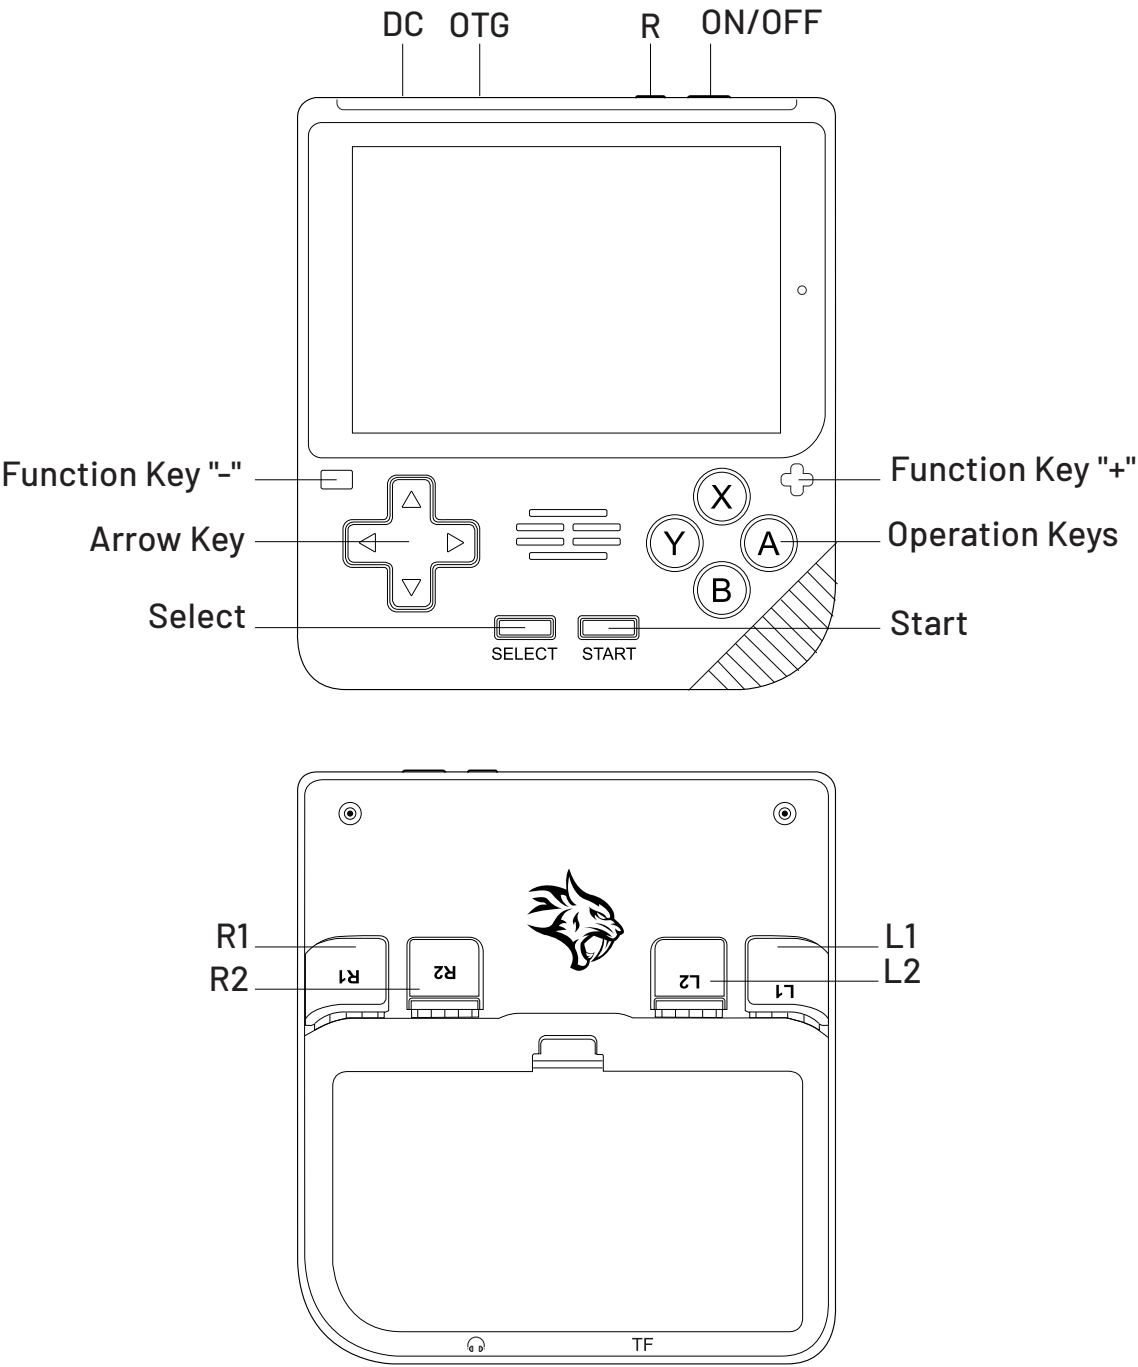

Specifications

Battery Capacity	3000mAh
Charging Interface	Type-C
Input	5V/1.5A
Recharge Time	3H
Operating System	ArkOS Linux
Playtime	6H

Game Compatibility	Multiple Simulators MAME, PS, CP3, NEOGEO, GBA, NES, SFC, MD, NDS
Display	3.5" IPS
Resolution	320×480
Processor	Quad-Core Cortex A1.5 ,35GHz
Refresh Rate	60Hz
RAM	1GB
Storage	TF Slot 64 GB (Included)
Connectivity	Wifi, Type-C OTG, 3.5mm AUX Jack

Precautions

The following guidelines are provided to ensure correct usage of the game console. Please read and follow them carefully.

1. Avoid impacting the console with force.
2. Do not expose the console to chemicals like benzene or solvents.
3. Keep the console away from strong magnetic or electric fields.
4. Avoid direct sunlight or exposure to heaters.
5. Do not attempt to disassemble, repair, or modify the console yourself.
6. Do not use the console or headphones while biking, driving, or riding a motorcycle to prevent accidents.
7. Do not listen at high volumes to avoid potential hearing damage.
8. Keep the console away from water.

Power Off and Reset

1. To shut down the console, press the START button on the main interface, select "Exit," and then choose "Shutdown."

Note: Avoid pressing the power button directly to force a shutdown, as this may damage the system and prevent it from turning on.

2. The "R" button next to the power button resets the system and should only be used in special circumstances, as improper use can damage the system card.

Usage Instructions

[A] Main Interface:

A Key: Enter/confirm

B Key: Jump to the specified simulator/return

X Key: Randomly jump to a simulator

Y Key: Search

SELECT: Randomly play game preview videos (If no video is available, it will enter standby mode)

START: Open the main menu

[B] Simulator Interface:

A Key: Enter the game

B Key: Return

X Key: Randomly switch games

Y Key: Collect games

SELECT: Set the current emulator game settings

START: Open the main menu

[C] Shortcut Keys After Entering the Game:

ABXY: Operate game buttons

SELECT: Select/coin placement

START: Confirm/start the game

"-" + A: Function in the bottom left corner of the screen

"-" + B: Function in the bottom left corner of the screen

"-" + X: Function in the bottom left corner of the screen

"-" + Y: Function in the bottom left corner of the screen

"-" + R1: Function in the bottom left corner of the screen

"-" + L1: Function in the bottom left corner of the screen

"-" + L2: Game acceleration

"+" + Left Cross Key: Function

"+" + Right Cross Key: Function

"+" + Cross Key (under "+" key): Function

"-" + START: Press twice to quickly exit the game

[D] The "-" Key in the Bottom Left Corner of the Screen:

Simulator Menu: Access save/load/exit options

Simulator Menu (Load State): Load game records


Simulator Menu (Save State): Save game records

Simulator Exit (Drastic): Exit the game

L2: Toggle between single/dual screen mode (up and down)

R2: Toggle between single/dual screen mode (up and down)

The "-" Key is in the bottom left corner of the screen.

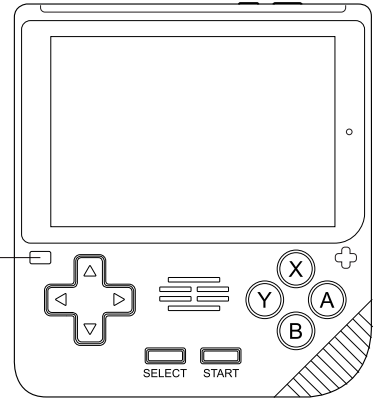

Features

- 1.** The console features a 3.5-inch IPS OCA full-fit screen with a resolution of 480 x 320 for clear visuals.
- 2.** Powered by a quad-core Cortex-A35 processor running at 1.5GHz for smooth performance.
- 3.** Expandable storage through TF card support, allowing additional game storage.
- 4.** Supports 10 different emulator types, including popular systems like ARCADE, CPS, PS, and more.
- 5.** Runs multiple open-source systems and is upgradeable for future enhancements.
- 6.** Quickly save your game progress for later access without interrupting game.
- 7.** Capture and store past play sessions for review or re-play.
- 8.** Easily mark and access your most played or preferred games.
- 9.** Switch to a low-power state, saving energy while keeping your session ready for quick resume.
- 10.** Customize the device's language to suit your preference for a better user experience.

Charging Guide

1. When the battery is low, the game console may experience screen flickering, sound issues, or failure to start. In such cases, save your progress and promptly plug in the charger.

2. Always use the included charging cable.

Warning: Avoid using high-power cables to prevent charging issues due to voltage inconsistencies.

Install Game

Download games in the format supported by the console and place them in the designated TF card folder.

Settings

1. If you experience game crashes, lagging, or other performance issues, press the SELECT button during gameplay to access and edit game settings, such as changing the emulator core for improved compatibility.

2. Press the START button on the main interface to access the game menu, where you can adjust settings like brightness, sound, and UI theme.

3. Avoid making unauthorized changes to critical settings or adjustments you do not fully understand to ensure stable performance.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**