

LéPRESSO



LePresso

**Hot and Cold Milk Frother
with One-Touch Operation**

SKU: LPMLFRBK

Table of Contents

Safety Precautions	2
Schematic View	4
Operating Instructions	4
[A] Before the First Use	4
[B] Operating Step	5
[C] Indicator Instructions	6
Hints and Tips	6
Recipes for Different Drinks	7
Cleaning and Maintenance	8
Specifications	8
Troubleshooting	9
Disposal	10
Warranty	10
Contact Us	10

Safety Precautions

When using electrical appliances, basic precautions must always be observed to minimize the risk of fire, electric shock, and personal injury, including the following:

- 1.** Carefully read all instructions before use.
- 2.** In case of emergency, immediately unplug the appliance from the power outlet.
- 3.** Ensure that the voltage indicated on the appliance's rating label matches your local electrical system.
- 4.** Keep away from children, infants, and pets.
- 5.** This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they are under close supervision or have received detailed instructions regarding the appliance's safe use.
- 6.** Never leave the appliance unattended during operation and keep it out of the reach of children.
- 7.** Do not operate the appliance if the cord or plug is damaged, or if it has malfunctioned, been dropped, or damaged in any way. Return it to an authorized service center for inspection, electrical or mechanical adjustment, or repair.
- 8.** Always unplug the appliance when not in use or before cleaning. Allow it to cool before adding or removing parts and before cleaning.
- 9.** To prevent fire, electric shock, and personal injury, do not immerse the cord, plug, or appliance in water or any other liquid. Never clean the appliance or power cord while they are wet.
- 10.** Avoid touching the appliance with wet hands.
- 11.** Do not run the cord under carpeting or cover it with throw rugs, runners, or similar floor coverings. Arrange the cord away from high-traffic areas to prevent tripping hazards.

 
- 12.** Avoid using an extension cord, as it may overheat and pose a fire risk. If an extension cord is necessary, ensure it is rated for at least 1,000 watts. Always use a grounded socket to connect the appliance.
- 13.** Do not place or use the appliance near hot gas or electric burners, or in a heated oven.
- 14.** It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn-out outlets.
- 15.** Use the appliance only as described in this manual. Using it for any other purpose or with accessories not recommended by the manufacturer may result in fire, electric shock, or injury.
- 16.** Never wash the appliance in a dishwasher or immerse it in water.
- 17.** Only use the milk frother with the power base provided. Do not use the power base with any other devices.
- 18.** Do not operate the appliance without milk in the jug.
- 19.** Do not insert any objects or fingers into the jug while it is operating. Avoid overfilling the jug. Filling beyond the maximum level indicated inside may cause overflow during operation.
- 20.** Never touch the rotating parts. Risk of injury!
- 21.** This appliance is intended for use in household (indoor) environments and similar settings, such as staff kitchen areas in shops, offices, and other working environments like farmhouses, as well as by clients in hotels and motels. No liability will be accepted for damage resulting from use for purposes other than those specified, improper operation, or unauthorized repairs.
- 22.** Prevent liquid contact with the connector. To safeguard the electrical components of the milk frother, make sure that no liquids are spilled on the connector area. Any spillage could cause electrical malfunctions or increase the risk of electrical shock. Handle the frother with care, ensuring that the tank and any other containers are securely positioned before operation.

23. Residual Heat Warning:

23.1 The surface of the heating element or other hot parts remains hot even after the appliance is turned off. Allow sufficient cooling time before touching any parts that are in contact with the heating element to avoid burns or injury.

23.2 To minimize the risk of burns, handle with care after use and allow it to cool completely before cleaning or handling.

Schematic View

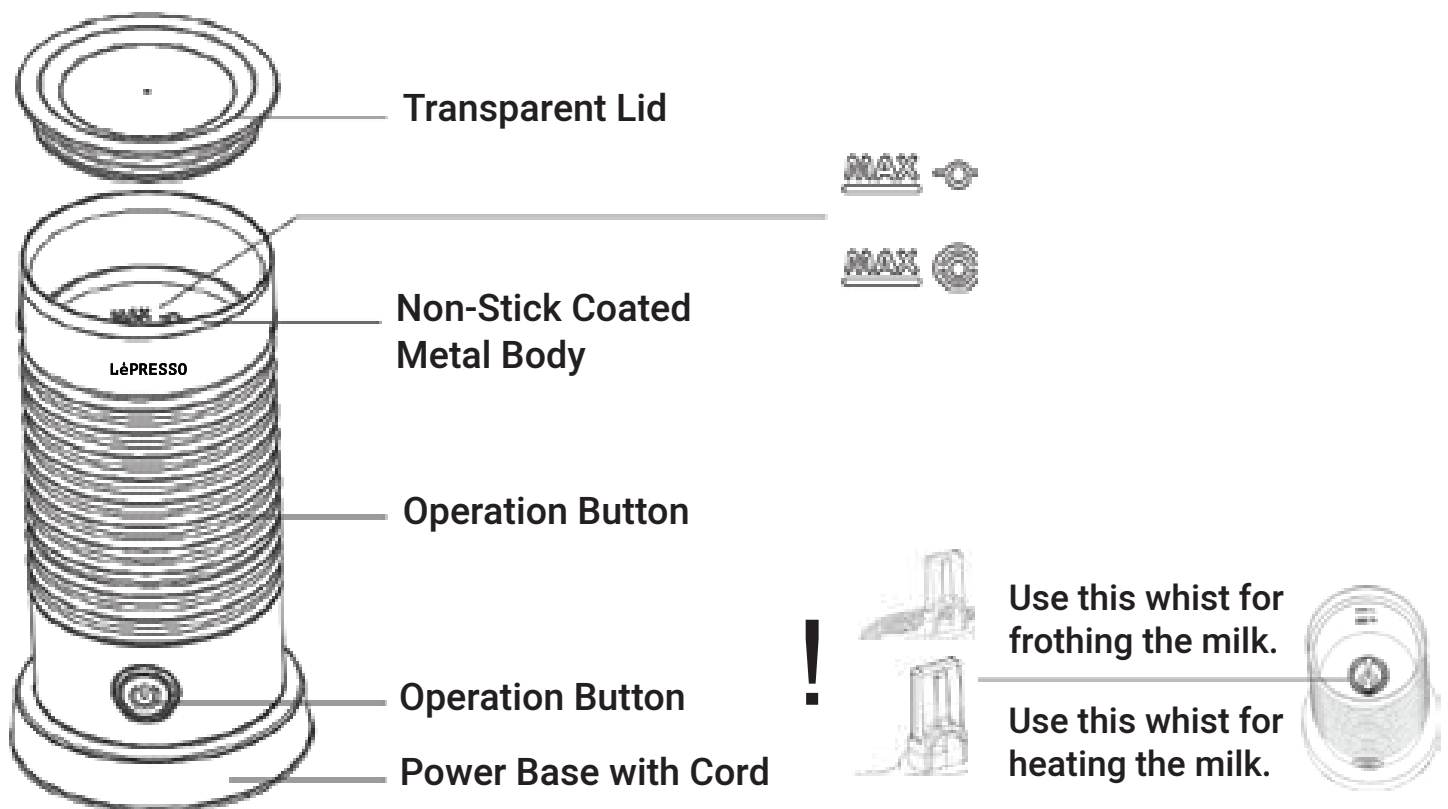

Operating Instructions

Warning: Improper use or handling of the milk frother can lead to potential injury. Always follow the safety instructions in the manual to avoid any harm.


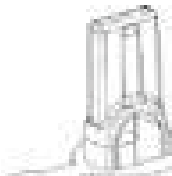
[A] Before the First Use

1. Carefully unpack the box and remove all packing materials from the appliance. Keep the packing materials for later use.

2. Keep the packing materials (such as bags, etc.) out of reach of children for safety.
3. Before using the appliance for the first time, clean the jug and accessories as described in the 'Cleaning and Maintenance' section to remove any dust or production residues.

[B] Operating Step



Whisk	Function	Operation	Minimum Volume	Maximum Volume
	Frothing Cold Milk	Press and hold for 3 seconds	60ml	110ml
	Frothing and Heating	Short-press	60ml	110ml
	Heating with a Little Foam	Short-press	60ml	200ml

1. Select the appropriate whisk and place it inside the jug.
2. Fill the jug with the desired amount of milk, ensuring not to exceed the maximum volume indicated by the marked level to prevent spillage.
3. Activate the appliance by pressing the corresponding button.
4. The machine will stop automatically once the milk is frothed or heated to the desired temperature.

[C] Indicator Instructions

- 1. Standby mode:** After plugging in, the milk frothing button will blink once and then turn off.
- 2. Frothing milk:** Press the button once with the appropriate whisk. The indicator will remain steady red until the process is complete, and the machine will stop automatically. Pour the frothed milk into your cup quickly for the perfect hot drink.
- 3. Heating milk:** Install the appropriate whisk and follow the same procedure as above to heat the milk without frothing.
- 4. Frothing cold milk:** Long press the frothing button for 3 seconds and release when the light turns steady blue. The frother will start working. After approximately 80 seconds, the indicator will turn off, indicating that the milk is properly frothed.
- 5. Stop function:** Press the button again to stop the frothing or heating process at any time.

Hints and Tips

Here are some helpful tips to get the best results from your frother:

- 1.** Always use your frother to froth or heat the milk first. While it's operating, prepare your coffee or hot chocolate and serve immediately.
 - 2.** Use whole milk (fat content 3% to 3.5%) for the best results.
 - 3.** The milk heats to approximately 65°C to 68°C, which is the ideal temperature to preserve the flavor of your coffee and minimize the wait before enjoying your drink.
 - 4.** Keep the whisks in a safe place to prevent them from being misplaced.
- Follow these tips to achieve the perfect frothed milk:
- a.** Non-fat milk creates the largest foam bubbles and is the easiest for beginners. Since there is no fat in the milk, the result is light and airy,

but the flavor will be less rich than other milk types.

b. The 2% to 3.5% milk will foam effortlessly, resulting in a creamier taste compared to non-fat milk.

 
c. Whole milk is more challenging to froth but results in the richest, most decadent tasting cappuccinos.

Recipes for Different Drinks

With frothed milk



Cappuccino: Combine 1/3 espresso with 2/3 frothed milk and top with a sprinkling of cocoa powder.

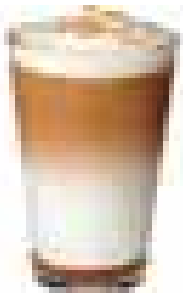

Latte Macchiato: Gently pour the desired amount of frothed milk into a tall glass, then carefully add espresso along the rim of the glass.



Instant coffee drinks: Prepare instant coffee as usual, then add frothed milk for a creamy touch.

With hot milk



Caffè Latte: Mix 1/3 espresso shot with 2/3 heated milk, stirring well.



Hot Chocolate: Combine heated milk with chocolate powder to taste in a large cup.



Instant Milky Coffee: Add hot milk to instant coffee granules and stir until well combined.

Cleaning and Maintenance

Important Note: The surfaces in contact with milk should be cleaned according to the following instructions:

To maintain hygiene and prevent contamination, it's important to clean all surfaces that come into contact with milk, such as the frothing jug, lid, and any accessories, after each use. Gently wipe these parts with a soft cloth or sponge, using warm water and a mild detergent. Do not submerge the appliance in water or any liquid to avoid damaging electrical components. Refrain from using abrasive cleaners or scouring pads, as they could scratch or damage the surfaces. For comprehensive cleaning guidance, consult the instruction manual provided with your milk frother. Regular cleaning will help ensure the device operates efficiently and remains hygienic.

- 1.** Unplug from the power before cleaning and remove the lid from the jug.
- 2.** Never immerse the jug or base in water.
- 3.** Jug & Base: Immediately after use, clean the jug with warm, soapy water and a non-abrasive cloth. Dry with a soft cloth. Avoid using harsh cleaning agents, hard nylon brushes, or metal brushes.

4. Lid: Rinse directly under water.

5. Whisks: Remove from the jug, clean with warm water, dry, and store safely to prevent loss.

Specifications

Rated Power	450W
Rated Voltage	220V-240V
Rated Frequency	50/60Hz
Frothing Capacity	<75ml
Protection Class	I
Power Plug	3pin UK
Product Size	106x195mm
N.W/G.W	680g/760g

Troubleshooting

Problem	Possible Cause	Solution
The indicator light does not work. The machine does not operate.	The plug is not properly inserted into the socket.	Reinsert the plug into the power socket properly.
	The jug and power base are not correctly connected.	Remove the jug and place it again securely on the base.
	There is no power supply in the socket.	Check the electric circuit for any issues.
	There may be issues with the electric components.	Send the appliance to a service center for inspection or repair.
The machine stopped working after powering on.	The jug temperature may be too high for proper operation.	Rinse cold water inside the jug to reduce its temperature.
	The jug has been damaged due to immersion in water.	Send the appliance to a service center for further evaluation.
The motor does not work.	The jug was not cleaned promptly after use, causing milk to clog the mechanism.	Clean and manually move the motor's shaft sleeve to loosen it.
	The motor may be damaged.	Send the appliance to a service center for servicing.

The machine can not heat up the milk.	The machine itself may be damaged.	Send the appliance to a service center for professional assistance.
The machine can not be charged.	The milk dosage may be incorrect, either too little or too much.	Use the appropriate milk dosage as indicated on the dial.
	The jug has been reused without proper cleaning.	Clean the appliance promptly after use.
	The actual voltage is significantly lower than the specified voltage.	Ensure the appliance is connected to the correct voltage.
The milk froth is not as desired.	The milk type or temperature may be incorrect.	Use whole or semi-skimmed milk at refrigerator temperature (approximately 6 to 8°C).
	The wrong whisk was used for the intended operation.	Ensure the correct whisk is used for the intended function.
	The jug was reused without being cleaned properly.	Make sure the jug is properly cleaned before reuse.

Disposal



This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](https://www.instagram.com/lepresso_official)