

PORODO



Porodo

5-Port Travel Block Universal Charger

SKU: PD-FWCH038

Table of Contents

| | |
|----------------------|---|
| Specifications | 2 |
| Features | 2 |
| Plugs and Connectors | 3 |
| Instructions for Use | 4 |
| Universal Plug Guide | 5 |
| Compatible Devices | 6 |
| Applicable Outlets | 7 |
| Caution | 7 |
| Disposal | 8 |
| Warranty | 8 |
| Contact Us | 8 |

Specifications

| | |
|----------------------|---|
| Rated Voltage | AC 100-250V |
| Rated Frequency | 50/60Hz |
| Rated Power | 2500W MAX |
| Type-C1 Output | 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A, PD 65W Max |
| Type-C2/C3/C4 Output | 5V/3A, 15W Max |
| USB-A Output | 5V/3A, 9V/2A, 12V/1.5A, 18W Max (QC3.0) |
| Total USB Ports | 4 USB-C, 1 USB-A |
| Fuse Protection | Built-in 10A Fuse + Spare Fuse |
| Supported Plugs | UK, EU, US & AU Plugs |
| Product Size | 51×58×73mm |

Features



BS1363
Fuse



Baby-proof
outlet



All-In-One
Plugs



Worldwide
compatibility




10A Max
AC Output




Single plug
not allowed

1. Compatible with Over 150 Countries – Supports US, EU, UK, and AUS plugs.
2. Built-in Safety Shutters – Protects users from direct contact with live socket parts.
3. Single Plug Selection – Only one plug type can be used at a time. Other plug pins remain locked automatically when selecting a plug using the knob.

Plugs and Connectors

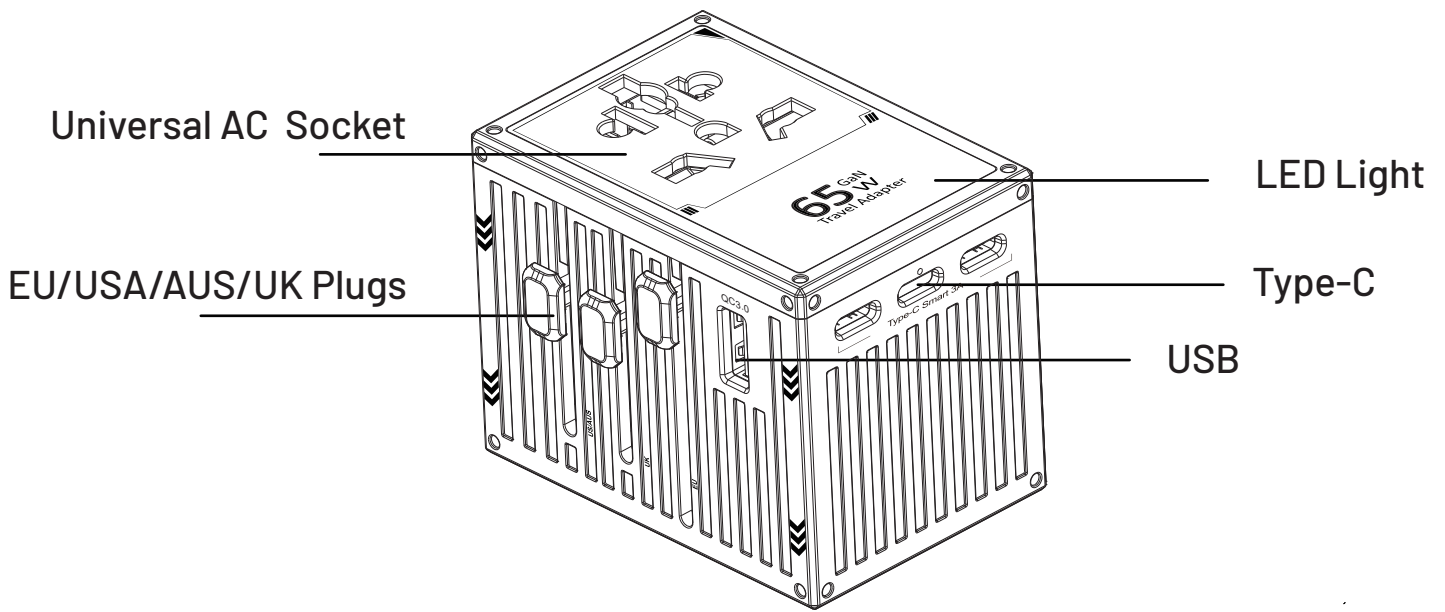


1. When plugged into a wall socket, the power indicator should light up, indicating that AC power and USB are operational.
2. This product may not be compatible with high-power appliances such as hair dryers. Check your appliance label to ensure it requires less than 10A.

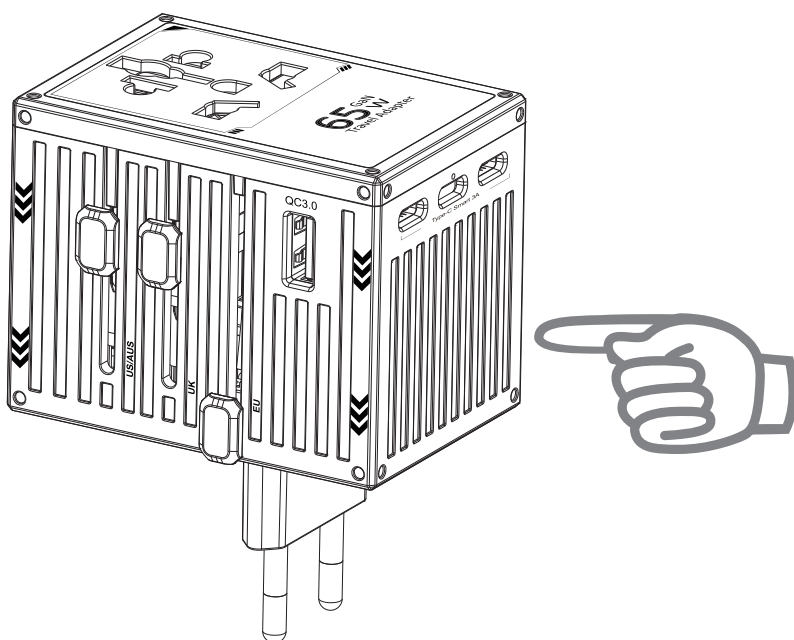


Press and hold the buttons to release the plugs. Use only one plug at a time

Instructions for Use

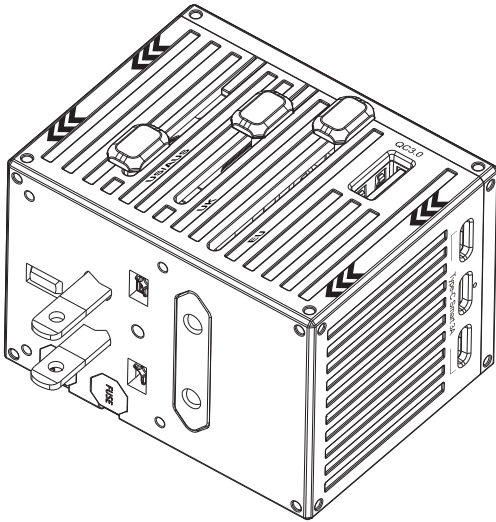


USA

Press and hold the button, then push out the USA plug to use.

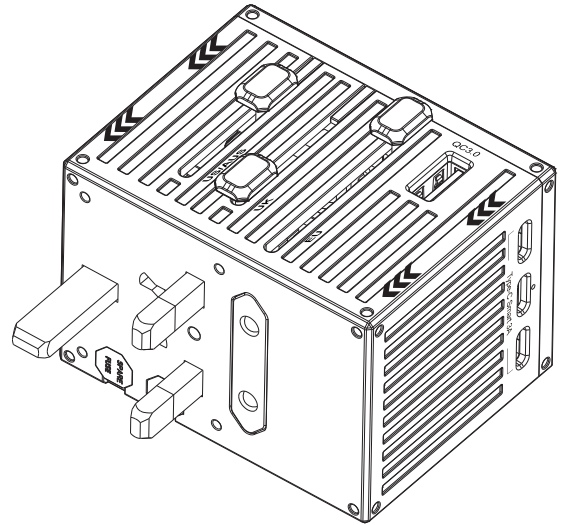


United Kingdom

 Press and hold the button, then push out the UK plug to use.

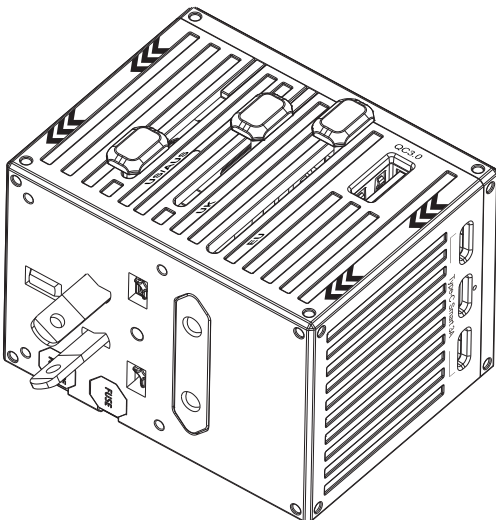

Australia / New Zealand

 
Press and hold the button, then push out the AUS plug to use.

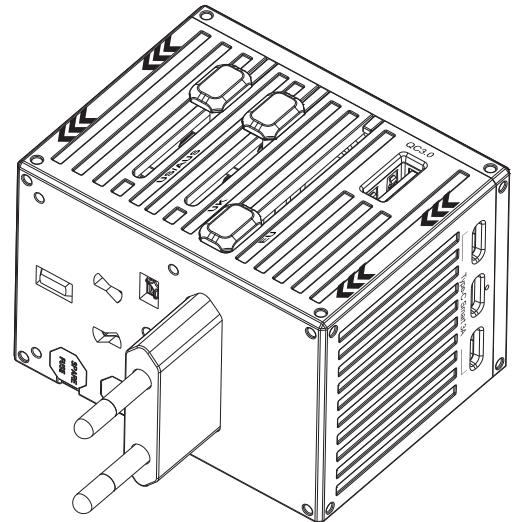

Europe


Press and hold the button, then push out the EU plug to use.

 Universal Plug Guide

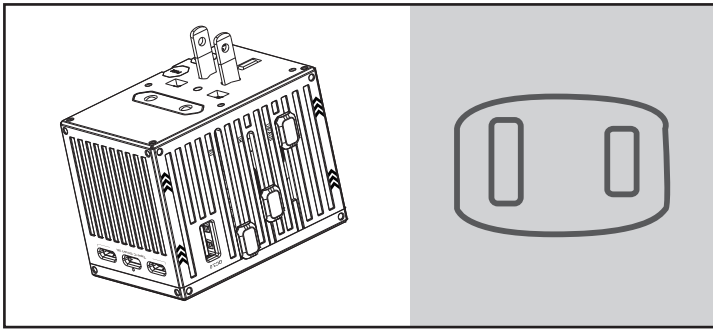


Type A

 Used in USA and Japan, 2-pole, unearthed.

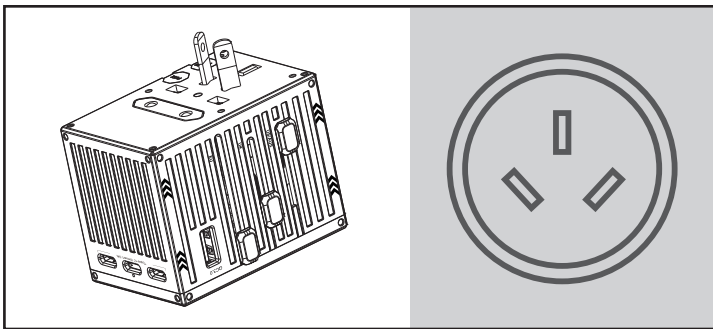


Type I

 Used in Australia, 2-pole, unearthed.

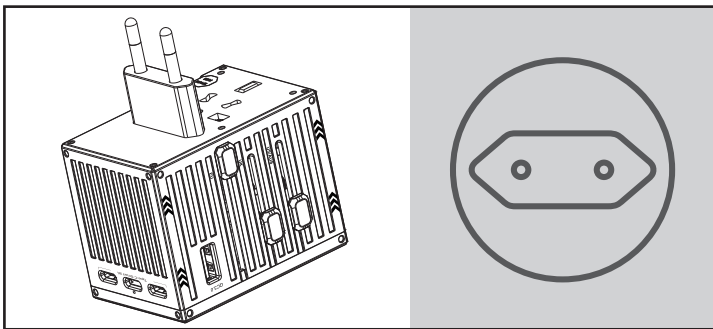

Type C

 Used in Korea and Germany,
2-pole, unearthed.

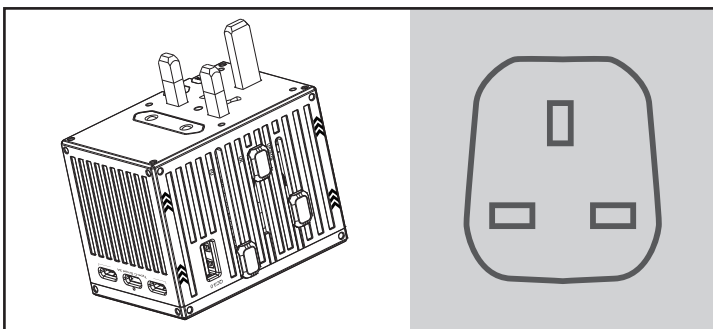

Type G

Used in the UK, 3-pole, earthed.

 
Compatible Devices



Laptop



Hair Dryer

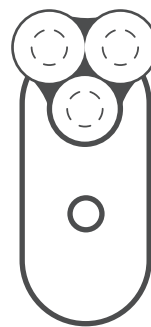

Electric
Razor



Hair
Straightener

 
 
MP4/MP3



Mobile Phone




PSP

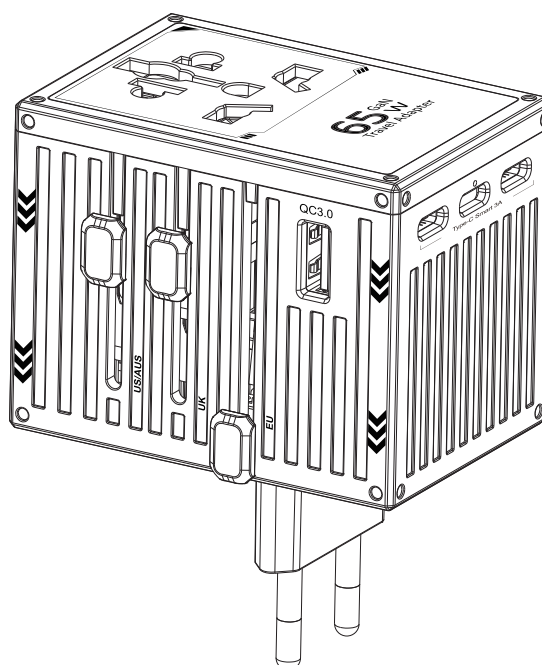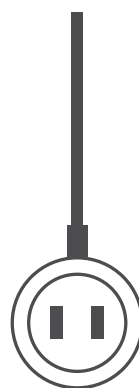


Note: This product may not be compatible with certain high-power appliances. Please check the plug's specifications before connection.

Applicable Outlets

 
Plug into Type A, B, C, D, E, F, G, I, J, K, N, and O outlets.




Type A

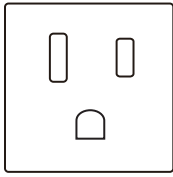 


Type B

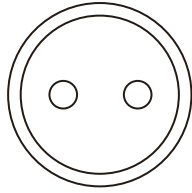 


Type C

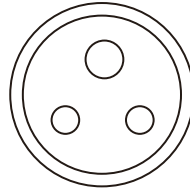 


Type D

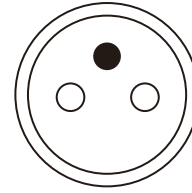 


Type E

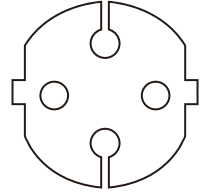 


Type F

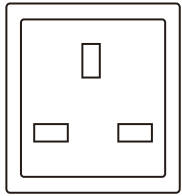 


Type G

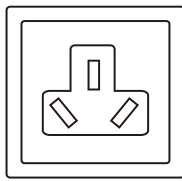 


Type I

 


Type L

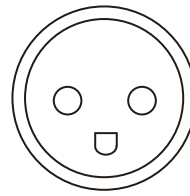 

Type J

 

Type K

 

Type N

Caution

1. Before use, please read these instructions carefully.
2. This product does not convert voltage (AC-AC). To prevent potential damage to your devices or other safety hazards, ensure proper voltage compatibility.
3. Verify that the power outlet provides the correct voltage for your devices before using this adapter.
4. Never touch any metal part of the adapter while in use.
5. If the adapter breaks, becomes deformed, or has a loose pin or connector, discontinue use immediately. Never force a device into the adapter or the adapter into an outlet.
6. Ensure that the power outlet you intend to use matches the required voltage for your devices before plugging in the adapter.
7. Each country has its own regulations regarding travel adapters. Check local guidelines before use.
8. This product is not grounded and is intended for use only with ungrounded or double-insulated appliances.

Disposal

Discarding electrical products with household waste is not permitted. Please recycle them at designated facilities. Contact your local authority for proper recycling guidelines.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**