

# **PORODO** **LIFESTYLE**



## **Porodo Lifestyle**

### **Nut Milk Maker**

**SKU: PD-LFST059-BK**

# Table of Contents

Product Overview	2
Control Panel	2
Specifications	3
Usage Instructions	3
Functions and Precautions	4
Troubleshooting	5
Maintenance and Cleaning	6
Precautions	7
Tips	9
Disposal	9
Warranty	10
Contact Us	10

# Product Overview



## Control Panel

### Function Buttons:

Vegetable Soup, Porridge, Fruit Blender, Nut Milk, Lentil Soup, Peel/Break Skin, Keep Warm, Auto-Clean

Delay Start: To preset function starting time.



Menu: For selecting different functions.

Start/Cancel: For starting or canceling the function.

# Specifications

Rated Voltage	220-240V
Rated Frequency	60-50Hz
Capacity	1.5L
Heating Power	600W
Blending Power	400W
Power Plug	UK 3-Pin Plug

# Usage Instructions

## Operation

1. Insert the power plug into the socket (the display will light up and the function indicator will flash for about 1.5 seconds). The machine will enter standby mode, and the function indicator will turn off, displaying a “-” on the screen.
2. Press the "Start/Cancel" button to display the menu and turn on the function indicator.
3. Press the "Function" button to enter the function selection mode (the function indicator will light up). Each time the "Function" button is pressed, the options such as Soya Milk, Juice, Rice Porridge, Rice Paste, Fish Soup, Wall Broken, Keep Warm, and Auto Clean will be shown in sequence. Select the desired function and press the "Start/Cancel" button to enter work mode.
4. If no action is taken within 30 seconds after selecting the function, the machine will automatically return to standby mode.

## Digital Display

1. For the functions Soya Milk, Juice, Rice Porridge, and Fish Soup, the display will show "1" or "111", and the function indicator will flash.

2. During the countdown, the "Keep Warm" function will show the preset temperature of 55°C (when the temperature is set to 55°C).
3. Press the "Start/Cancel" button to begin, and the actual temperature will be displayed (e.g., "95" indicates the temperature of 95°C).
4. For the wall break function, Fruit Juice, and Auto Clean functions, the display will show the countdown after activation.

## Preset Function

**Note:** The Keep Warm, Juice, and Wall Broken functions cannot be preset. All other functions support preset timing.

1. Connect the power and press the "Start/Cancel" button to turn on the display.
2. Press the "Preset" button to enter the preset settings (add 1 hour at a time). The maximum preset time is 12 hours, displayed as 1h (60 minutes), 2h (120 minutes), or 3h (180 minutes).
3. Press the "Function" button to select a function (for example, Soya Milk).
4. Press the "Start/Cancel" button to begin the preset countdown.
5. If a function has already been selected, but you need to cancel the preset, press "Start/Cancel" again to

## Plateau Detection

If the machine is used in a high-altitude area, follow these steps:

1. Fill the inner pot with water up to the highest maximum line.
2. Close the lid and connect the power.
3. Press and hold the "Start/Cancel" button for a few seconds.
4. When the display shows "hh", press "Start/Cancel" again.
5. Once the process is finished, the

## Functions and Precautions

1. Adding too much water or soybeans may cause overflow and reduce efficiency.
2. Do not open the lid during the operation process to add ingredients, as this may cause localized damage.


# Troubleshooting

1. Do not overfill with water or ingredients to prevent splashing or scalding.
2. Do not open the lid while the machine is operating to avoid splashing or scalding.


Function	Instructions	Ingredients	Remark
Soy Milk	1. Put 70g of ingredients into the inner container. 2. Fill with water up to the maximum water line (1000ml).	Dry Soy	Involves heating and blending process.
Juice	1. Put cut fruit (less than 220g) into the inner container. 2. Add some water or milk into the inner container. 3. Do not exceed the maximum water line (1300ml).	Apple, Mango, Strawberry, Watermelon, Pineapple, Grape, etc.	1. Fill water or milk over all ingredients; this is recommended. 2. Involves blending process.
Rice Porridge	1. Put 70g of rice into the inner container. 2. Fill with water up to the maximum water line (1000ml).	Rice, Millet	Involves heating and blending process.
Rice Paste	1. Put 80g of washed ingredients into the inner container. 2. Do not exceed the maximum water line (1300ml).	Rice, Sesame, Walnut Kernels, Barley, Cooked Peanuts, etc.	Involves heating and blending process.
Fish Soup	1. Put 80g of boneless fish (less than 100g) into the inner container. 2. Add water, do not exceed the maximum water line (1000ml).	Boneless Fish	Involves heating and blending process.
Wal Breaking	Ingredients should be less than 200g.	Roasted dry peanut, Roasted dry soy	Involves heating and blending process.
Keep Warm			
Auto Clean	Add water to the maximum water line (1300ml).		

Error Code	Possible Cause	Solutions
Indicator off light	1. Power plug not plugged in. 2. Lid cover not properly placed.	1. Check the plug. 2. Cover the lid properly.
Machine Not Working	1. Function not selected 2. Product defect 3. Motor overheating protection	1. Correctly select the function. 2. Contact the service center. 3. Reset after 30 minutes.
Control Panel Not Working	Lid hasn't aligned with the arrow	Close the lid as required and align the indicating sign.
E1	NTC Short Circuit	Contact the service center.
E2	NTC Short Circuit	Contact the service center.
E3	Dry heating, high temperature code	Stop working and turn off the power.
Food has thick residue, overflow	Incorrect function selected	Select the correct function.
	Too much food or too little	Ensure ingredients are measured according to the manual.
	Machine not working (NG)	Contact the service center.
Burnt on bottom	The container was not cleaned properly	Clean the container.
	Too much ingredient is in the container	Ensure ingredients are added according to the recipe


## Maintenance and Cleaning

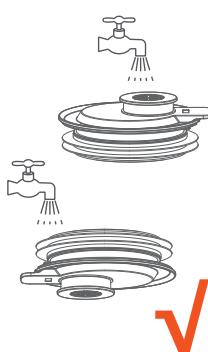

A: Correct Method  
The inside and lid can be washed directly.

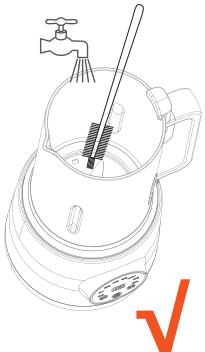

B: Correct Method  
The glass jar and blades can be cleaned with a brush.

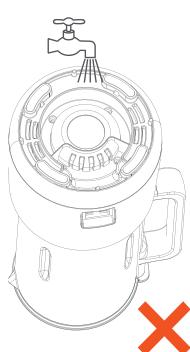

C: Wrong Method  
The bottom part of the machine should not be washed with water.

1. Before cleaning, please unplug the machine.
2. Do not unplug the machine if your hands are wet to avoid the risk of shock.
3. Do not immerse the product in water for cleaning.
4. Do not use steel wool or any highly corrosive material to clean the machine.
5. Due to the minerals in water, scale may build up at the bottom of the inner pot after extended use. Although this won't harm our health, it can increase heating time and cause more noise.
6. To clean the scale, add some lemon slices and water to the inner pot and start boiling the water. Once the water has boiled, let it sit overnight.
7. Empty the pot and clean it again with water the following days.

## **Precautions**

To prevent accidents such as electric shock, fire, burns, etc., please follow these precautions:

1. Clean the cup, blade, and cover regularly. The blade has a sharp edge, so be cautious when wiping and cleaning. Always wear protective gloves.
2. When the product is boiling or after the work is completed, the inside of the cup, the upper cover, the blade, and other parts will be very hot. Please avoid touching these parts to prevent scalding.
3. Never plug or unplug the power cord with wet hands to avoid electric shock.
4. During the pulping process, avoid opening or moving the product quickly to prevent scalding from steam or electric accidents caused by overflowing food materials.
5. Never lift the entire machine by the cover to prevent the cup body from slipping off.
6. Do not use damaged power cords or plugs. Using damaged cords could lead to electric shocks or short circuits. Only use special replacement power cords for safety.
7. Do not add hot water above 70°C to make slurry, as this may affect the taste, cause poor crushing, slurry overflow, or other issues.
8. Do not drink the product until the pulping is completed. Drinking uncooked

soy milk may be harmful to your health.

**9.** Do not immerse the machine in water or splash water on it. Avoid getting water in the power socket and the bottom of the cup. If water enters, stop using the product and dry it thoroughly before use to prevent electric shock or a short circuit.

**10.** Children should be supervised to prevent them from playing with or getting close to the product, to avoid personal injury from burns or misuse.

**11.** The product should only be used by individuals under the supervision of a guardian or coach if they are prone to abnormal behavior or lack independence.

**12.** Before use, ensure that the local power supply matches the voltage specified on the product to prevent damage or fire hazards.

**13.** Operate the product on a stable platform, keeping it away from the edge to prevent tipping.

**14.** Do not use the product under or near curtains or other flammable materials, as this may cause a fire.

**15.** Ensure the lid is properly rotated and fastened to the cup body, and the power cord is securely plugged into the electric socket to avoid loosening, power failure, or overheating.

**16.** When the product is in use, keep a safe distance from live objects such as power sockets, and keep it away from flammable and explosive materials. Ensure that the grounding wire of the power socket is properly grounded.

**17.** If a power outage or other abnormality occurs while the product is working, replace the ingredients and re-make the product to avoid issues like bottom paste, slurry overflow, and malfunction.

**18.** After production is complete, turn off the power first, and then pour the slurry to avoid electric shock due to the movement of the cup body and the inaccessibility of the wires.

**19.** The freshly-made beverage is likely to be very hot. Please use high-temperature utensils to avoid scalding.

**20.** If you need to filter the beverage, be cautious of the high temperature of the residue on the filter. When cleaning the filter, avoid facing it toward people and handle it with care to prevent burns from the hot residue.

## K Tips

1. This product is intended for household use only. Do not use it for commercial purposes.
2. Some ingredients contain natural pigments that may cause staining on the upper lid. This is a normal occurrence and does not affect the drink. Feel free to enjoy it without concern for your health.
3. To fully crush and release nutrients, it is normal to hear intermittent fast and slow sounds while the machine is operating.
4. Do not use the product for continuous pulping for long periods. The motor may activate the automatic protection function and temporarily stop working. It can be used again once the motor has fully cooled down.

## K Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**porodo.net/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**