

PORODO



Porodo

**Folding Urban Electric Bike
with Pedal Assist System**

SKU: PD-LFST083

Table of Contents

Specifications	2
Product Overview	2
Bike Handle	3
Instruction for using	3
A. Power On	3
B. Driving the Bike	3
Notes on Riding	4
Charging Guide	4
Maintenance and Care	5
FAQ	5
Precautions	5
Disposal	6
Warranty	7
Contact Us	7


Specifications

Rated Voltage	220-240V 50Hz
Charging Input	42V/1.5A
Recharge Time	6h
Motor	36V, 350W
Battery	7.5Ah
Brakes	Rear and Front
Tires	14"
Lights	Front Light, Taillight
Max Loading	120kg
Max Distance	25km
Max Speed	25km/h
Incline	15°
Dimension	50.5x105x110cm
Net Weight	24kg

Product Overview



Bike Handle

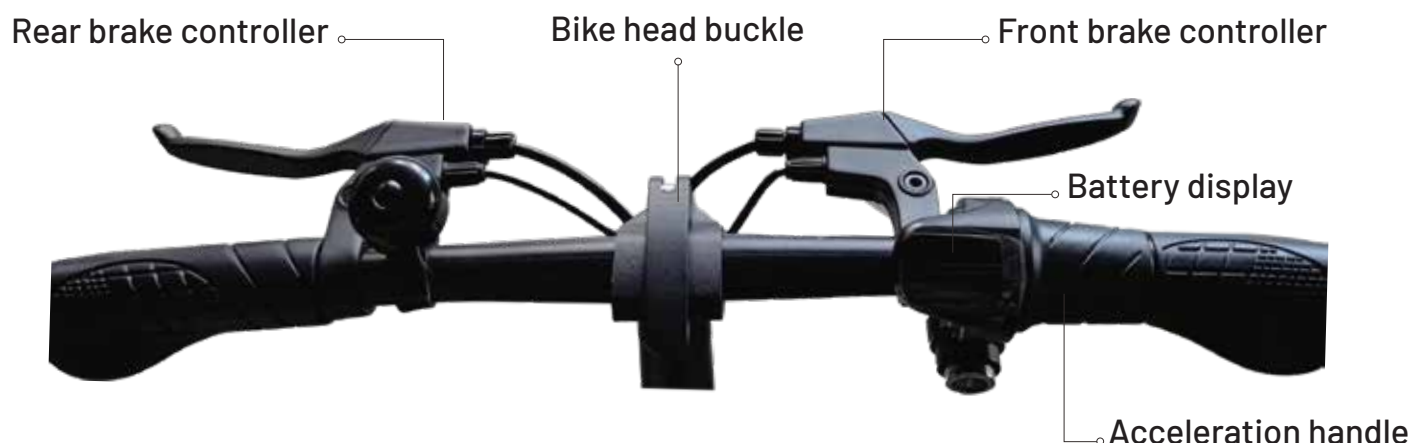

Instruction for using

A. Power On

Turn the power button to "ON", then the LED screen will display power, indicating that it is turned on.

B. Driving the Bike

B.1 Pure electric mode

Turn the throttle handle counterclockwise, and the vehicle will start moving. The more the handle rotates, the faster the speed.

B.2 Assist distance mode

The electric bike features a pedal function. When the power is on, it will be easier to ride using the pedal, making riding more comfortable.

B.3 Hints

For your driving safety, please ensure the following checks before riding:

- 1.** Check whether the tire casing is worn or cracked and if the front and rear tire pressures are appropriate.
- 2.** Ensure the front and rear wheel screws, bike head buckle, sitting pipe buckle, and folding snap are securely locked.
- 3.** Confirm that the drive system is smooth and the brakes are responsive.
- 4.** Verify that the footrest is properly installed in place.

Notes on Riding

- 1.** The maximum loading capacity of this bike is 120 kg. Please do not exceed this limit.
- 2.** The controller of the bike is equipped with an overload protection function. When overloaded, the power will automatically shut off. Once the vehicle returns to normal, the power will turn back on automatically.
- 3.** When starting the bike, accelerate slowly to avoid excessive starting current and unnecessary power consumption.
- 4.** Avoid riding on uneven, muddy, or gravel roads to prevent damage caused by tire blasting and rim deformation.
- 5.** Do not apply oil to the brakes, as this may cause them to become ineffective and lead to danger.
- 6.** Do not use the front brake abruptly when riding downhill or at high speed, as it may shift gravity forward and cause danger.
- 7.** Turn off the power if there is electricity but the bike cannot move to prevent damage to the appliance.

Charging Guide

- 1.** When charging, the indicator light on the charger will turn red. Once the battery is fully charged or not charging, the light will turn green.
- 2.** This charger features double overcurrent protection. Long-term charging (not exceeding 12 hours) will not harm the battery or charger, but it is not recommended to charge for extended periods.
- 3.** Do not use other brands of chargers for this battery. Similarly, do not use this charger for other types of batteries.
- 4.** Prevent liquid and metal particles from entering the charger during use or storage to avoid safety issues.
- 5.** Charge in a dry, well-ventilated environment.
- 6.** Place the charger in a safe location away from children while charging. Do not cover the charger.
- 7.** The charger contains a high-voltage circuit. Do not disassemble it.

Maintenance and Care

1. When the battery is fully depleted, recharge it promptly to extend its lifespan.
2. If the bike is not used for a long time, charge the battery regularly (approximately every three months) to maintain its condition.
3. Do not rinse the bike with water, as it may damage internal electronic components and wiring.
4. Use a neutral detergent to gently wipe the paint or plastic parts with a rag, then use a dry cloth to finish.

Tips: Most batteries perform best at a temperature of 20°C. If the temperature drops below 0°C, battery capacity may decrease by up to one-third. Reduced driving range in cold weather is normal. Once the temperature rises above 15°C, the battery's function will naturally recover.

FAQ

1. Why can't the power switch start?

There may be no power in the built-in battery. Please charge the bicycle.

2. Why does the bicycle automatically cut off power after starting up or riding?

- The battery is exhausted. Please charge the bicycle.
- The maximum load has been exceeded. Please reduce the weight.

3. Why do you feel unstable when riding?

- Check whether the front and rear tire pressure is appropriate.
- Ensure that the front and rear wheel screws, head buckle, sitting pipe buckle, and folding snap are securely locked.

4. Why do you hear an abnormal noise when braking?

- Check the disc or disc brake for foreign objects such as water stains or oil stains.

Precautions

1. Do not disassemble, modify, or repair this product yourself.
2. Do not intentionally knock, beat, or puncture the product to avoid unnecessary damage.

3. Do not ride on bumpy, slippery roads or motorways to prevent safety problems.
4. Avoid riding through water to prevent liquids from entering internal components.
5. Do not make sharp turns at high speeds or on slopes to avoid dangerous situations.
6. Do not overload or overspeed to prevent damage to the product and safety risks.
7. Do not store the product in wet, high-temperature, or oily environments to prevent rust or damage to internal parts.
8. If the product has quality issues, contact the local dealer or designated repair center promptly.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**