

PORODO
LIFESTYLE



Porodo Lifestyle
Eye Massager
with Intelligent Tapping

SKU: PD-LFST105

Table of Contents

Danger	2
Caution	2
Specifications	3
Package Contents	3
Product Overview	4
Instructions for Use	4
Bluetooth and Heating Instructions	5
Wearing Method	6
Charging Instructions	6
Troubleshooting	7
Maintenance and Storage	8
Material Contents	9
Disposal	10
Battery Safety Warning	10
Warranty	11
Contact Us	11

Danger

Before using this product, carefully read and follow the operating instructions provided in the User Manual. The company is not liable for any consequences resulting from improper use or failure to adhere to the instructions.

- 1.** Do not use this product after applying makeup, as it may disrupt your makeup and cause cosmetic residue to affect the skin. If contamination occurs, clean the skin with water.
- 2.** Operate this equipment within a temperature range of 0°C to 35°C and store it within -20°C to 45°C. Extreme temperatures may lead to equipment malfunction.

Caution


- 1.** Do not use this product while driving, as it may block your vision and cause accidents.
- 2.** Keep it away from water and fire to prevent damage or hazards.
- 3.** Avoid using the product in places with high heat, humidity, or strong electronic signals.
- 4.** Do not open or take apart the device. If it doesn't work, contact customer support.
- 5.** Never plug or unplug the charger with wet hands to avoid electric shock.
- 6.** Not suitable for people with heart problems, high or low blood pressure, or those who have had eye surgery.
- 7.** Do not use if you have eye conditions like glaucoma, cataracts, or red-eye disease.
- 8.** Avoid use if you have a high fever, cancer, stroke, or osteoporosis.
- 9.** Before using, remove contact lenses, hair clips, or anything around your eyes to avoid discomfort.
- 10.** This is a personal care massage device, not a medical treatment.
- 11.** If you have sensitive skin or allergies, ask a doctor before using.
- 12.** Stop using immediately if you feel any discomfort.
- 13.** Use this product only for massage, as described in the manual.
- 14.** The product has a heating surface, so be careful if you are sensitive to heat.

- 15.** Made of silica gel. Do not use if you have a silica allergy.
- 16.** Contains a lithium battery. Do not open, modify, or throw it in fire.
- 17.** When disposing of this product, follow local waste rules to protect the environment.


Specifications

Rated Power	6W
Battery Capacity	3.7V 1200mAh
Charging Port	Type-C
Charging Voltage	5V 2A
Working Time	3H
Working Cycle	15min (Auto Power Off)
Weight	210g
Product Size	71×72×190mm


Package Contents

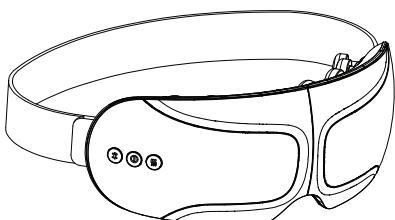

Eye Massager

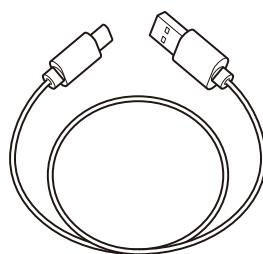


Type-C Charging Cable

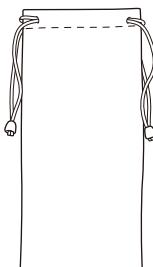

Pouch

Product Overview

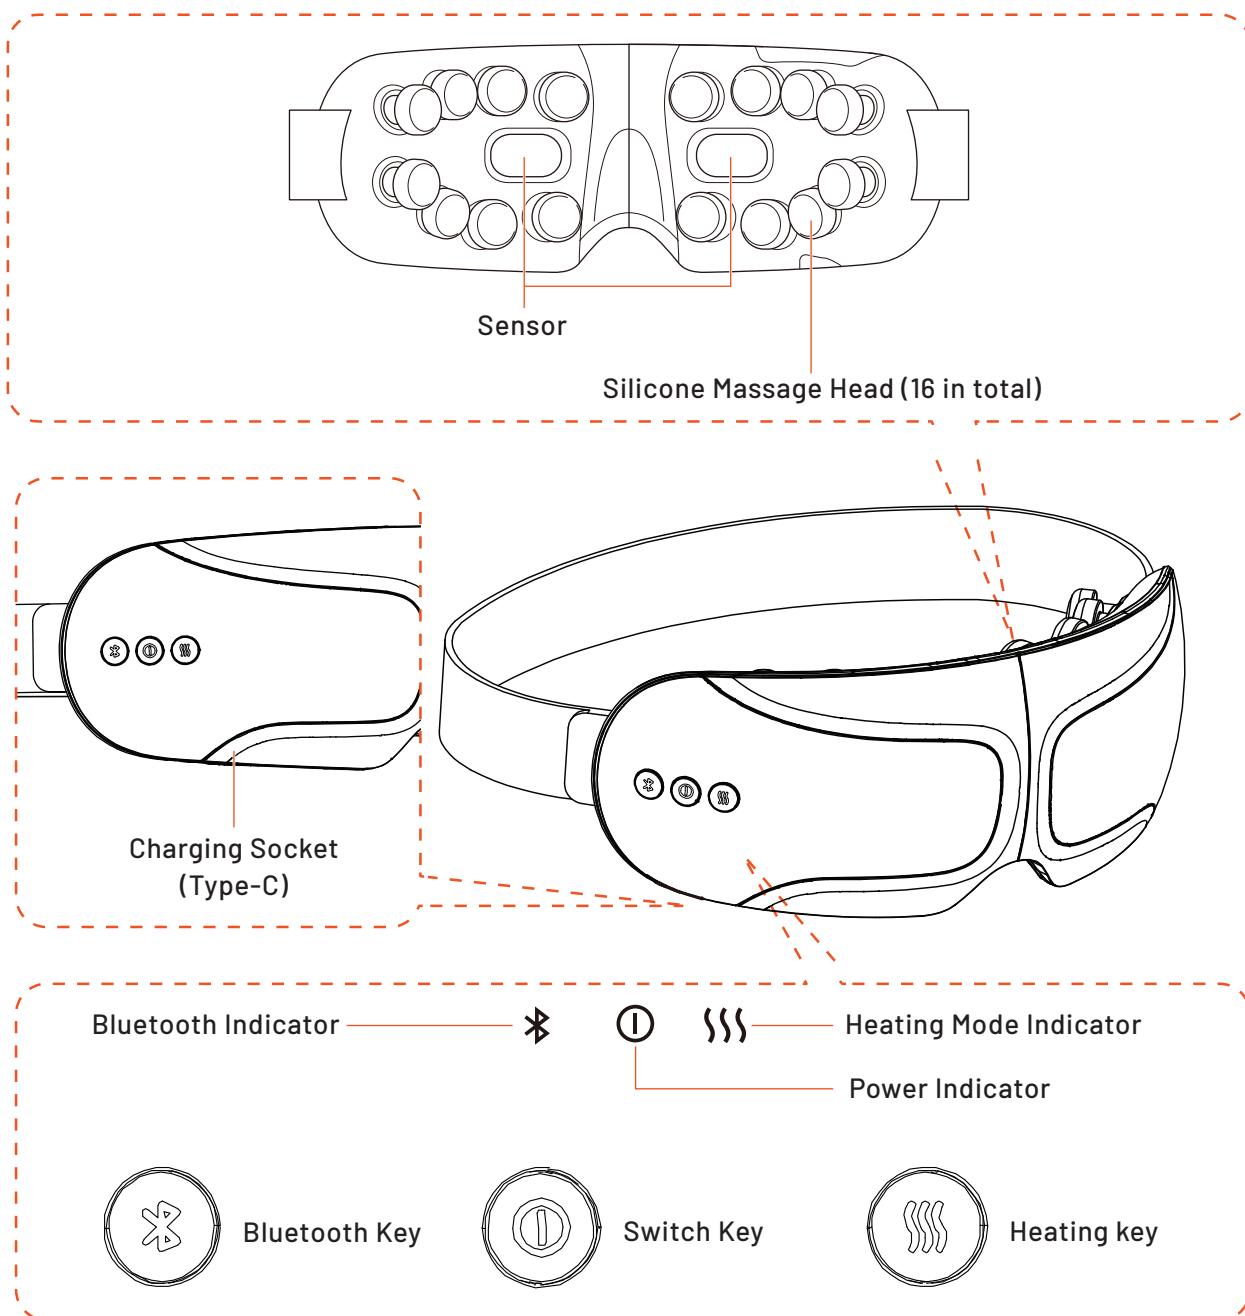

Instructions for Use

1. Press and hold the (○) key to power on the device. The indicator above the key will remain illuminated once the device is activated.
2. Short press the (○) key to switch massage modes. The default mode is Relaxation Mode, with the eye hot therapy function enabled.
3. The eye massager offers five distinct massage modes: Relaxation Mode, Eye Beauty Mode, Sleep Mode, Comprehensive Mode, and Heating Mode.

Mode 1: Relaxation Mode – Features vibration, music, and eye hot therapy. A voice prompt announces the activation of Relaxation Mode.

Mode 2: Eye Beauty Mode – Includes vibration, music, and eye hot therapy. A voice prompt announces the activation of Eye Beauty Mode.

Mode 3: Sleep Mode – Provides vibration, music, and eye hot therapy. A voice prompt announces the activation of Sleep Mode.

Mode 4: Integrated Mode – Incorporates vibration, music, and eye hot therapy. A voice prompt announces the activation of Integrated Mode.

Mode 5: Heating Mode – Operates with hot therapy only, without vibration or music. A voice prompt announces the activation of Heating Mode.


Bluetooth and Heating Instructions

Short press the (*) key to toggle music on or off.

Short press the (\$\$\$) key to activate or deactivate the heating function.

(**Note:** The (\$\$\$) key cannot be used in Heating Mode.)

Long press the (*) key to enable Bluetooth mode. The Bluetooth name of the device is "3D EYE MAGIC TAPPING". Once Bluetooth is enabled, it can be detected on a mobile phone.

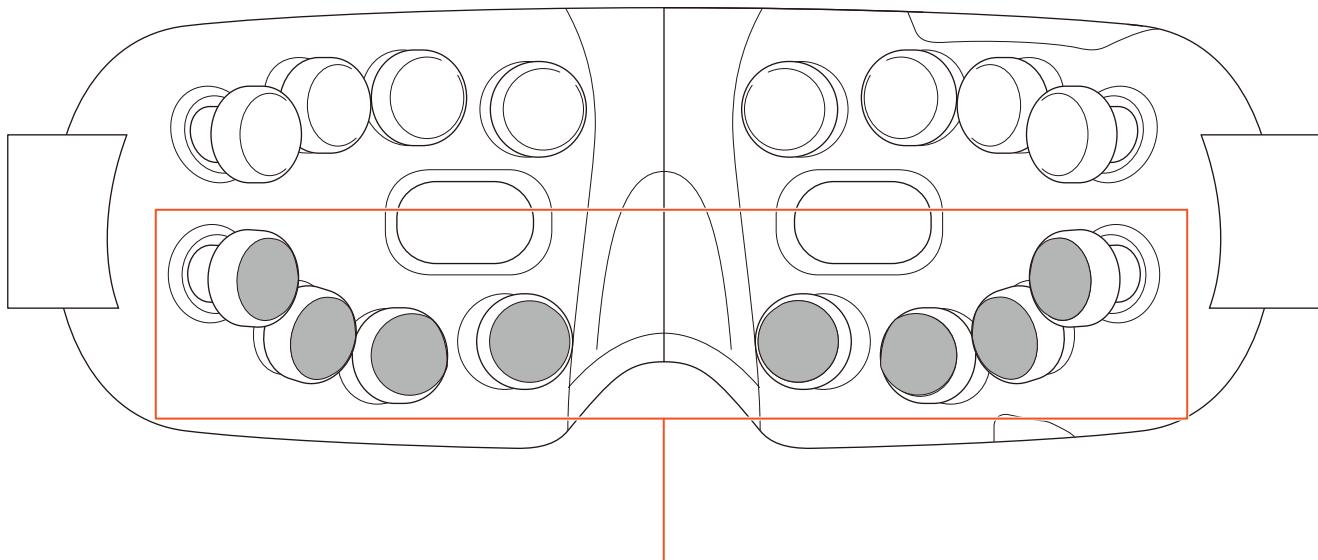


Note:

1. The default operating time is 15 minutes.
2. To extend the usage time, restart the device after it powers off.

K Product Overview

Before use, align the massage head with your eyes and adjust the elastic belt to a comfortable position before turning on the device. The elastic belt adjustment method is illustrated.

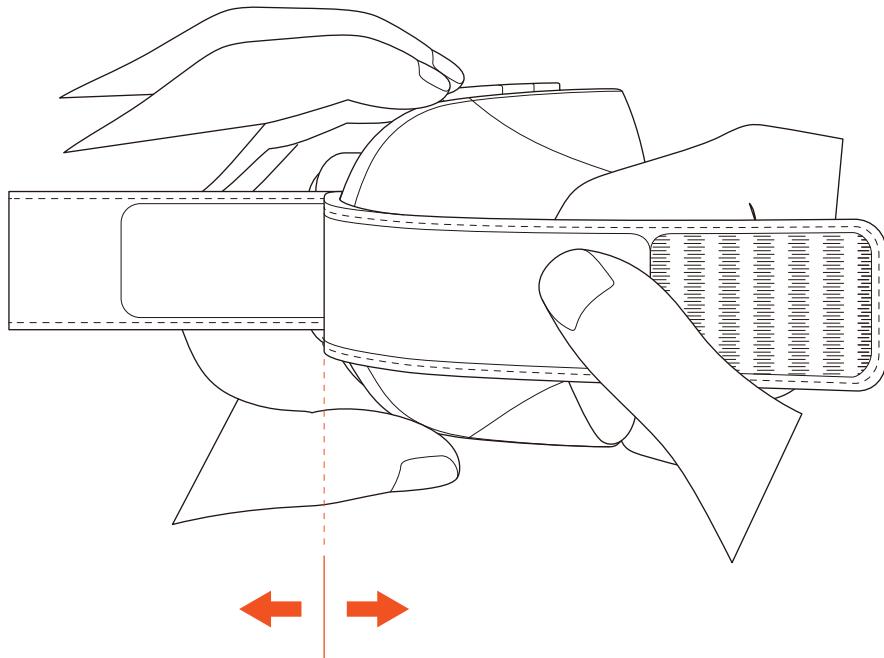


K Charging Instructions

If using the device for the first time or after a long period of inactivity, follow these steps to charge it:

1. Connect the provided USB cable to the charging socket located on the bottom left side of the device.
2. Plug the USB cable into a power adapter and connect it to a power source.
3. Once charging begins, the red indicator light above the power switch will flash.
4. When fully charged, the indicator turns solid blue and automatically switches off after an additional 3 minutes. Unplug the device after it is fully charged.

Note:

1. Do not use the device while charging.
2. The blue indicator will flash when the battery level is low. Charge the device promptly when this occurs.

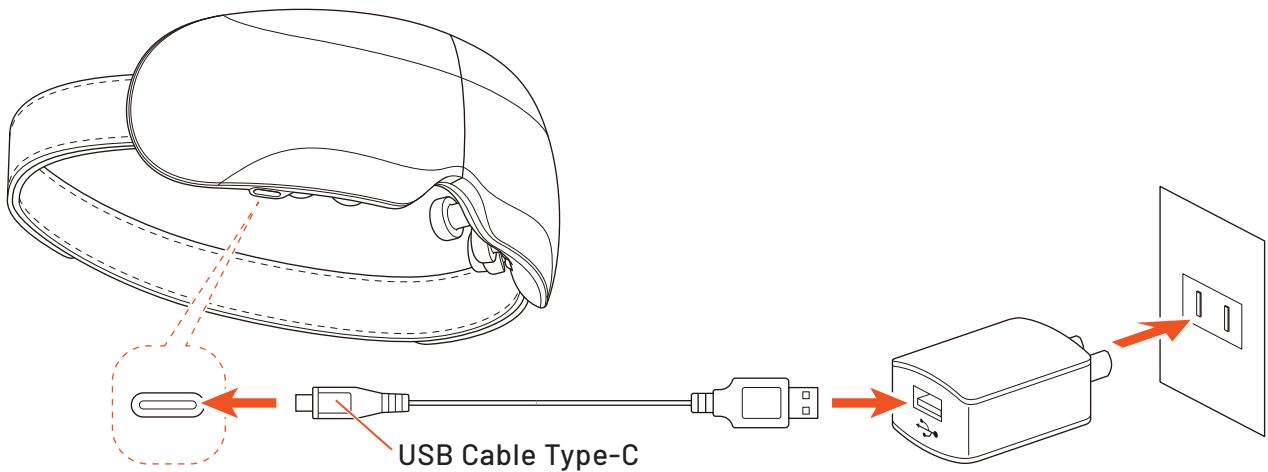

K Troubleshooting

Problem	Possible cause and Solution
Device does not start after pressing the power button.	<ol style="list-style-type: none"> 1. Ensure that the device has sufficient power before operation. 2. Verify that the power button is pressed and held for at least one second to properly start the device.
Unable to charge or experiencing short battery life.	<ol style="list-style-type: none"> 1. If the device does not start in extreme temperatures, charge it in an environment between 10°C - 40°C. 2. Check that the USB cable and power adapter are properly connected. 3. When using the device for the first time or after long periods of inactivity fully charge it before use. 4. The device cannot be charged while powered on. Turn it off before charging.
Device stops unexpectedly during use.	<ol style="list-style-type: none"> 1. The device automatically shuts off after 15 minutes of use, which is normal. Restart it if continued use is required. 2. If the eye massager is in a low-power state, charge it before use.
Bluetooth pairing issues.	<ol style="list-style-type: none"> 1. Ensure that the distance between the device and the Bluetooth device is less than 1 meter. 2. Confirm that the Bluetooth function on your Bluetooth device is enabled. 3. For additional Bluetooth settings, refer to the user manual of the Bluetooth device.
No sound after establishing a Bluetooth connection.	<ol style="list-style-type: none"> 1. Increase the volume of the Bluetooth device. 2. Ensure there are no obstacles between the device and the Bluetooth device, and keep them close to each other.

Distorted sound, noise, or Bluetooth connection interruptions.	1. Lower the volume of the Bluetooth device if necessary.
	2. Avoid microwave ovens, wireless routers, TVs, radios, and other electronic devices that may interfere with the Bluetooth signal.
	3. Turn off the equalizer settings on the Bluetooth device.
	4. Make sure the device is near the Bluetooth device for a stable connection.
	5. Confirm that both the device and the Bluetooth device are fully charged.

Note: If the issue persists after following the troubleshooting steps, turn off the device and contact service center for further assistance.

Maintenance and Storage Instructions

A. Maintenance Method

1. Always unplug the power cable or cord before performing maintenance.
2. Do not use detergents, thinners, gasoline, or other chemicals for cleaning.
3. When the device becomes dirty, wipe it with a dry soft cloth or towel. Do not wash it with running water or other liquids.
4. After each use, clean the massage head. If it is particularly dirty, use a soft cloth dipped in a small amount of medically approved cleaner to wipe or disinfect it.
5. Do not disassemble, repair, or modify the product without authorization to prevent accidents or malfunctions.

B. Storage Method

1. Unplug the power supply before storing the device.
2. Keep the product away from damp areas and direct sunlight.
3. If not in use for an extended period, fully charge the device, place it in a storage bag, and store it in a dry and ventilated area.
4. Store the device in a location where infants and pets cannot reach it.
5. Do not fold the device for storage, as long-term folding may cause wrinkles or damage.
6. Avoid placing the device on cloth, paper products, or wooden furniture that may fade or become damaged.

Material Contents

Part Name	Hazardous Substance					
	Lead Pb	Mercury Hg	Cadmium Cd	Hexavalent Chromium Cr(VI)	Polybrominated Biphenyls PBB	Polybrominated Diphenyl Ether PBDE
Hardware	X	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Circuit Board	X	O	O	O	O	O
Battery Pack	X	O	O	O	O	O
Appendix	X	O	O	O	O	O

O: The content of harmful substances in all homogeneous materials of the component is below the limit specified in GB/T 26572.

X: The content of hazardous substances in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572.

1. This electronic product contains certain hazardous elements but can be safely used within the environmental protection period of 10 years from the date of manufacture. 
2. During this period, please use the product in accordance with the user manual to ensure proper and safe operation.
3. The environmental protection period does not cover vulnerable parts such as batteries, which may require replacement over time.

Note:

1. Other components and homogeneous materials not listed in the table above do not contain harmful substances.
2. All components and homogeneous materials that contain hazardous substances in the table above comply with the RoHS regulations in China, which restrict the use of harmful substances. Feel free to use them safely.

⚠️ Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

⚠️ Battery Safety Warning ⚠️

1. Before removing the battery, ensure the device is powered off.
2. Do not short circuit the battery to prevent burning or fire hazards.
3. Never expose the battery to fire to avoid potential explosions or the release of toxic substances.
4. **Battery Removal Procedure:**
 - 4.1 Use a tool to open the device shell.
 - 4.2 Unscrew the screws securing the circuit board.
 - 4.3 Use scissors to cut the positive and negative terminal wires of the battery one at a time. Ensure that the terminals do not touch to avoid short circuits.
 - 4.4 Remove the battery carefully.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
[**porodo.net/warranty**](http://porodo.net/warranty)

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**