

PORODO
LIFESTYLE



Porodo Lifestyle



**All-In-One Nail
Trimmer Set**

SKU: PD-LFST119-BK

Table of Contents

| | |
|-----------------------|---|
| Schematic View | 2 |
| Instructions for Use | 2 |
| Indicator Light Guide | 5 |
| Specifications | 5 |
| Important Notes | 6 |
| Precautions | 6 |
| Battery Disposal | 7 |
| Usage Prohibitions | 8 |
| Disposal | 8 |
| Warranty | 9 |
| Contact Us | 9 |

  Schematic View

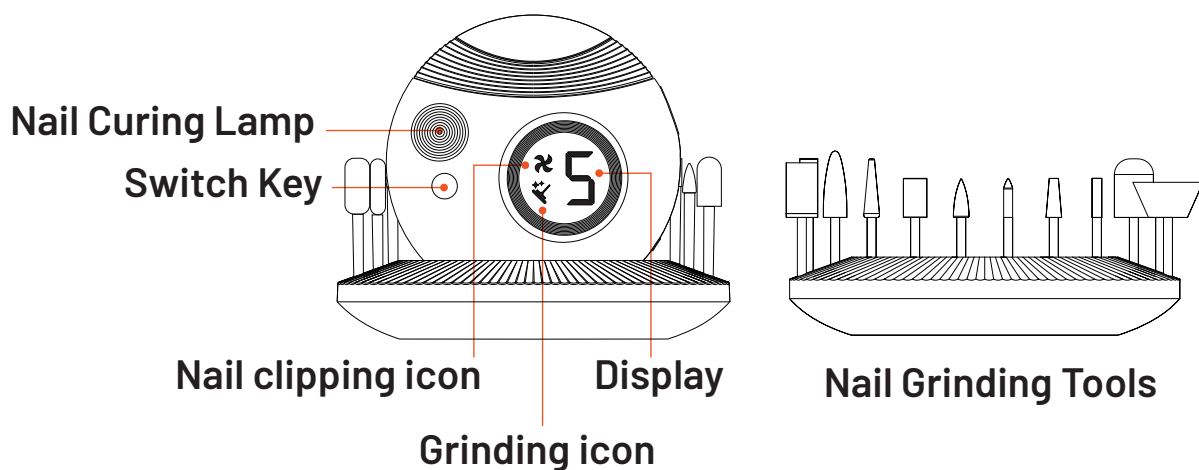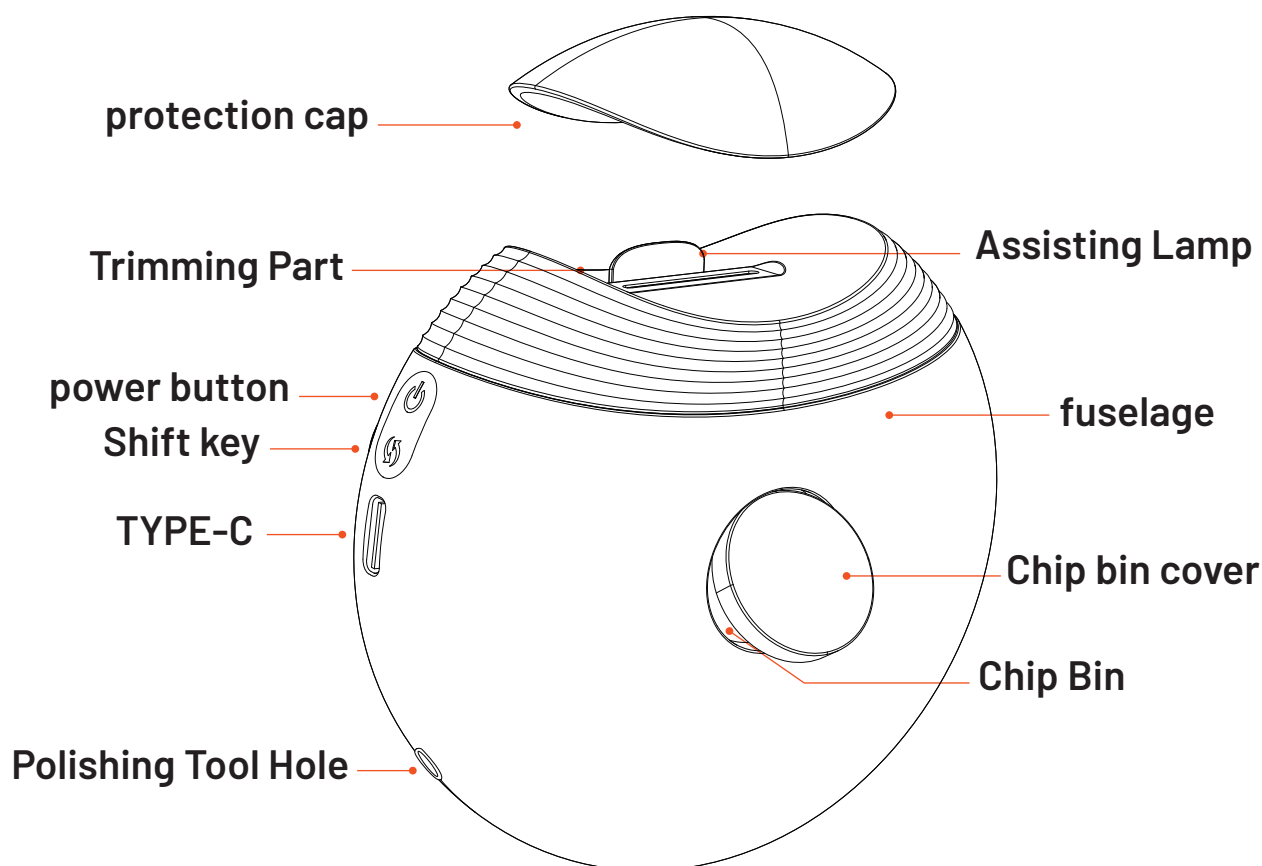

Instructions for Use

A. General Instructions

1. Press and hold the power button for 3 seconds to turn on the machine. When the machine starts, the white auxiliary light will illuminate.
2. After turning on the machine, the nail clipper runs at low speed by default.

Press the power button to switch to high-speed mode (1 to 2 gears).

3. Press the conversion button while the machine is on to switch to nail grinding mode. Press the power button again to adjust the speed (1 to 5 gears).

4. Press the nail curing light button to turn on/off the nail curing light.

5. Press and hold the power button for 3 seconds to turn off the machine. All lights will go out.

6. The red light on the screen will flash while charging, and the red light will stay on when fully charged. It cannot operate while charging.


B. Trimming Instructions

1. Remove the upper cover of the device by gripping the edge of the cover. Ensure that the side with the working indicator light is facing up. The side with the nail clippings bin should be facing down.


2. Place the nail to be trimmed on the opening of the cutter head and gently push the nail towards the cutter head. Move the nail or the device slowly (do not move too fast or apply too much force) to ensure the entire nail is trimmed evenly.

3. Press the nail curing light button to turn the nail curing light on or off, and cure the nails using ultraviolet light.


4. Press the conversion button to activate the polishing function and polish the nails. Various nail grinding tools can be replaced.

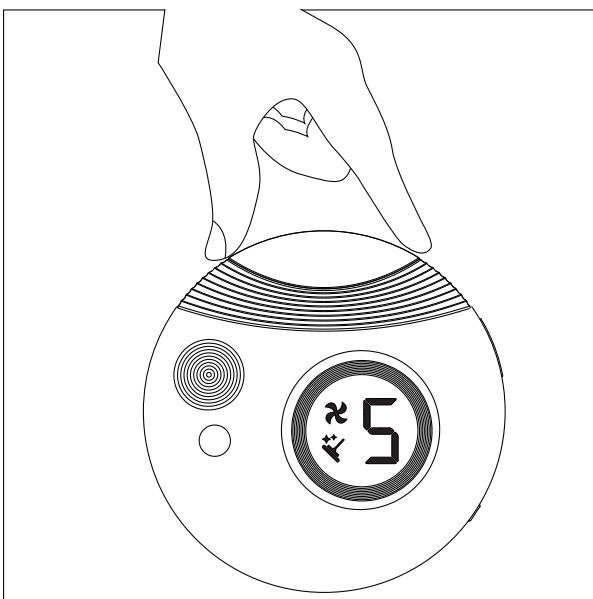


Remove the lid by gripping the edge of the lid.

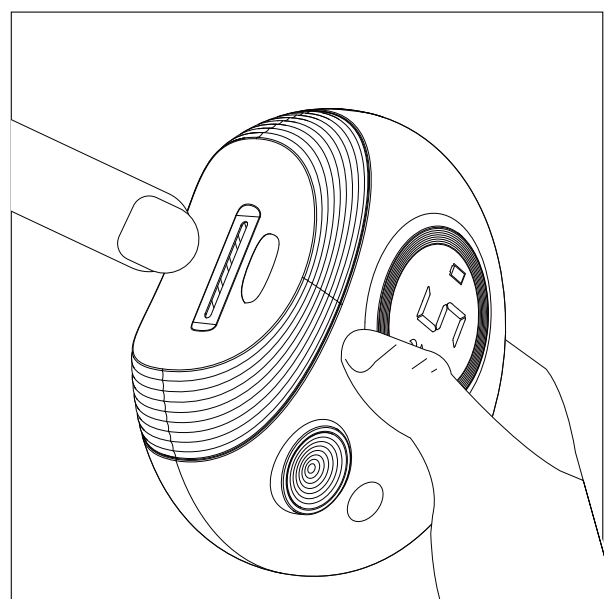

Turn on the device to begin.

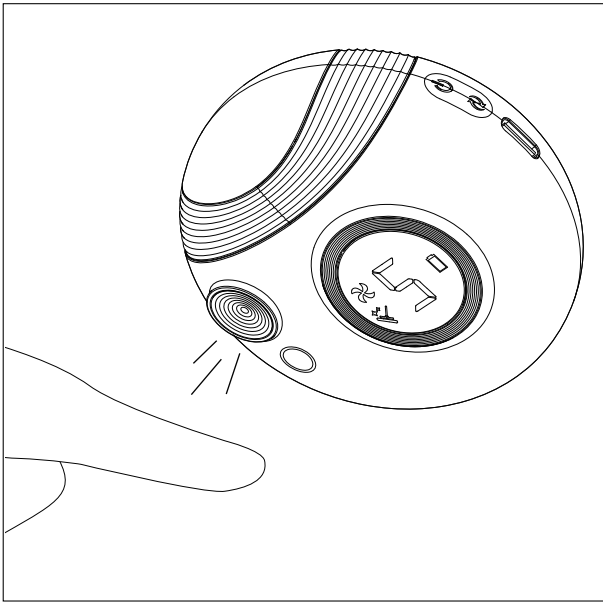

The LED ultraviolet light precisely cures the nails and solidifies them.

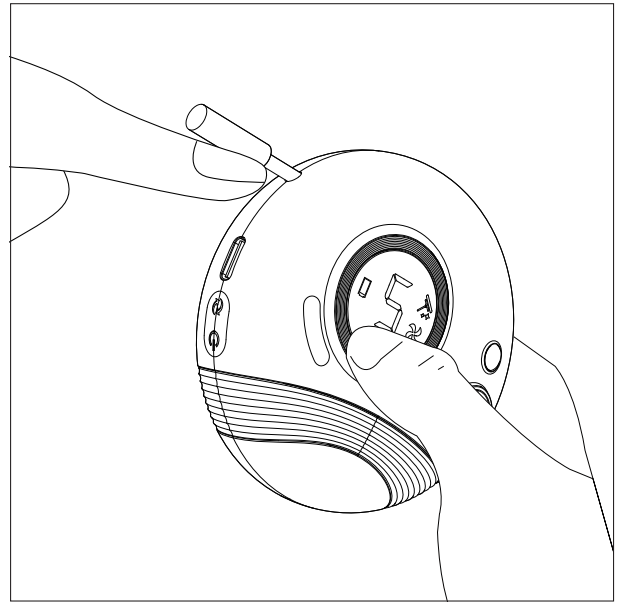

Start polishing the nails (multiple tool replacements can be used).

Tips

1. Avoid staying on the same part for too long to prevent over-trimming.
2. This product integrates both sharpening and cutting functions. It is normal for slight nail dust to be produced during use.

C. Cleaning

1. Turn off the device and gently press down on one side of the nail clippings bin cover.
2. Open the bin cover, empty the nail clippings into the bin, and clean the bin using a small brush or a dry paper towel.


Warning: Do not clean the bin while the device is on.

D. Power Supply Instructions

Please charge the device in the following situations:

1. When using the device for the first time.
2. When the device is in use, the working indicator light will flash.
3. When the power switch is pressed, but the device does not start, the working indicator light will flash for five seconds and then turn off.
4. Please use the included Type-C charging cable and a 5V output charger to charge the device.

5. During normal charging, the red indicator light will flash and stay on when fully charged. It takes approximately 2 hours to fully charge.

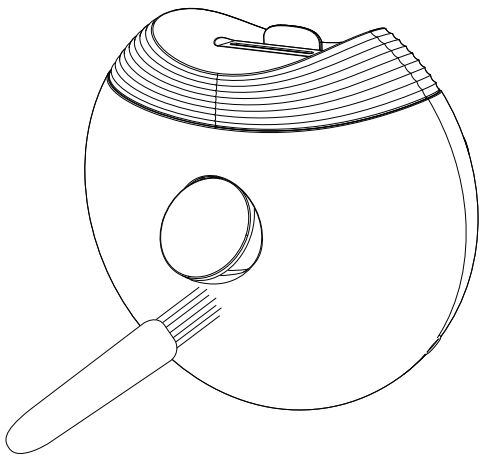

Indicator Light Guide

| LED Status | Function Description |
|---|---|
| The working light turns on. | The device is functioning properly. |
| The device battery indicator flashes red. | The battery is low; please charge it as soon as possible. |
| Tap to turn the nail lamp on/off. | When the battery is fully drained, the nail lamp cannot be turned on. |
| Red power | Fully charged. |

Specifications

| | |
|------------------|---------|
| Material | ABS, PC |
| Battery Capacity | 400mAh |
| Rated Power | 2W |
| Input Voltage | 5V/1A |

| | |
|--------------------|-------------------|
| Working Time | 2.5 to 3h |
| Charging Interface | Type-C |
| Charging Time | 1.5 to 2h |
| Product Weight | 114g, 178g (Base) |
| Product Size | 76.5×62.5×31.5mm |
| Model Number | LFS119 |

Important Notes

1. Babies under 1 year old are prohibited from using the device.
2. Children aged 1 to 12 years old can use it with the assistance of a guardian.
3. The blade is sharp; children must use it under adult supervision.
4. Ensure the device is placed properly to prevent children from touching or playing with it, to avoid any risk.
5. Do not allow any part of your body, other than your nails, to touch the cutter head to avoid injury.
6. When the device is running continuously, do not place clothing, accessories or anything other than nails close to the cutter head. Otherwise, the cutter head may become damaged or foreign objects may obstruct it, leading to

Precautions

1. Please charge the device for at least 1 hour before using it for the first time to ensure the battery is fully charged.
2. This product is designed for trimming nails only and is not suitable for other parts of the body.
3. Do not use this product if there are wounds or skin problems around the nails.
4. Do not rinse or soak this product in water, and keep it away from water and fire.
5. Keep it out of reach of children.

6. Do not use this product while it is charging.
7. To clean the device, wipe the surface with a clean cloth and let it dry naturally in a cool place.
8. Avoid water droplets or shower contact to prevent damage to internal components.
9. Do not use this product in excessively high temperatures or humidity.
10. This product is compatible with a 5V power adapter. Do not use a power supply with a voltage higher than 5V.
11. If the device is not used for an extended period (about 3 months), clean it, fully charge it, and store it in a dry place.
12. For long-term storage, fully charge the device every 3 months to prevent the battery from discharging and failing to start.
13. Do not use thinners, gasoline, or alcohol to clean this product, as they may cause damage, failure, or fading. Use neutral detergent to clean it.
14. **Notes:** Charging the device every three months if not used for an extended period.

Battery Disposal

1. When the electric nail clipper reaches the end of its service life, the internal battery may need to be removed according to local laws and regulations. If the battery cannot be removed, please hand the product over to a government-designated recycling center.
2. Unless you intend to discard it, do not disassemble this product yourself. Premature disassembly may damage the product. Always follow basic safety precautions during operation. Before removing the battery, ensure the power supply is disconnected.
3. Before removing the battery, ensure it is fully drained. To exhaust the battery turn on the device and let it run until it automatically shuts down.
4. To properly recycle or dispose of the battery, contact your local government-designated recycling center to check if other parts of the electric nail clipper are recyclable.

5. Be careful not to short-circuit the positive and negative poles of the battery. After removing the battery, do not attempt to power on the product again.

Usage Prohibitions

- 1.** Do not immerse the product in water or any other liquid.
- 2.** This product has a built-in rechargeable battery. Do not throw it into fire or charge it in high-temperature environments.
- 3.** Do not knock or drop the product. If the product is damaged due to collision or falling, discontinue use.
- 4.** Do not modify, disassemble, or repair the product yourself.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**