

**PORODO**  
**LIFESTYLE**



**Porodo Lifestyle**

**Multi-Styling Hair Dryer Set**

SKU: PD-LFST126

# Table of Contents

Safety Precautions	2
Product Overview	3
Operation Instruction	4
A. Settings	4
B. Using the Attachments	4
C. Using the Dryer	4
Cleaning and Storage	5
Disposal	5
Specifications	6
Warranty	7
Contact Us	7

# Safety Precautions

1. Before first plugging the unit into an outlet, ensure that the voltage indicated on the rating label matches the voltage of your home.
2. If the power cord is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid a potential hazard.
3. When using the hairdryer in a bathroom, always unplug it after use, as the proximity to water presents a risk even when the hairdryer is switched off.
4. For additional protection, it is recommended to install a residual current device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit supplying the bathroom. Please consult your installer for further advice.



**Warning:** Do not use this appliance near bathtubs, showers, basins, or other containers that hold water.

5. The hairdryer should only be used for the purposes outlined in this instruction manual.
6. This appliance can be used by children aged 8 years or older, as well as individuals with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge, only if they are supervised or instructed on how to use the appliance safely and understand the risks involved.
7. Children should not play with the appliance. Cleaning and user maintenance should not be performed by children unless.
8. Do not use the appliance outdoors.
9. Always unplug the hairdryer from the power supply when not in use and before cleaning.
10. To protect against the risk of electric shock, do not immerse the appliance in water or any other liquids.
11. Do not use aerosol products while the hairdryer is in operation.
12. Never leave the hairdryer switched on when it is not in use.
13. Do not use attachments other than those supplied with the appliance.

**14.** The air inlet and outlet openings should never be obstructed to prevent overheating.

**15.** If the airflow is inadvertently blocked during use, the built-in thermal safety cut-off will automatically turn off the appliance. The hairdryer will restart automatically after cooling for a few minutes.

**16.** Keep your hair away from the immediate vicinity of the inlet opening to prevent it from being drawn in.

**17.** Store the appliance in a cool, dry place. Do not use it if your hands are wet.

## Product Overview

- A. Cool Head**
- B. Detachable Spiral Curler Attachment (30mm)**
- C. Unlocking Button**
- D. Power Switch and Temperature Regulation (105 ,80 ,55°C)**
- E. Hinged Rear Filter**
- F. Hanging loop**
- G. Blower Head**
- H. Curler Brush**
- I. Multi-function Brush**



# Operation Instruction

## A. Settings

Your appliance offers the following temperature setting options:

**0:** Off

**1:** Moderate temperature for gentle drying and styling

**2:** High temperature for fast drying and styling

**3:** Highest temperature for fast drying and styling

## B. Using the Attachments

**1.** Spiral Comb (for hair curling)

**1.1** Ensure that the attachment and the unlocking button are aligned.

**1.2** Rotate the attachment clockwise until you hear a "click" sound.

**1.3** To remove, press the unlocking button and rotate the attachment counter-clockwise before pulling it out.

**2.** Blow Brush (for creating side waves)

**2.1** The Tension Comb enhances hair catching capabilities.

**2.2** To use the Tension Comb, firmly place the hair into the brush.

**3.** Roller Brush

**3.1** Divide your hair into sections, then wind each lock around the round brush.

**3.2** To untwist the lock, press the button located above the operation switch.

**3.3** Do not comb the hair immediately after curling; let it cool down first.

## C. Using the Dryer

**1.** Check if the mains voltage on the type plate (located on the handle of the appliance) matches your local power supply.

**2.** Towel dry your hair thoroughly after washing.

**3.** Plug the power cord into the wall socket.

**4.** Turn on the appliance using switch and set the desired temperature level.

**5.** If needed, you can switch to cold air by turning switch D to the "1" position (cold air setting).

**6.** After use, turn off the appliance with switch and unplug the power cord from the wall socket.

**Note:** The cold air setting interrupts the hot air operation and provides a cool air flow, helping you set your hairstyle more effectively and lastingly.

**Warning:** Never wind the power cord around the appliance, as this can cause damage.

**7.** Regularly check the power cord and

## Cleaning and Storage

**1.** The appliance can be cleaned with a dry cloth.

**2.** The attachments can be cleaned with a moist cloth or rinsed under running water.

**3.** Remove the attachments from the appliance before cleaning.

**4.** Ensure the attachments are dry before using or storing them.

**5.** Never rinse the appliance with water.

**6.** When not in use, always unplug the appliance.

**7.** Allow the appliance to cool and store it in a dry location.

**8.** Never wrap the cord around the appliance, as this will cause the cord to wear out prematurely and break.

**9.** If the power supply cord of the appliance becomes damaged, the appliance must be replaced by returning it to the retailer or a similarly qualified person to avoid a hazard.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

# Specifications

Input	AC 220 to 240V, 60/50Hz
Rated Power	600W
Power Plug	UK 3-Pin Plug
Cord Length	1.8m
Spiral Curler Size	30mm
Spiral Curler Size	30mm
Temperature Control	3 Settings
Product Weight	318.3g
Product Size	232×42.7×47.5mm (without Comb)
Model Number	LFS126



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [porodo.net/warranty](http://porodo.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
[porodo.net/warranty](http://porodo.net/warranty)

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**