



Porodo Soundtec

POD PRO Android Music Player

SKU: PD-STWLEP049

Table of Contents

Preface	2
Safety Precautions	2
Features	3
Specifications	4
Function Description	4
Charging Guide	5
Instructions for Use	5
Settings	7
Notes on Charging and Battery	7
Using a TF Card	8
Disposal	8
Warranty	9
Contact Us	9

Preface

Thank you for purchasing the Porodo Soundtec POD PRO Android Music Player. Please read the user manual carefully before using this product. By starting to use this product, we assume that you have thoroughly read the manual. The power interface of this product is designed for internal battery charging. To charge the device, please use either the USB port of a computer or a 5V/1A DC power adapter that complies with standards and certification. Do not connect to other power supply equipment, as this may cause irreparable damage, such as failure to charge or harm to data and hardware. Please do not attempt to repair or disassemble the product yourself.

Safety Precautions

- 1.** Keep the product away from electromagnetic environments. Also, avoid exposing it to harsh environments such as excessive humidity and dust.
- 2.** Do not immerse the device in water. Additionally, avoid using any corrosive or abrasive cleaning agents to clean the unit.
- 3.** Please refrain from applying excessive pressure to the product.
- 4.** Do not shake or hit the product forcefully.
- 5.** It is recommended to lower the volume of the device before using the headset. Gradually increase the volume after listening to the headset until it is at a comfortable level.
- 6.** To protect your hearing, avoid turning up the volume too high. Doctors warn that prolonged exposure to high volume can damage hearing. If you experience tinnitus, turn down the volume or stop using the device.
- 7.** Ensure that this product is placed securely to avoid accidents and falls. Keep away from children.
- 8.** The charging time is 2 hours. It is recommended to disconnect the device from the USB port after charging and avoid leaving it connected to the power supply for an extended period.
- 9.** Do not use headphones while driving, riding, operating machinery, or performing tasks that require attention to external sounds.

- 10.** The battery of this device is a rechargeable polymer lithium battery.
- 11.** The polymer lithium battery must be replaced by a professional. The user is not authorized to replace it themselves.
Warning: Please note that improper battery replacement can pose an explosion risk. The battery can only be replaced with the same type or an equivalent type of battery.
- 12.** The battery's lifespan may vary depending on usage conditions and production time.
- 13.** Batteries should not be exposed to extreme conditions such as sunlight, fire, or overheating.
- 14.** To protect the environment, batteries should be properly disposed of at professional recycling centers.

Features

- 1.** Full-screen capacitive touch control allows for intuitive and responsive navigation of the player.
- 2.** The 4.0-inch full-view IPS display provides a wide and clear screen for an enhanced viewing experience.
- 3.** Multi-format audio support ensures compatibility with a wide variety of audio formats, while the lyrics synchronous display enhances your listening experience.
- 4.** Video playback support lets you watch videos directly on the player for more entertainment options.
- 5.** The latest Bluetooth module ensures low power consumption, strong stability, and a long transmission range, including support for two-way Bluetooth connections.
- 6.** The clock and alarm clock function allow you to set alarms and track time conveniently.
- 7.** The player supports various image formats and slideshow functionality, offering you a visual display with your music.
- 8.** It supports a TF card, allowing you to store more media files.
- 9.** The player supports multiple languages, making it accessible to a global audience.

Specifications

Battery Capacity	1500mAh
Charging Interface	Type-C
Input	DC 5V/1A
Charging Time	2h
Working Time	15h (at Music Mode)
Bluetooth Version	4.0
Bluetooth Name	PD-STWLEP049
Wi-Fi	2.4G/5G
RAM + ROM	2GB + 16GB
Operating System	Android
Display	4" IPS
Resolution	480×800
Chipset	MT6735 Quad-Core
Touch Panel	CTP Multi-Point
Language	Multiple Languages
TF Card	Up to 128GB (Not Included)
Product Dimension	10.4×61.5×110mm

Function Description

Power On: To turn on the system, long press the power button when the device is in shutdown mode, and the system will enter the startup screen.

Power Off: In the powered-on state, press and hold the power button to initiate the shutdown process.

Reset: If the player malfunctions and is not responsive, press the "RESET" button. If the player still does not turn on, check whether the product is adequately

charged. Please note that restoring to factory settings may take some time; be patient during this process.

Volume: While in playback mode, press the "+" button to increase the volume. Press the "-" button to decrease the volume. The volume level is displayed on the screen.

Charging Guide

1. To charge the device using an adapter, connect the USB data cable to the adapter and plug the other end into the USB (type-c) port of the player.
2. Under normal conditions, the device can be fully charged in about two hours using a 5VDC/1A power adapter.
3. To charge via a computer USB, insert one end of the USB cable into the computer's USB port and the other end into the USB (type-c) port of the player. The device can also be used as a mobile disk while charging.
4. Charging through a computer's USB interface may take longer than using an adapter, as the current output capacity can vary depending on the computer.
5. When charging via a PC USB interface, it is recommended to charge the player while it is turned off to speed up the charging process.
6. During the charging process, both the charger and the player may experience a slight temperature rise, which is a normal occurrence.

Instructions for Use

1. Photos

- 1.1 On the main screen, click the "Picture" icon to enter. From there, click the target file to open it. The picture will display, and a toolbar will appear at the top.
- 1.2 The toolbar allows you to delete the file, play a slideshow, edit, rotate left and right, crop the image, set it as a background, and view details, among other functions.

2. Radio

- 2.1 On the main screen, tap the "Radio" icon to enter. Use the (<) and (>) icons to manually fine-tune the radio frequency band and select your desired station.

2.2 Tap (◀) and (▶) to select a previously saved station.

2.3 The (★) icon indicates the saved radio frequency band.

2.4 In the upper right corner, the (■) icon shows that the radio frequency band is being automatically scanned.

Note: You can choose either a headset or speaker for audio output. Additionally, you can play or pause the sound within the selected radio frequency band.

3. Recorder

3.1 On the home screen, tap the "Record" icon to enter.

3.2 To start recording, click (●) to begin.

3.3 To pause or resume recording, click (II). To continue recording, click (●) again.

3.4 To save the recording, click (■) to save the file.

3.5 To view the recording file list, click (:=) to open the list.

Tip: The recording format is WAV and MP3.

4. Calendar

4.1 On the main screen, tap the "Calendar" icon to enter.

4.2 In the upper left corner, you can choose the format for viewing today, week, month, or schedule, and select a day to add notes and other information.

4.3 The menu bar (:=) offers functions such as creating a new activity, refreshing, searching, displaying the calendar, clearing all events, skipping, and setting preferences.

5. File Management

5.1 On the main screen, tap the "File" icon to enter. You can view the files stored on the device or TF card.

5.2 Tap the target file to open the corresponding file to enter the relevant interface for music, video, pictures, and other functions.

5.3 Additionally, the file management section includes options for creating new folders and searching.

5.4 By pressing and holding a file, you can copy, cut, delete, rename, share, or view detailed information.

K Settings

Select "Settings" from the main screen to enter. You can click to adjust the corresponding settings:

- 1. WLAN:** Connect to a Wi-Fi network.
- 2. Bluetooth:** Connect to other devices via Bluetooth, such as mobile phones, Bluetooth headphones, audio equipment, and more. The Bluetooth name of the device is PD-STWLEP049.
- 3. Display:** Adjust the screen brightness, sleep time, font size, and device rotation.
- 4. Application:** View the installed apps on the device.
- 5. Memory:** Check the internal storage status of the device.
- 6. Battery:** View the remaining battery power and configure smart power-saving settings.
- 7. Security:** Set a local lock screen password to encrypt and protect data.
- 8. Language and Input Method:** Modify the device's language and switch between input methods and other related functions.
- 9. Backup and Reset:** The device can be restored to its factory settings.
- 10. Date and Time:** Modify the device's time, set the date, adjust the time, select the time zone, and choose between 24-hour or 12-hour formats.
- 11. Automatic Shutdown:** Set the device to automatically shut down after a specified time, with options for idle shutdown and timed shutdown.
- 12. About the Device:** View information about the device, including the display model, Android version, version number, and custom version.

K Notes on Charging and Battery

- 1.** This device supports USB charging. Connect the USB-end interface to the USB port on your computer, then connect the other end to the charging port of the device to begin charging.
- 2.** When the battery icon stops flashing, the charging process is complete.
- 3.** The new battery needs to go through several charging and discharging cycles to reach its optimal performance.
- 4.** If the device is not in use for an extended period, it is recommended to charge

and discharge the battery at least once a month to prevent damage caused by excessive depletion.

5. Battery damage resulting from excessive consumption of polymer batteries is not covered under the warranty. Additionally, if a non-specific charger is used to charge the device and it causes any issues, the resulting problems.

Using a TF Card

- 1.** The unit is equipped with a TF card slot to store videos, pictures, and other files.
- 2.** When inserting the card, ensure it is correctly aligned with the card slot settings.
- 3.** Push the card inward until you hear a click.
- 4.** To remove the card, push it back into the slot and release it. the card will automatically pop out. Then, remove the memory card.
- 5.** Insert the card into the card slot of the device.
- 6.** Do not remove the memory card during operations (such as reading or copying), as this could lead to data errors.
- 7.** Avoid using or storing memory cards in high-temperature or high-humidity environments.
- 8.** Keep the memory card away from liquids and corrosive materials.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**