



Porodo Gaming

Retro Arcade


Game Console

SKU: PDX640


Table of Contents

Schematic View	2
Specifications	3
Precautions	3
Button Function Guide	4
1. Main Interface	4
2. Simulator Interface	4
3. Shortcut Keys	5
4. NDS Emulator Menu	6
5. PSP Emulator Menu	6
Features	6
Battery Instructions	7
Game Installation	7
Emulator Settings	7
Disposal	8
Warranty	8
Contact Us	8

Schematic View

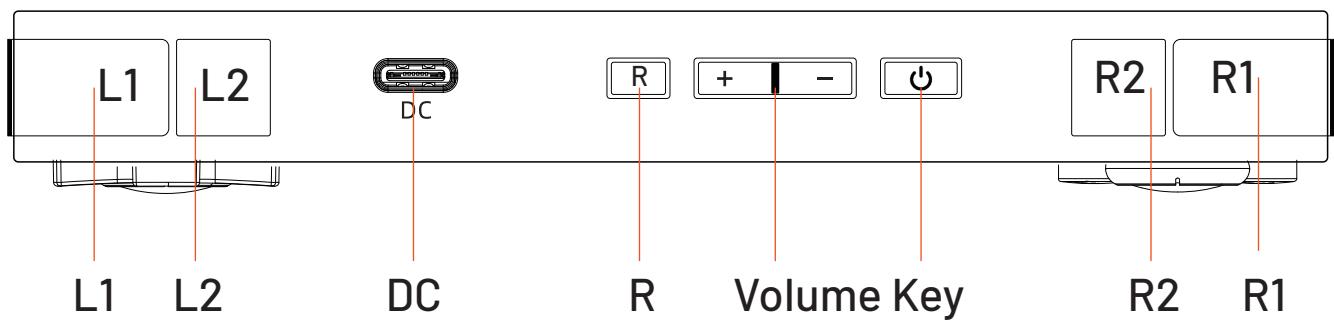

Direction Keys Function Key "-" Function Key "+" Operation Keys

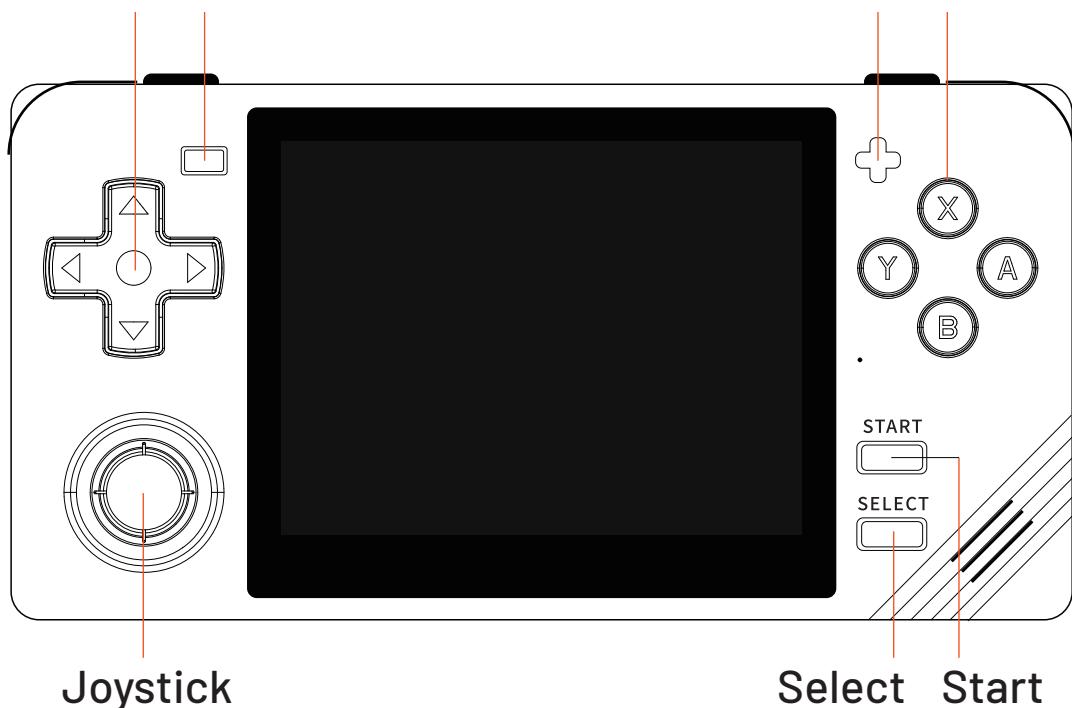

OTG Audio Jack



K Specifications

Battery Capacity	2800mAh
Charging Interface	Type-C
Input	5V/2A
Charging Time	2H
Operating System	Open-Source Linux
Playtime	8H
Built-in Speaker	2W
Display	3.5" IPS OCA
Resolution	480×640
Processor	Quad-Core 64Bit
CPU	A35
GPU	Mali-G31
Refresh Rate	60Hz
RAM	1GB
Storage	TF Slot 64GB (Included), Up to 256GB Memory Card
Game Compatibility	Multiple Simulators MAME, N64, PS, CP3, NEOGEO, GBA, NES, SFC, MD, NDS
Connectivity	Wi-Fi, Type-C OTG, 3.5mm AUX Jack

K Precautions

The following guidelines are provided to ensure the proper use of the game console. Please read them carefully and follow all instructions:

1. Do not subject the host to heavy impacts.
2. Avoid contact with harmful chemicals such as benzene and solvents.
3. Keep the device away from strong magnetic or electric fields.
4. Protect the console from direct sunlight and heat sources.
5. Do not disassemble, repair, or modify the device yourself.
6. When riding a bike, driving a car, or riding a motorcycle, refrain from using the

player or headphones to avoid potential hazards.

7. Avoid listening at high volumes to protect your hearing.

8. Keep the product away from water.

9. To power down the console, press the START button on the main interface select "Exit," and then choose the shutdown option. Avoid using the power button to force a shutdown, as this could damage the system and prevent it from powering on again.

10. The "R" reset and restart button, located next to the power button, should only be used in special circumstances, as it may cause damage to the system card.

Button Function Guide

1. Main Interface

A Key	Enter/Confirm
B Key	Return
X Key	Random Simulator Activation
SELECT	Randomly Play Game Preview Videos. If no video is available, the system will enter standby mode.
START	Enter the Main Menu

2. Simulator Interface

A	Activate the Game
B	Return
X	Randomly Switch Games
Y	Collect Games
SELECT	Set Emulator Game Settings
START	Enter the Main Menu

3. Shortcut Keys

A B X Y	Keyboard Operation for Games
SELECT	Select/Coin
START	Confirm/Start

Press "-" + "Key + A" in the upper left corner of the screen to pause the game.

Press "-" + "Key + B" in the upper left corner of the screen to display the frame rate.

Press "-" + "Key + X" in the upper left corner of the screen to enter the system menu.

Press "-" + "Key + Y" in the upper left corner of the screen to take a screenshot.

Press "-" + "Key + R1" in the upper left corner of the screen to save the game.

Press "-" + "Key + R2" in the upper left corner of the screen to load the game.

Press "-" + "Key + L1" in the upper left corner of the screen to accelerate the game.

Press "-" + "Key + L2" in the upper left corner of the screen to slow down the game playback.

Press the "-" key in the upper left corner of the screen along with the "START" button twice at the same time to quickly exit the game.

Press the "-" key in the upper left corner of the screen along with the "On the directional keys" to increase the volume.

Press the "-" key in the upper left corner of the screen along with the "Under the directional keys" to reduce the volume.


Press the "-" key in the upper left corner of the screen along with the "Left arrow key" to reduce the storage status card slot.

Press the "-" key in the upper left corner of the screen along with the "Right arrow key" to add a save status card slot.

Press "+" along with the "Under the cross key" to reduce in-game brightness.

Press "+" along with the "On the cross key" to increase in-game brightness.

Press the "-" key in the upper left corner of the screen to perform the action.

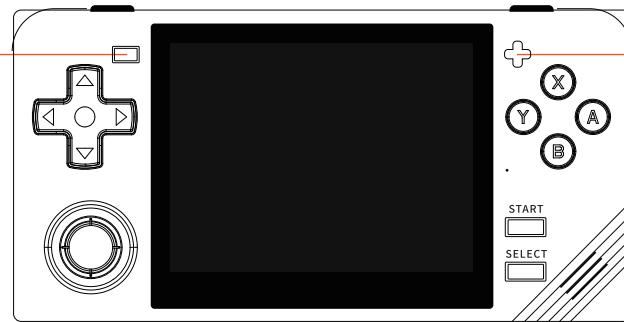

Press the "+" key in the upper right corner of the screen to perform the action.

4. NDS Emulator Menu

To exit NDS, press the "-" key in the upper left corner of the screen.

Press the Simulator menu Load State to load game records.

Press the Simulator menu Save State to save game records.

Press the Simulator Exit Drastic to exit the game.

Press L2 to switch between single screen and dual screen modes (up and down).

Press R2 to switch between single screen and dual screen modes (up and down).

5. PSP Emulator Menu

Press the "+" button in the upper-right corner of the screen to access the PSP emulator menu.

The menu allows you to save/load game records, configure settings, and exit the game.

Due to performance limitations, such as game lag, you can enable automatic frame skipping in the menu settings by selecting the "frame skipping" option.

Features

1. Display: 3.5-inch IPS OCA full lamination resolution (640 * 480)
2. CPU: High-performance 64-bit A53 CPU, Mali-G31 GPU, ensuring smooth FPS running at 60Hz
3. Simulator Support: Compatible with ARCADE, MAME, CPS1, CPS2, CPS3, PCE, FC, SFC, GB, GBA, GBC, MD, NEOGEO, PS, and more. It supports multiple open-source systems and is upgradeable.

4. The device offers several useful functions, including instant archiving, the ability to record historical games, set favorite games, enter standby mode, adjust language settings, and expand storage with a TF card.

Battery Instructions

- 1.** When the battery is low, the game console may experience screen flickering, sound distortion, or an inability to start. In such cases, charge the device promptly. When the battery is low, make sure to connect it to a charger immediately.
- 2.** We recommend using a charging voltage of 5V and a current specification between 500mA and 2000mA.
- 3.** Please use the provided factory charging cable to ensure proper charging. Avoid using high-power charging cables, as they may cause low voltage or high voltage, leading to charging failure.

Game Installation

Please download the game in a format supported by the machine and save it on the corresponding TF folder.

Emulator Settings

- 1.** If you experience game crashes, lag, or other issues, press SELECT in the current game. From there, you can find the game elements to edit, locate the game emulator and core, and replace them with another core or emulator to make adjustments.
- 2.** Pressing START on the main interface opens the game menu, which is primarily used for various game settings, such as brightness adjustment, sound control UI theme replacement, etc.
- 3.** Unless necessary, do not make unauthorized changes to key settings or other settings you do not understand.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net
Website: **porodo.net**
Service Support: **support@porodo.net**
Instagram: **porodo**