



# Green Lion

## JET BLEND Juice Blender

SKU: GNJETBLNDWH

Model No: GL-JU18

## Table of Contents

General Safety Guidelines	2
Specifications	3
Schematic View	3
Safety Instructions	4
Using the Appliance	5
Cleaning Instructions	6
Troubleshooting	6
Warning	7
Recipe Instructions	7
Recycling Instructions	8
Warranty	9
Contact Us	9

## General Safety Guidelines

Read the user manual thoroughly before operating the appliance or equipment.

1. Before switching on the appliance, check the available voltage in your home and ensure it matches the voltage specified on the appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they have received proper supervision or instruction on its safe use from a responsible person.
3. Children should always be supervised to ensure they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid any hazards.
5. Exercise caution when handling sharp cutting blades, when emptying the bowl, and during cleaning.
6. Take care when pouring hot liquid into the food processor or blender, as it may be ejected due to sudden steam buildup.
7. Always disconnect the blender from the power supply if left unattended, and before assembling, disassembling, or cleaning. Do not allow children to use the blender without supervision.
8. Switch off the appliance and disconnect it from the power supply before changing accessories or approaching any moving parts.
9. This appliance is intended for use in household and similar environments, such as:  
Staff kitchen areas in shops, offices, and other working environments;  
Farmhouses;  
By clients in hotels, motels, and other residential-type environments;  
Bed and breakfast establishments.

## Specifications

Model No.	GL-JU18
Material	PS + ABS
Rated Power	350W
Peak Power	650W
Speed	2 Speed Levels
RPM Speed	16000-19000
Blade	4-Leaf
Blender Capacity	1.0L Max
Grinder	50g Max
Single Blend Time	3 min
Single Grind Time	30 sec
Power Plug	BS Plug 1.2 m
Product Weight	1.55 kg
Product Dimensions	360*150*170 mm

## Schematic View

### A. Motor Housing:

**A1:** Motor Housing

**A2:** Switch Button

### B. Jug:

**B1:** Jug Cutter

**B2:** Jug Container

**B3:** Jug Lid



**B4: Measuring Cup**

**C. Dry Mill:**

**C1: Mill Base**

**C2: Mill Cutter**

**C3: Mill Container**

## **Safety Instructions**

**1.** Before connecting the appliance to the mains, ensure that:

**1.1** The blender is fully assembled.

**1.2** The speed selector (A2) is set to "0."

**1.3** The voltage rating on the bottom of the appliance matches the mains voltage.

**2.** Never operate the blender without the jug securely mounted.

**3.** While the motor is running:

**3.1** Do not place or remove the jug.

**3.2** Avoid inserting objects into the jug.

**3.3** Do not place your hand inside the jug.

**4.** Always disconnect the plug from the socket after use.

**5.** Do not immerse the appliance cord or plug in liquid.

**6.** Keep the power cord out of the reach of children. Ensure it is not placed near or in contact with hot surfaces, heat sources, or sharp edges.

**7.** For your safety, only use accessories and spare parts that are specifically designed for this appliance and are available through an authorized after-sales service center.

**8.** Read the user manual thoroughly before operating the appliance or equipment.

## Using the Appliance

### 1. Tips for First-Time Use:

**1.1** Before using your appliance for the first time, clean all accessories (B), (C3) in warm water (A).

**Caution:** The cutters are extremely sharp. Handle them with care when using, cleaning the appliance, or emptying the jar.

**1.2** Ensure all packaging is removed before operating the appliance.

**Important:** Set the speed selector (A2) to "0" before placing the blender jar or accessories onto the motor unit.

**1.3** The appliance will only start if the jar or accessory is correctly secured to the motor unit.

**1.4** Never operate the blender without the lid (B3) properly in place.

### 2. Using the Blender:

**2.1** Add ingredients into the blender container, ensuring the lid is securely locked onto the jar.

**2.2** Place the container onto the motor housing. Twist the jar clockwise until it locks into place with a click. Support the motor housing while locking the jar.

**2.3** If the jar does not fit easily into the motor housing, twist it slightly in either direction until it settles into place. Plug in the appliance.

**2.4** Set the speed selector (A2) to start.

**2.5** Once blending is complete, switch the appliance off. Unplug the unit and remove the jar by turning it counterclockwise to release it from the motor housing. Remove the ingredients from the jar.

**Warning:** Always grip the plug when unplugging. Never pull on the cord.

### 3. Dry Mill:

**3.1** Turn the dry mill (C) clockwise to lock, counterclockwise to unlock.

**3.2** Place ingredients into the dry mill container (C3) after turning it upside down.

**3.3** Attach the container base to the mill and twist to lock.

**3.4** Position the jar and base onto the motor housing, and twist the container clockwise until it clicks into place. Support the motor housing while locking the jar.

## Cleaning Instructions

1. After use, operate the appliance with half a container of lukewarm water. Then, wash the inside with a soft sponge.
2. To remove any ingredients stuck to the blades, carefully clean them with a brush. Afterward, dry the blades thoroughly.
3. Always handle the blades with caution.
4. Wipe the motor housing with a damp cloth to clean it.
5. Wash each part with cold or lukewarm water using a soft sponge.
6. Rinse all parts thoroughly and dry them completely.
7. Clean the mill cutter carefully with a brush. Do not use water to clean the cutter.

## Troubleshooting

Problem	Possible Cause	Solution
The product does not work.	The plug is not connected.	Connect the appliance to a socket with the same voltage.
	The blender jug or assembled accessory is not correctly positioned or locked onto the motor unit.	Check that the jug or accessories are correctly positioned and locked onto the motor unit.
There are excessive vibrations.	Place the product on a flat surface.	Place the product on a flat surface.
	The volume of ingredients is too high.	Reduce the quantity of ingredients.
There is a leak from the base of the accessories.	The volume of ingredients is too high.	Reduce the quantity of ingredients.
	The lid is not correctly positioned.	Lock the lid correctly on the blender jug.
The cutter does not turn easily.	Pieces of food are too large or too hard.	Reduce the size or quantity of ingredients being processed. Add liquid if appropriate.

## Warning

1. Children should be closely supervised to ensure they do not play with the appliance.
2. This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental abilities, or those lacking experience and knowledge, unless they have received supervision or proper instruction regarding its use from a responsible person.
3. If the power cord is damaged, it must be replaced by the service center, the manufacturer, or a qualified professional to prevent the risk of electric shock.
4. Exercise caution when pouring hot liquids into the appliance, as they may be ejected due to sudden steaming.
5. Always ensure the appliance is switched off and disconnected from the power supply when it is left unattended, or before assembling, disassembling, cleaning, or approaching moving parts.
6. For household use only.

## Recipe Instructions

### 1. Blender:

1.1 Use 1 part soft fruit to 3 parts water (only soft fruits, such as carrots, apples, etc.).

1.2 Do not exceed the maximum level mark.

1.3 Operate at the highest speed setting for 1 minute.

### 2. Grinder:

2.1 Place 50g of coffee beans into the grinding cup.

2.2 Operate at the highest speed setting for 30 seconds.

## Recycling Instructions

1. Disposal of the Appliance and Packaging Materials: The packaging materials are composed of environmentally safe materials that can be disposed of in accordance with the recycling regulations in your area. For the disposal of the appliance, please contact the appropriate service of your local authority.
2. End-of-Life Electrical and Electronic Products: Your appliance is designed for long-lasting use. However, when it is no longer functional, do not dispose of it in the trash or landfill. Instead, take it to a local recycling center or designated waste reception facility.
3. Environmental Consideration: Your appliance contains valuable materials that can be recovered or recycled. Please ensure it is properly disposed of at a local civic waste collection point for recycling.



## **Warranty**

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [\*\*https://www.greenlion.net/warranty\*\*](https://www.greenlion.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

[\*\*https://www.greenlion.net/warranty\*\*](https://www.greenlion.net/warranty)

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

Website: [\*\*https://www.greenlion.net/\*\*](https://www.greenlion.net/)

Sales: [\*\*sales@greenlion.net\*\*](mailto:sales@greenlion.net)

Service Support: [\*\*Support@greenlion.net\*\*](mailto:Support@greenlion.net)

Telegram: [\*\*@greenlion\\_global\*\*](https://t.me/greenlion_global)

Instagram: [\*\*@greenlion\\_global\*\*](https://www.instagram.com/greenlion_global)