



Green Lion

JET BLEND PRO Juice Blender

SKU: GNJETBLPRGY

Model No: GL-JU17

Table of Contents

General Safety Guidelines	2
Specifications	3
Schematic View	3
Safety Instructions	4
Instructions for Use	5
Cleaning Instructions	6
Troubleshooting	7
Warning	7
Recipe Instructions	8
Recycling Instructions	8
Warranty	9
Contact Us	9

General Safety Guidelines

Before operating any appliance or equipment, carefully read the user manual.

1. Ensure the voltage at your location matches the voltage specified on your appliance before switching it on.
2. This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge. Supervision or guidance by a responsible person is required for safe usage.
3. Always supervise children to ensure they do not play with the appliance.
4. If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or similarly qualified personnel to prevent any hazards.
5. Handle sharp cutting blades with care, especially when emptying the bowl or during cleaning.
6. Take caution when pouring hot liquids into the food processor or blender, as sudden steam buildup can cause ejection of hot contents.
7. Always disconnect the blender from the power supply if left unattended, and before assembling, disassembling, or cleaning. Ensure that children do not use the blender without supervision.
8. Before changing accessories or approaching moving parts, always switch off the appliance and disconnect it from the power supply.
9. This appliance is designed for use in household and similar environments, such as:

Staff kitchen areas in shops, offices, and other work settings.

Farmhouses.

Residential environments like hotels, motels, and guest houses.

Bed and breakfast establishments.

Specifications

Model No.	GL-JU17
Material	PC + ABS
Rated Power	350W
Peak Power	650W
Speed	2 Speed Levels
RPM Speed	16000-19000
Blade	6-Leaf
Blender Capacity	1.8L Max
Grinder	50g Max
Single Blend Time	3 min
Single Grind Time	30 sec
Power Plug	BS Plug 1.2 m
Product Weight	1.71 kg
Product Dimensions	380*180*185 mm

Schematic View

A. Motor Housing:

A1: Motor Housing

A2: Switch Button

B. Jug:

B1: Jug Cutter

B2: Jug Container



B3: Jug Lid

B4: Measuring Cup

C. Dry Mill:

C1: Mill Base

C2: Mill Cutter

C3: Mill Container

Safety Instructions

1. Before connecting the blender to the mains, ensure that:

1.1 The blender is fully assembled.

1.2 The speed selector (A2) is set to "0".

1.3 The voltage specified on the bottom of the appliance matches the mains voltage.

2. Never operate the blender without the jug properly mounted.

3. When the motor is running:

3.1 Do not place or remove the jug.

3.2 Do not insert any objects into the jug.

3.3 Never place your hand inside the jug.

3.4 Always disconnect the plug from the socket after use.

4. Do not immerse the appliance's cord or plug in liquid.

5. Keep the power cord out of the reach of children and avoid placing it near or in contact with hot parts of the appliance, heat sources, or sharp edges.

6. For your safety, only use accessories and spare parts that are compatible with your appliance and are sold by an approved after-sales service center.

Instructions for Use

1. Tips for First-Time Use:

1.1 Before using your appliance for the first time, clean all the accessories (B) and (C3) with warm water (A).

Caution: The cutters are extremely sharp. Handle them with care when using, cleaning, or emptying the jar.

1.2 Make sure all packaging has been removed from the appliance before operation.

Important Note: Ensure the speed selector (A2) is set to "0" before placing the blender jar or accessories on the motor unit.

1.3 The appliance will only start if the jar or accessory is securely locked in place.

1.4 Never operate the blender if the lid (B3) is not properly fitted.

2. Using the Blender:

2.1 Add the ingredients into the blender container and ensure the lid is securely locked on the jar.

2.2 Place the container onto the motor housing and twist the jar clockwise to lock it in place until it clicks.

2.3 Support the motor housing while locking the jar.

2.4 If the jar does not fit into the motor housing, twist it in either direction until it aligns properly. Plug the appliance into the socket.

2.5 Set the speed selector (A2) to start the blending process.

2.6 After blending is complete, turn the appliance off. Unplug the appliance, then rotate the jar counterclockwise to remove it from the motor housing. Remove the ingredients from the jar.

Note: Always grip the plug when unplugging the appliance, and never pull on the cord.

3. Using the Dry Mill:

3.1 Turn the dry mill (C) clockwise to lock it and counterclockwise to unlock.

3.2 Turn the mill container (C3) upside down, then place the ingredients into the container.

3.3 Attach the container base to the mill container and lock it securely.

3.4 Place the jar and base on the motor housing. Turn the container clockwise to lock it until it clicks. Support the motor housing while locking the jar.

3.5 Plug the appliance into the socket.

3.6 Support the jar, then turn the speed selector (A2) to start the mill.

3.7 Once blending is complete, turn off the appliance. Support the jar until the operation is fully finished.

3.8 Unplug the appliance and rotate the jar counterclockwise to remove it.

Note: Always grip the plug when unplugging, and never pull on the cord.

3.9 Turn the jar upside down and gently tap it to release any ingredients that may be stuck in the cutter.

Cleaning Instructions

1. After use, fill the appliance with half lukewarm water and run it briefly. Then, use a soft sponge to wash the interior.

2. If ingredients are stuck to the blade, carefully clean it with a brush. Afterward, dry the blade thoroughly.

3. Always handle the blades with care.

4. Wipe the motor housing with a damp cloth to keep it clean.

5. Wash each part with cold or lukewarm water using a soft sponge.

6. Rinse all components thoroughly and ensure they are completely dry.

7. Clean the mill cutter gently with a brush. Avoid using water on the mill cutter.

Troubleshooting

Problem	Possible Cause	Solution
The product does not work.	The plug is not connected.	Connect the appliance to a socket with the same voltage.
	The blender jug or assembled accessory is not correctly positioned or locked onto the motor unit.	Check that the jug or accessories are correctly positioned and locked onto the motor unit.
There are excessive vibrations.	Place the product on a flat surface.	Place the product on a flat surface.
	The volume of ingredients is too high.	Reduce the quantity of ingredients.
There is a leak from the base of the accessories.	The volume of ingredients is too high.	Reduce the quantity of ingredients.
	The lid is not correctly positioned.	Lock the lid correctly on the blender jug.
The cutter does not turn easily.	Pieces of food are too large or too hard.	Reduce the size or quantity of ingredients being processed. Add liquid if appropriate.

Warning

1. Children should be closely supervised to ensure they do not play with the appliance.
2. This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental abilities, or those lacking experience and knowledge, unless they have received supervision or proper instruction regarding its use from a responsible person.
3. If the power cord is damaged, it must be replaced by the service center, the manufacturer, or a qualified professional to prevent the risk of electric shock.
4. Exercise caution when pouring hot liquids into the appliance, as they may be ejected due to sudden steaming.
5. Always ensure the appliance is switched off and disconnected from the power supply when it is left unattended, or before assembling, disassembling, cleaning, or approaching moving parts.
6. For household use only.

Recipe Instructions

1. Blender:

- 1.1 Use 1 part soft fruit to 3 parts water (only soft fruits, such as carrots, apples, etc.).
- 1.2 Do not exceed the maximum level mark.
- 1.3 Operate at the highest speed setting for 1 minute.

2. Grinder:

- 2.1 Place 50g of coffee beans into the grinding cup.
- 2.2 Operate at the highest speed setting for 30 seconds.

Recycling Instructions

1. Disposal of the Appliance and Packaging Materials: The packaging materials are composed of environmentally safe materials that can be disposed of in accordance with the recycling regulations in your area. For the disposal of the appliance, please contact the appropriate service of your local authority.
2. End-of-Life Electrical and Electronic Products: Your appliance is designed for long-lasting use. However, when it is no longer functional, do not dispose of it in the trash or landfill. Instead, take it to a local recycling center or designated waste reception facility.
3. Environmental Consideration: Your appliance contains valuable materials that can be recovered or recycled. Please ensure it is properly disposed of at a local civic waste collection point for recycling.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)