



GREEN LION



Green Lion

LINT X
Lint Remover

SKU: GNLINTXBK


Table of Contents

| | |
|----------------------------------|---|
| Specifications | 2 |
| Schematic View | 2 |
| Instructions for Use | 3 |
| Features | 4 |
| Safety Precautions | 4 |
| Maintenance and Usage Guidelines | 5 |
| Battery Instructions | 6 |
| Battery Safety Warnings | 6 |
| Troubleshooting | 7 |
| List of Material Content | 8 |
| Disposal | 8 |
| Warranty | 9 |
| Contact Us | 9 |

Specifications

| | |
|----------------|--------------------|
| Material | ABS |
| Battery | 800mAh |
| Power | 5W |
| Blade | 6 Blades |
| Speed | 3 Gears |
| Motor | 6900-7000-7200 RPM |
| Noise Level | <75 dB |
| Lint Container | 50 ml |
| Input | DC 5V 1A |
| Charging Port | Type-C |
| Charging Time | 2 Hrs |
| Working Time | 60-80 min |
| Product Weight | 175 g |
| Product Size | 58*130*78 mm |

Schematic View

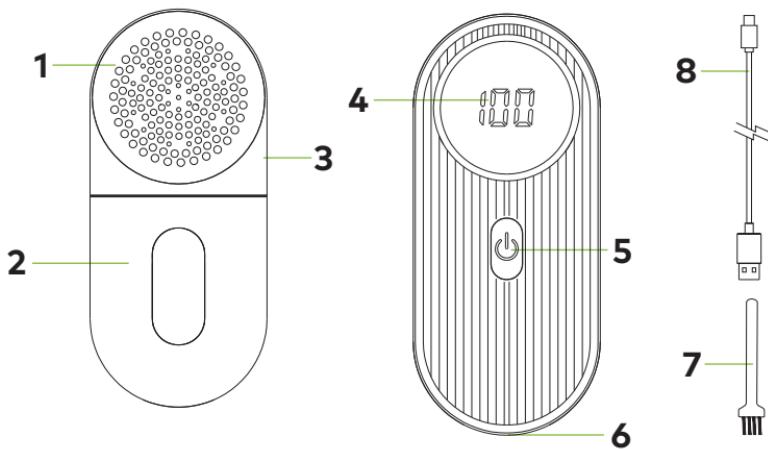

1. Lint Collector Screen
2. Lint Compartment
3. Body of the Device
4. Power/Battery Indicator
5. Power Switch
6. USB Charging Port
7. Cleaning Brush
8. USB Type-C Cable

Instructions for Use

1. Powering On/Standby Mode:

- 1.1 To power on the machine, press the On/Standby button once. The first gear indicator light will illuminate.
- 1.2 Press the button twice to switch to second gear; the corresponding work light will activate.
- 1.3 To power off the machine, press the button again. The machine will enter standby mode.


2. Charging:

- 2.1 During charging, the battery level display will indicate the current charge status.
- 2.2 When fully charged, the display will read "100" and remain lit to show the battery is full.

3. Preparing for Use:

Before using, ensure the clothes are laid flat. Pay special attention to the following areas to effectively remove lint without damaging the fabric:

- 3.1 Seams and loose threads
- 3.2 Delicate or fragile parts of the garment
- 3.3 Areas around embellishments or decorative elements

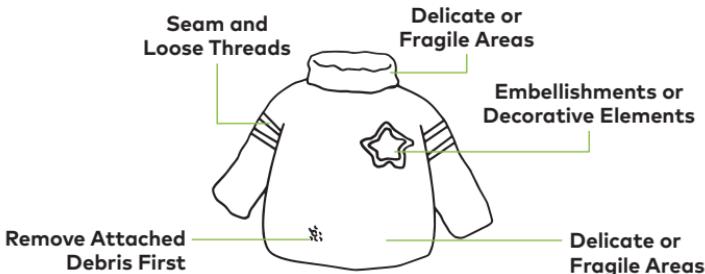

Notice: If you detect any abnormalities or malfunctions with this product, cease use immediately and refer to the troubleshooting guide for the appropriate actions. If the issue persists, please contact a service center for further assistance and maintenance.

Warning: This product should not be used on down-filled clothing such as jackets. Using this lint remover on such materials can damage the fabric.

4. Operation Principle:

4.1 The motor powers the blades to trim hairballs from the fabric.

4.2 It generates a suction force to lift and collect the lint into the cutting net, followed by precise trimming.

4.3 Post-trimming, the fan creates a suction that directs the lint into the storage compartment for easy disposal.

Features

1. The Stainless Steel Mesh Cover offers a durable and flexible surface for long-lasting use.
2. The Honeycomb Mesh Layout efficiently captures various types of lint and fuzz.
3. The High-Power Motor ensures robust suction and effective removal of lint.
4. The Special Rotatable Cutter Head adjusts automatically to avoid damaging garments.
5. The Strong Battery Life features a built-in polymer lithium battery for extended use per charge.

Safety Precautions

1. When disconnecting the charging cable, hold the end of the cable and gently pull it out. Avoid pulling on the power cable directly, as this can damage both the cable and its connector.

2. Do not insert fingers or metal objects into the blade compartment. Doing so can cause damage to the machine or result in injury.
3. The blades of this machine are extremely sharp. Handle with special care and attention to avoid cuts or other injuries.
4. Do not operate the machine during assembly or disassembly of the cutter head or mesh enclosure.
5. Avoid applying excessive force to the cutter head or striking it with hard objects, as this may damage the cutting edge.
6. Ensure the mesh enclosure and cutter head are installed correctly to prevent user injury or damage to the machine.
7. Avoid pressing the cutter head directly against clothing to prevent damage.
8. This product is designed solely for removing lint from clothing and should not be used for other purposes to avoid accidents.
9. Before use, inspect the blade for damage or deformation. Cease use and replace if any abnormalities are found to avoid damaging your clothes.
10. Keep the product out of reach of children. It is not a toy and may cause harm if used as such.
11. Do not charge the device outdoors or leave it charging unattended, as it may lead to electrical hazards or fire.

Maintenance and Usage Guidelines

1. To clean the machine, first dilute a neutral detergent with water. Use a damp cloth, wrung out well, to wipe away dirt. Avoid using substances like banana oil or gasoline for cleaning, as they can damage the plastic components and increase the risk of fire or electric shock.
2. Do not charge the machine in environments where the temperature is below 5°C or above 35°C. Avoid charging near heating appliances, in direct sunlight, or near other heat-generating objects, as these conditions can shorten the battery life and lead to fire, electric shock, or deformation of the product.

3. The cutter head is a consumable item and will become blunt over time, which can damage clothing if not replaced. It is recommended to consider 50 hours of use as a standard service life for the cutter head. Replace the cutter head based on its condition to maintain optimal performance.

Battery Instructions

- 1.** The device is equipped with a built-in polymer lithium-ion battery. Charging typically takes about 2 hours using a recommended 5V/1A adapter. When the battery level reaches 100%, it will stop increasing, indicating a full charge.
- 2.** Before charging, ensure there is no debris, dust, or water near the charging socket. Clean any foreign objects from the socket area to prevent the risk of fire, electric shock, or short circuit.
- 3.** The battery should ideally be recharged weekly. If the device is not used regularly, it is vulnerable to damage due to natural deterioration. If not in use, charge it at least once every six months to maintain battery health.
- 4.** Avoid placing the machine in high-temperature environments or in direct sunlight while charging. Always remove the charger from the device once charging is complete to prevent overcharging and potential accidents.

Battery Safety Warnings

- 1.** Do not remove the battery haphazardly. Follow the manufacturer's instructions to avoid damaging the device.
- 2.** Handle the machine carefully to prevent any damage or shocks to the battery.
- 3.** Keep any removed batteries out of reach of children to prevent accidental contact.
- 4.** If battery leakage occurs, avoid contact with the liquid. If it contacts

your skin or eyes, rinse thoroughly with clean water and seek medical advice immediately.

5. This device uses a polymerized lithium-ion battery, a renewable and environmentally friendly resource. Dispose of the battery at an officially designated recycling center. Do not discard it with household waste.
6. Remove the battery from the device before discarding the appliance.
7. Ensure the device is turned off before removing the battery.
8. Always dispose of the battery in a safe manner, adhering to local regulations regarding the disposal of batteries.

Troubleshooting

Issue 1: The machine does not work

Solution:

- 1.1 Ensure the mesh enclosure is securely fastened.
- 1.2 Verify that the machine is receiving power.
- 1.3 Check if the cutter head or fan blades are obstructed by debris.

Issue 2: Ineffective lint removal

Solution:

- 2.1 Remove the net cover, extract the cutter head, and replace it with a spare if necessary.
- 2.2 Ensure the blade is properly adjusted close to the mesh. If not, adjust the blade height.
- 2.3 Regularly clean the crumb storage box to maintain efficiency.

Issue 3: The machine does not charge

Solution:

- 3.1 Inspect the adapter for any damage and ensure it is functioning correctly.
- 3.2 Check if the charging indicator light turns on when connected.

List of Material Content

| Part Name | PB | Hg | Cd | Cr(VI) | PBB | PBDE |
|-----------------|----|----|----|--------|-----|------|
| Motor | X | O | X | X | O | O |
| Main Board | X | O | O | O | O | O |
| Battery | X | X | O | O | X | O |
| Plastic | O | O | O | O | O | X |
| Electronic Wire | X | O | X | O | O | X |

Compliance and Environmental Information

This product complies with the environmental regulations as specified in SJ/T11364.

Symbols used are defined as follows:

"O" indicates that the hazardous substance levels in all materials of the component are below the limits set in GB/T26572.

"X" signifies that the hazardous substance in a specific homogeneous material of the component exceeds the limit requirements specified in GB/T26572.

Note: This disclosure excludes batteries, which are regularly replaced and have separate guidelines.



Product Lifecycle and Disposal: Under the conditions of normal use as described in this manual, this product is designed for a 10-year environmentally friendly usage period. Feel confident using this product throughout this period. After its lifespan or warranty period, please ensure the product is disposed of properly by sending it to a designated recycling system.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)