

LéPRESSO



LePresso

Electric Pour-Over Kettle

SKU: LPCFFM0033

Table of Contents

Specifications	2
Schematic View	2
Important Safety Precautions	3
Boiling Point Altitudes	4
Before First Use	5
Instructions for Use	5
Control Panel Guide	6
Function Description	7
Optimal Brew Temperatures	9
Care and Maintenance	10
Troubleshooting	11
Disposal	11
Warranty	12
Contact Us	12

Specifications

Rated Voltage	220-240V
Rated Frequency	60/50Hz
Rated Power	1000 to 1200W
Power Cord	UK 3-Pin Plug
Capacity	800mL
Material	304 Stainless Steel
Weight	1.35kg
Dimensions	330 x 200 x 250mm

Schematic View

Gooseneck Pouring Spout

The spout is designed at 0.35" suitable for a slow, steady pour, providing optimal control over the flow rate for precise, drop-by-drop accuracy.

304 Stainless Steel

Made from 304 stainless steel for superior build quality.

30° Ergonomic Grip

Ergonomically designed for a comfortable hold and fine control during pour-over.

Hold Mode/Timer

Hold Mode: Maintains your desired temperature for up to 2 hours.

Timer Mode: Tracks the duration of your brew.

MUTE Mode

Press the "HOLD" and "-" buttons at the same time to mute the sound.

Adjust Temperature

Adjust Temperature

START|CANCEL Button

Press here to turn the kettle on or off.

°F/°C

Press the "START/CANCEL" and "+" buttons at the same time to switch between °F and °C.

Hi-Resolution LCD Screen

Displays everything you need to know to brew the perfect cup of coffee or tea.

Important Safety Precautions

Important: Please read, understand, and follow all the instructions provided in this manual before using the device. Failure to comply with the instructions in this manual or using the device in ways not mentioned may result in serious personal injury or equipment damage.

- 1.** Do not touch the base or steel parts of the kettle while the appliance is operating or immediately after use. These components will be hot and may cause burns or other personal injuries.
- 2.** Do not fill the kettle above the “Max” line. Overfilling may cause the water to boil over during operation and result in scalding. Pay attention to the minimum amount of water needed for boiling. Note that little water will cause the kettle to switch off before the water boils.
- 3.** Always handle with care when there is hot water inside the kettle. Failure to do so may result in burns or scalding.
- 4.** Use the appliance with the specified voltage 240-220V 60/50Hz.
- 5.** Do not allow children to use or play with this appliance. Always keep the kettle and its components out of reach of children.
- 6.** Do not use the kettle if it is malfunctioning, broken, chipped, or if the power cord or plug is damaged in any way. Stop using it immediately and contact a service center.
- 7.** Always unplug the kettle when it is not in use. This will prevent moisture from causing a short circuit in the power base while it is plugged in.
- 8.** This appliance is for indoor use only.
- 9.** Always place the kettle on a dry, flat surface.
- 10.** Do not place the kettle on or near heat sources such as stovetops, ovens, etc.
- 11.** Do not turn on the kettle while the lid is open.

- 12.** Do not cover the opening of the kettle while it is operating. Doing so may cause damage to the kettle.
- 13.** Always empty and clean the kettle after each use. If necessary, descale the kettle by following the instructions in Descaling the Kettle.
- 14.** Do not attempt to repair the kettle or its parts yourself or through third-party appliances when it is broken. Doing so may cause further damage or personal injury and will void your warranty.
- 15.** Do not dispose of this kettle in regular household waste.
- 16.** The kettle will automatically shut off in 10 minutes once the setting program is completed.
- 17.** If the kettle has been removed from the base, the system will keep the in-progress setting for 10 minutes.

Boiling Point Altitudes

NOTE:

At higher elevations, water boils at a lower temperature. At sea level, water boils at 212°F. For every 500 feet/152 meters of elevation gain, the boiling point of water decreases by approximately 0.9°F/0.5°C.

Altitude ft(m)	Boiling Point of Water °F (°C)
0 (0 m)	212°F (100°C)
500 (150 m)	211.1°F (99.5°C)
1000 (305 m)	210.2°F (99°C)
2000 (610 m)	208.4°F (98°C)
5000 (1524 m)	203°F (95°C)
6000 (1829 m)	201.1°F (94°C)
8000 (2438 m)	197.4°F (91.9°C)
10000 (3048 m)	193.6°F (89.8°C)
12000 (3658 m)	189.8°F (87.6°C)
14000 (4267 m)	185.9°F (85.5°C)
15000 (4572 m)	184.1°F (84.5°C)







Before First Use

1. Remove and safely discard any packaging material or promotional labels attached to your kettle.
2. It is recommended to fill the kettle to the maximum level with cold water before the first use. Bring the water to a boil by selecting the BOIL 212°F setting, then discard the water.
3. The kettle will only operate when positioned on the power base.

Water Test

Perform the water test before using your kettle to ensure it's working properly. Do not drink the water that is boiled during this initial test.


Instructions for Use

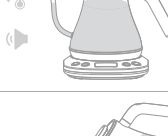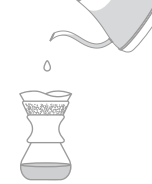	1. Fill the kettle with the desired amount of water. Ensure the water level does not exceed the maximum indicator
	2. Close the lid securely, making sure the spout is not directed towards or facing any wall or cabinet.
	3. Select your preferred temperature setting.
	4. Press the "START/CANCEL" button to begin heating.
	5. The kettle will beep to indicate when the selected temperature is reached.
	6. Enjoy your brewing.


Note: Add at least 2/1 cup (118 mL) of filtered water to the kettle. Do not fill above the "MAX" line. Wipe any water from the outside of the kettle and the base.

Control Panel Guide

1. Press the "START/CANCEL" button to turn on the kettle.

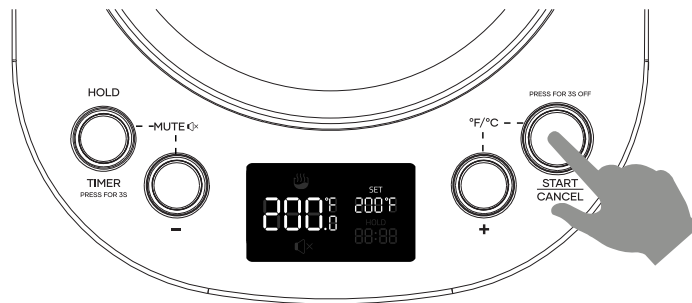

2. Press and hold the "START/CANCEL" button for 3 seconds to turn off the kettle.

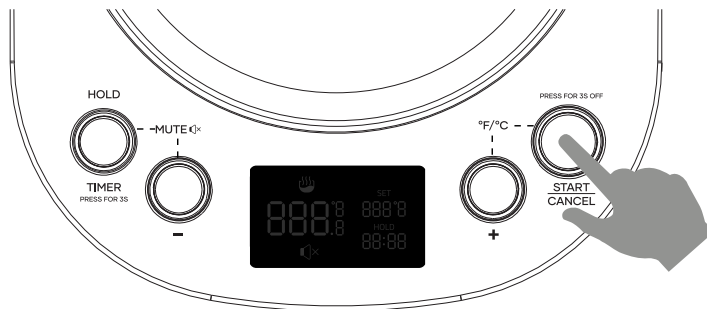


Note: When you press "START/CANCEL" to turn on the kettle, the indicator lights will illuminate sequentially from right to left and then from left to right. The monitor will activate, and the "START/CANCEL" indicator will remain turned on

Function Description

°F, °C Setting


Select your preferred temperature unit—Fahrenheit or Celsius, by pressing the "START/CANCEL" and "+" buttons simultaneously.

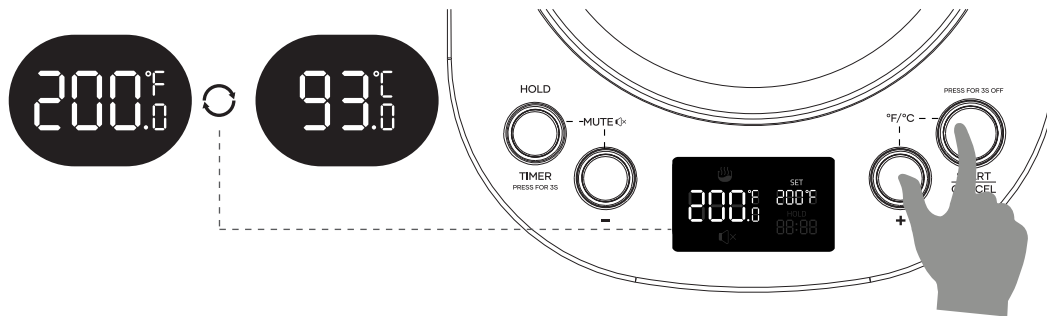


2 Hours HOLD Mode

After turning on the kettle, follow these steps to activate the HOLD mode:


1. Select Temperature: Rotate the "+" or "-" button to set your desired temperature.

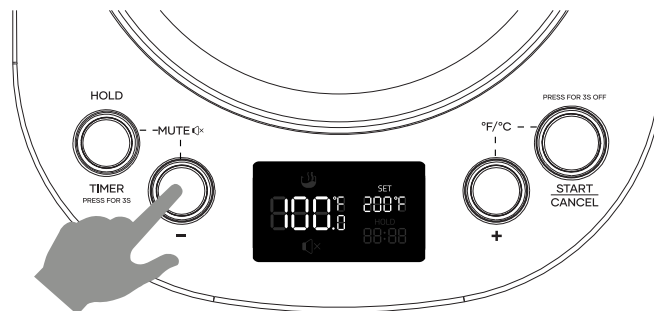

2. Set HOLD Mode: Press the HOLD button to activate the HOLD mode. The HOLD button will illuminate, and the screen will display "02:00" along with the HOLD icon.

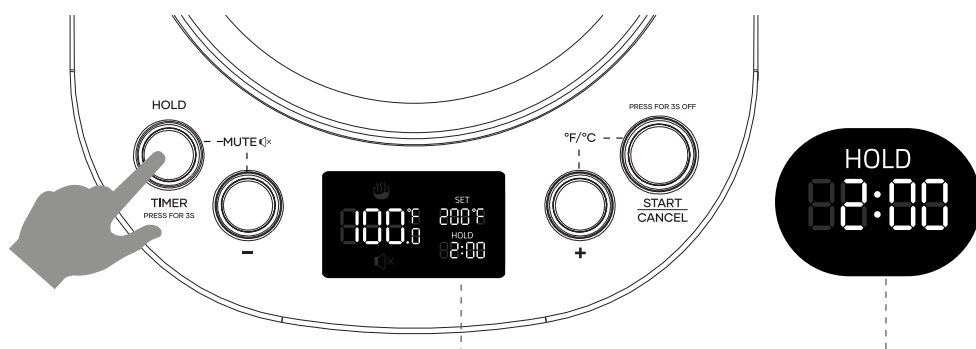

3. Cancel the HOLD Mode: The HOLD mode automatically concludes after 2 hours. Alternatively, you can manually stop the hold function by pressing the HOLD button. Once the mode is finished or canceled, the HOLD button light will turn off.

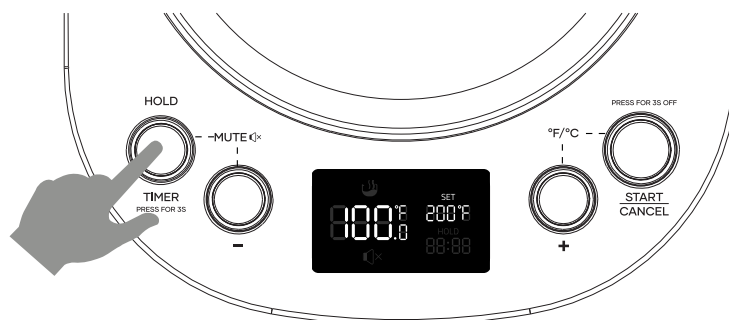


Note:

1. For safety concerns, Boil mode and temperatures ranging from 206°F to 212°F are not suitable for HOLD mode.
2. The keep warm mode will activate once the actual temperature drops to the set temperature, if the set temperature is lower than the current temperature.

Mute Mode

1. To activate Mute Mode, press the "HOLD" and "-" buttons simultaneously. A mute icon (🔇) will appear on the display, and there will be no beep sound or key tones while mute mode is active.
2. To deactivate Mute Mode, press the "HOLD" and "-" buttons simultaneously again. The mute icon (🔇) will disappear from the display.

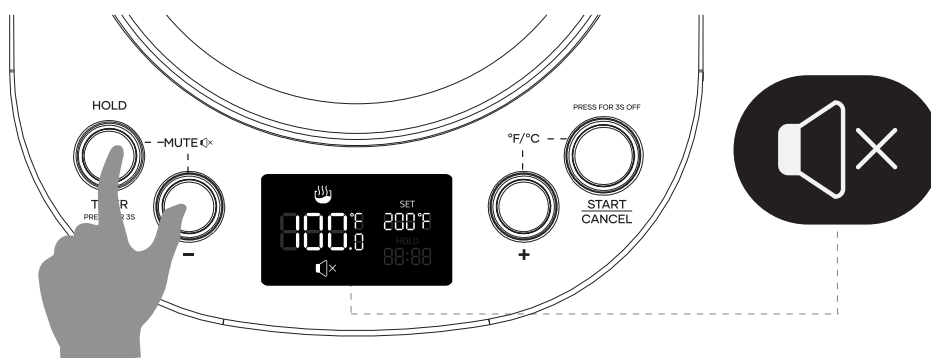

Memory Mode

The kettle features an internal memory that allows you to remove it from the base for up to five minutes without entering memory mode. Upon returning to the base, it will resume the heating or HOLD cycles from where they were paused.


Sleep Mode

If the kettle is not used for 10 minutes, it will automatically enter sleep mode. The heater and display will be turned off, but your last settings will be retained in the unit's memory.

Brew Stopwatch Mode

The kettle is equipped with a built-in Brew Stopwatch to monitor your brew time.

1. To start the Stopwatch: Hold the Hold button for 3 seconds.
2. The Stopwatch will begin after a 3-second countdown.
3. To turn off the Stopwatch: Press the Hold button again for 3 seconds.

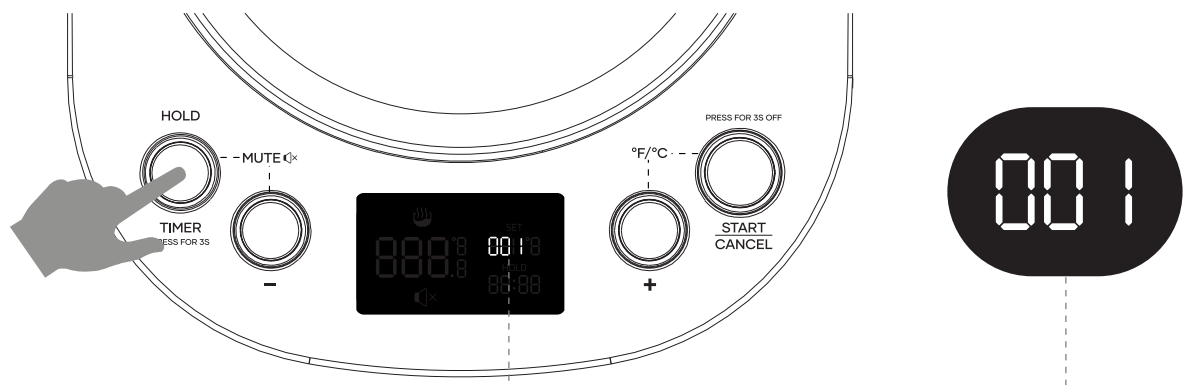

Optimal Brew Temperatures

Refer to the brew chart below for the ideal temperatures for brewing coffee, tea, and other hot drinks. Note that as tea can vary significantly in type, the provided tea steeping temperatures are basic guidelines. If specific brewing instructions are provided with your tea, it's best to follow those.

Boil	212°F (100°C)
Coffee	195 to 205°F (90 to 96°C)
White/Green Tea	170 to 200°F (76 to 93°C)
Oolong Tea	185 to 200°F (85 to 93°C)
Herbal/Black Tea	200 to 212°F (85 to 100°C)
Hot Cocoa	190°F (88°C)

Care and Maintenance

A. General Cleaning

1. We recommend cleaning the kettle after each use.
2. Unplug the power base from the electrical outlet.
3. Allow the kettle to cool completely, then pour out any remaining water.
4. Wash the kettle with warm, soapy water. Dry thoroughly with a soft, clean towel.

B. Descaling the Kettle

1. Descale the kettle at least once a week if used frequently. Descaling removes mineral deposits that accumulate inside the kettle. Always descale the kettle before storing it for long periods.
2. Fill the kettle with 1 cup of distilled vinegar or lemon juice and 2 cups of water (1:2 ratio).
3. Boil the mixture and let it soak in the kettle for 2 hours.
4. Pour out the solution and wipe any limescale with a cloth or nonabrasive sponge.
5. Rinse the kettle with clean water and dry with a soft cloth.
6. Repeat as necessary.

Troubleshooting

Problem	Solution
The kettle does not switch on.	<ol style="list-style-type: none">1. Check if the power plug is securely inserted into the outlet.2. Plug the power plug into an independent outlet.3. Try inserting the power plug into a different outlet.4. Reset the circuit breaker if necessary.5. For additional safety, the kettle is equipped with a thermal cutout. In the event of severe overheating, the kettle will automatically shut down to prevent further damage. If this occurs, please contact a service center.
The kettle does not work.	Check if the kettle is securely positioned on the power base.
No display on the screen.	<ol style="list-style-type: none">1. The kettle enters sleep mode after 5 minutes of inactivity. In sleep mode, the LCD screen will no longer illuminate.2. To reactivate the kettle from sleep mode, press the "START CANCEL" button on the power base.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website <https://www.lepresso.com/warranty> and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

<https://www.lepresso.com/warranty>

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: info@lepresso.com

Website: <https://www.lepresso.com/>

Instagram: [lepresso_official](#)