

LéPRESSO



LePresso

Electric Window Kettle

SKU: LPCFFM0037



Table of Contents

Important Safety Instructions	2
Specifications	4
Product Overview	5
Control Panel	5
Boil-Dry Protection	6
Sleep Mode	6
Before First Use	6
Instructions for Use	7
Descaling and Maintenance	9
Disposal	10
Warranty	10
Contact Us	10

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Important Safety Instructions

- 1. Read all instructions before using the appliance.**
- 2. Before connecting the appliance to the power supply, ensure the voltage indicated on the appliance corresponds to the voltage in your home.**
- 3. If the voltage does not match, contact your dealer and stop using the appliance.**
- 4. Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.**
- 5. Do not place the appliance on or near hot gas or electric burners, or inside a heated oven.**
- 6. Do not operate the appliance when empty to avoid damaging the heating element.**
- 7. Ensure the appliance is used on a firm and flat surface out of the reach of children to prevent the appliance from overturning and causing damage or injury.**
- 8. To protect against fire, electric shock, or personal injury, do not immerse the cord, plugs, or the appliance itself in water or other liquids.**
- 9. While the water is boiling or just after it has boiled, avoid contacting the steam from the spout.**
- 10. Always pour boiling water slowly and carefully to prevent the kettle from tipping over.**
- 11. Exercise caution when refilling the appliance while it is hot.**

12. Children aged 8 years and above, as well as persons with reduced physical, sensory, or mental capabilities, may use this appliance if they have been given appropriate supervision and instruction on safe usage and understand the involved hazards.

13. Children should not play with the appliance. Cleaning and maintenance should not be performed by children unless they are supervised and over 8 years old.

14. Ensure that children are supervised to prevent them from playing with the appliance.

15. Do not touch hot surfaces. Use the handle or buttons designed for operation.

16. The attached base should not be used for purposes other than its intended use.

17. Extreme caution is necessary when moving an appliance containing hot water.

18. The appliance is not a toy. Ensure that children do not treat it as such.

19. The appliance is designed for household use only. It should not be used outdoors.

20. Do not detach the filter during normal use to avoid spilling.

21. Use only accessories recommended by the manufacturer. Using non-recommended accessories may result in fire, electric shock, or injury.

22. Unplug the appliance from the outlet when not in use and before cleaning. Allow the appliance to cool before attaching or detaching parts and prior to cleaning.

23. To turn off the appliance, turn any control to "OFF," then remove the plug from the wall outlet.

24. The appliance must not be immersed in water or any other liquids.

25. Do not use the appliance for anything other than its intended use.

26. The kettle should be used only with the stand provided.

- 27.** Avoid overfilling the kettle, as boiling water may spill out.
- 28.** Always ensure the lid is closed and do not open it while the water is boiling to prevent scalding injuries. Scalding may occur if the lid is removed during brewing cycles.
- 29.** This appliance is intended for use in household and similar environments such as staff kitchens in shops, offices, and other work environments, farmhouses, in client accommodations in hotels, motels, and other residential settings, and in bed and breakfast environments.
- 30.** Save these instructions for future reference.


Specifications

Rated Voltage	220-240V
Rated Frequency	60-50Hz
Rated Power	1850 to 2200W
Control Set	Strix
Capacity	1.7L
Weight	1.36kg
Dimensions	218.5 x 150.9 x 252.8mm

Product Overview



Control Panel

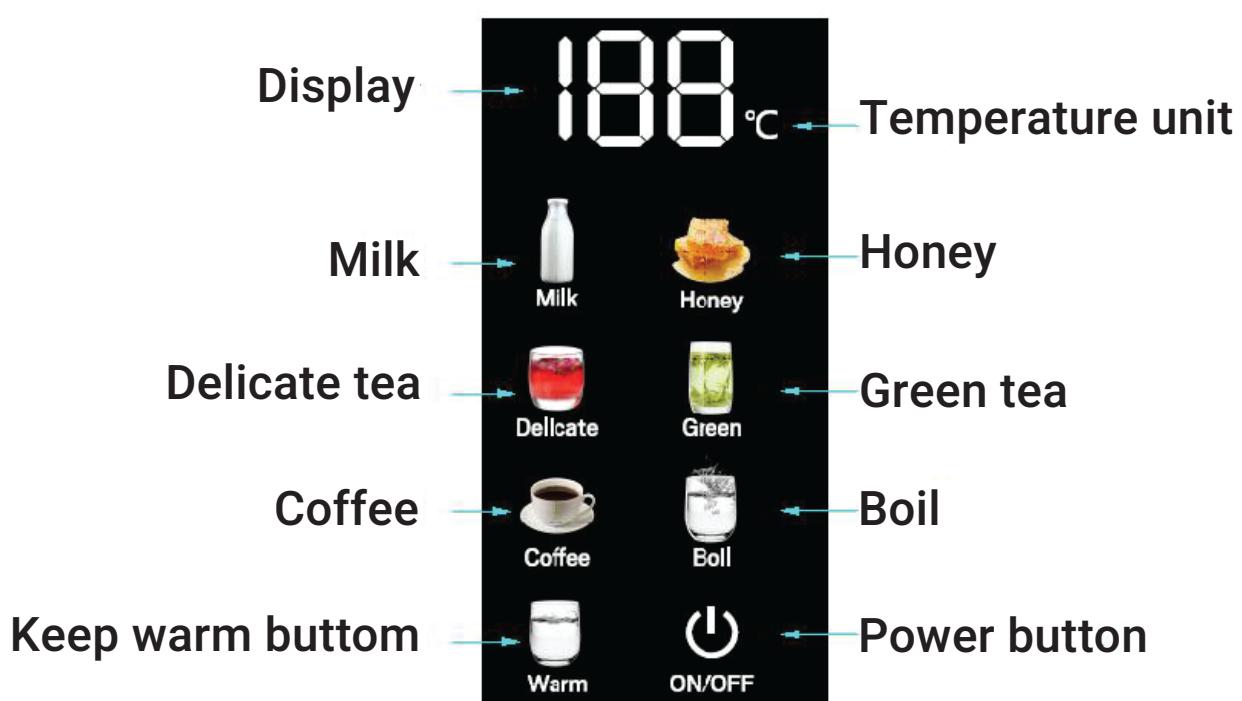

► Boil-Dry Protection

If the kettle is accidentally operated without water, the boil-dry protection function will automatically turn off the power. In the event of this happening, allow the kettle to cool before refilling it with cold water for re-boiling.

► Sleep Mode

1. In standby mode, the appliance will enter sleep mode if no operation is performed for 1 minute after selecting the desired function. The selected function will be displayed once the appliance is on.
2. The appliance will enter sleep mode after heating or keep warm function is completed while powered on. The selected function will be shown once the appliance is on.

► Before First Use

If you are using the kettle for the first time, it is recommended that you clean the kettle by boiling the maximum capacity of water once. Follow the operation below, then discard the water twice. Wipe the surface with a damp cloth.

Note: The maximum capacity of the kettle is 1.7L.

Instructions for Use

1. To fill the kettle, remove it from the power base. Fill it either from the spout or by pressing the lid button to open the lid.
2. Add the desired amount of water, ensuring the water level is between the Min and Max markers.
3. Using too little water may cause the kettle to turn off before the water boils. Make sure the lid is properly closed before use.
4. Place the kettle correctly on the power base.
5. Connect the kettle to the power source. You will hear one beep, and the LED display will flash for 3 seconds before the kettle enters standby mode.
6. In standby mode, the display shows the real-time water temperature, and the temperature unit will remain turned on.
7. After one minute of inactivity, the Power button indicator dims, and the display and other indicators turn off, indicating the kettle has entered sleep mode.
8. To activate the device, press any button, and the kettle will return to standby mode, displaying the real-time water temperature with the temperature unit turns on. If no further operation is made for another minute, the kettle will enter sleep mode again.
9. Select the desired function. The kettle offers six settings: "Milk," "Honey," "Delicate," "Green," "Coffee," and "Boil." After selecting the function, the display will show the corresponding water temperature for that setting (refer to Table 1).
10. Press the Power button to start the kettle. The display will show the real-time water temperature. When the set temperature is reached, two beeps will sound, the display will continue to show the real-time water temperature, and the kettle will stop heating, entering standby mode.

Table 1: Function and Water Temperature

Function	Water Temperature (°C)
Milk	40
Honey	60
Delicate	70
Green	80
Coffee	90
Boil	100

11. To activate the keep-warm function, press the keep-warm button . The keep-warm icon  will light up, and the real-time water temperature will be displayed. If the set temperature is higher than the current water temperature, the kettle will begin heating.

12. Once the set temperature is reached, you will hear two beeps. The display will show the real-time water temperature, and the kettle will enter keep-warm mode. At this point, the display will continue to show the real-time water temperature, and the keep-warm icon  will remain on.

13. If the set temperature is lower than the current water temperature, the kettle will not heat up and will directly enter keep-warm mode. The display will show the real-time water temperature, and the keep-warm icon  will light up.

14. After 30 minutes, the kettle will turn off. To turn off the keep-warm function, press the keep-warm button , and the keep-warm icon  will turn off.

15. Once the process is complete, remove the kettle from the power base and pour the water for serving.

Note: Handle the kettle carefully when pouring water, as boiling water may cause burns. Also, do not open the lid while the water is still hot.

16. The kettle can be stored on the power base when not in use. Always disconnect the power supply when the kettle is not in use.

Descaling and Maintenance

1. Always disconnect the appliance from the power outlet and allow it to cool completely before cleaning.
2. Never immerse the kettle, power cord, or power base in water, nor allow moisture to come into contact with these parts.
3. Wipe the body of the appliance with a damp cloth or cleaner, but avoid using a poisonous cleaner.

Caution: Do not use chemical, steel, wooden, or abrasive cleaners to clean the outside of the kettle.

4. Descaling

4.1 The kettle should be descaled periodically as mineral deposits from tap water may form scale on the bottom, reducing the efficiency of the appliance.

4.2 You can use a commercially available descaling agent and follow the instructions on the product packaging.

4.3 Alternatively, you can follow the steps below using white vinegar.

a. Fill the kettle with 3 cups of white vinegar, then add water until it completely covers the bottom of the kettle. Leave the solution in the kettle overnight.

b. Discard the mixture in the kettle, then fill it with clean water to the maximum position. Boil the water and discard it.

c. Repeat the process until the odor of vinegar has been flushed away.

d. Any remaining stains can be removed by rubbing with a damp cloth.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website [**https://www.lepresso.com/warranty**](https://www.lepresso.com/warranty) and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:
[**https://www.lepresso.com/warranty**](https://www.lepresso.com/warranty)

Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: [**info@lepresso.com**](mailto:info@lepresso.com)
Website: [**https://www.lepresso.com/**](https://www.lepresso.com/)
Instagram: **lepresso_official**