

**LèPRESSO**



**LePresso**

**GRINDBREW PRO**

**Coffee Brewer with Bean Grinder**

SKU: LPCFFM0043

# Table of Contents

<b>Important Safeguards</b>	<b>2</b>
<b>Important Notices</b>	<b>4</b>
<b>Specifications</b>	<b>4</b>
<b>Product Overview</b>	<b>5</b>
<b>Display Guide</b>	<b>6</b>
<b>Control Button Instructions</b>	<b>6</b>
<b>First Use</b>	<b>7</b>
<b>Instructions for Use</b>	<b>9</b>
<b>Set the Clock and Programming</b>	<b>12</b>
<b>Set Coffee Concentration</b>	<b>12</b>
<b>Set Cup Count</b>	<b>13</b>
<b>Adjust Coffee Powder Grind Size</b>	<b>14</b>
<b>Cleaning the Powder Channel</b>	<b>14</b>
<b>Regular Cleaning and Maintenance</b>	<b>16</b>
<b>Troubleshooting</b>	<b>17</b>
<b>Correct Disposal</b>	<b>18</b>
<b>Warranty</b>	<b>19</b>
<b>Contact Us</b>	<b>19</b>

Read this booklet thoroughly before using and save it for future reference

## Important Safeguards

- 1.** Before using the electrical appliance, always follow these basic precautions:
- 2.** Do not immerse the appliance or power cord in water or any other liquids.
- 3.** This appliance can be used by children aged 8 years and above, provided they are supervised or have received instruction on the safe use of the appliance and understand the associated risks. Cleaning and maintenance should not be carried out by children unless they are over 8 years old and supervised. Keep the appliance and its cord out of reach of children under 8 years old.
- 4.** The appliance can be used by individuals with reduced physical, sensory, or mental capabilities or lack of experience, as long as they are supervised or instructed on its safe use and understand the associated hazards.
- 5.** Children should not play with the appliance.
- 6.** The appliance should not be used by individuals (including children) with reduced physical, sensory, or mental capabilities, or lack of experience, unless supervised or instructed by a responsible person regarding its safe use.
- 7.** Always supervise children to ensure they do not play with the appliance.
- 8.** This appliance is intended for use in household and similar

applications such as: Staff kitchen areas in shops, offices, and other working environments, Farmhouses, Hotels, motels, and other residential environments, and Bed and breakfast-type environments.

**9.** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazards.

**10.** Before use, ensure the voltage of the wall outlet corresponds with the coffee maker's rating plate.

**11.** The appliance must be grounded.

**12.** Close supervision is necessary when the appliance is being used near children.

**13.** Do not place the coffee maker on hot surfaces or near open flames to avoid damage.

**14.** Always remove the plug from the wall outlet before cleaning and when not in use. Allow the appliance to cool completely before removing or attaching components, or before cleaning.

**15.** Do not operate the appliance with a damaged cord or plug, or if the appliance has malfunctioned, been dropped, or damaged in any way. Return it to an authorized service facility for examination, repair, or adjustment.

**16.** Using accessories not recommended by the manufacturer may cause injury or damage to the appliance.



**17.** Always place the appliance on a flat surface or table. Do not hang the power cord over the edge of the table or counter.

**18.** Ensure the power cord does not touch the hot surface of the appliance.

**19.** Some parts of the appliance may be hot during operation. Avoid direct contact with hot surfaces.

- 20. Never leave an empty carafe on the keeping-warm plate, as it may crack.
  - 21. Do not use the appliance outdoors.
  - Warning:** Misuse of the appliance may cause injury.
  - 22. The heating element surface remains hot after use.
  - 23. The coffee maker should not be placed in a cabinet while in use.
- Save these instructions for future reference.
- Household Use Only

## Important Notices


-  During use, avoid touching the high-temperature parts of the coffee maker, such as the warming plate and water outlet.
-  This machine is designed for brewing coffee or heating beverages. Exercise caution to avoid burns from water or steam splashes, or from improper use.

## Specifications

Rated Voltage	220-240V
Rated Frequency	50/60Hz
Rated Power	900W
Water Tank Capacity	1.35L
Coffee Bean Capacity	150g
Power Cord	UK 3-Pin Plug

Product Size	30 x 24 x 40cm
Net Weight	3.5kg

## Product Overview

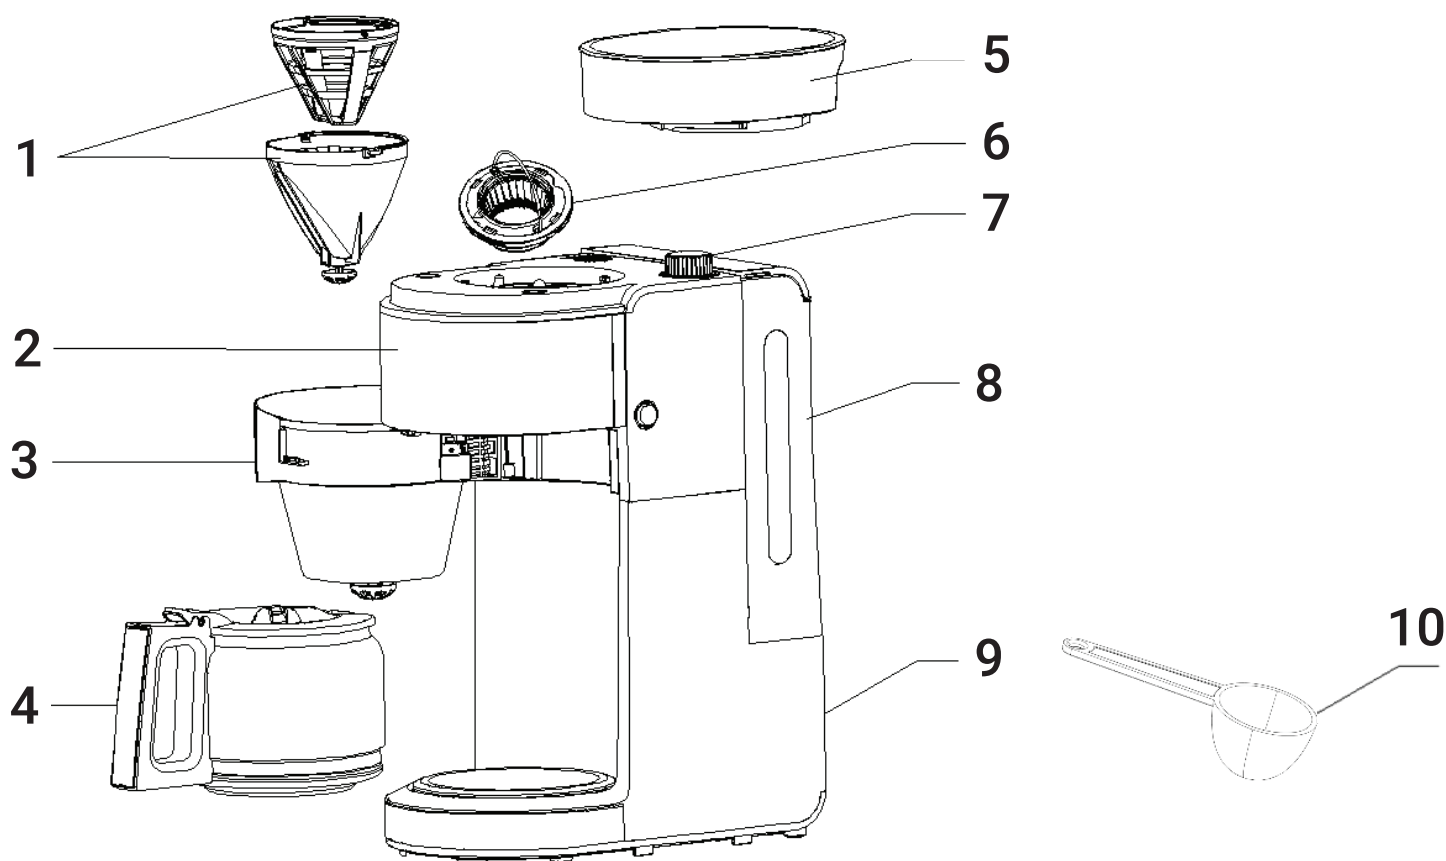

**1. Filter screen/funnel**

**2. Display panel**

**3. Funnel holder**

**4. Coffee pot**

**5. Bean container**

**6. Grinding wheel**


**7. Adjusting knob**







**8. Button**

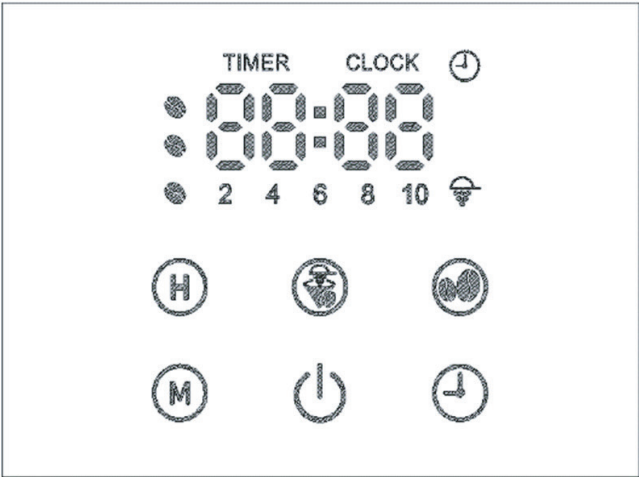**9. Water tank**



**10. Coffee spoon**





# Display Guide



<b>TIMER</b>	Set reservation time	<b>CLOCK</b>	Set current time
	Low concentration		Reservation status
	Medium concentration		Time display
	High concentration		Manual powder addition mode
2 4 6 8 10		Cup count display	

# Control Button Instructions

	Hour Settings Button: Press the button to set the time for the hour.		Minute Settings Button: Press the button to set the minute.
---	---	---	--


	<p><b>Bean/Powder Switch Button:</b></p> <p>Press the button to choose between bean grinding mode or manual coffee powder mode.</p>		<p><b>Power Supply Button:</b></p> <ol style="list-style-type: none"> <li>1. Controls the on and off states of the machine.</li> <li>2. Press and hold for 3 seconds to enter standby mode.</li> </ol>
	<p><b>Concentration Button:</b></p> <ol style="list-style-type: none"> <li>1. Select low concentration, medium concentration, or high concentration.</li> <li>2. Press and hold for 3 seconds to enter the cleaning mode for the powder path.</li> </ol>		<p><b>Reservation Button:</b></p> <ol style="list-style-type: none"> <li>1. Activates the reservation function.</li> <li>2. Press and hold to view the reservation time.</li> </ol>

## First Use

1. Before the first use, thoroughly clean all detachable parts: the water tank, coffee cup, funnel, filter screen, and coffee scoop.
2. Ensure the machine is unplugged before inspecting all accessories. Check that all parts are intact and undamaged.
3. Press the button on the right side of the machine and rotate the funnel holder to the left. Remove the funnel, filter screen, and coffee scoop. Clean these parts with warm water, using a mild detergent if necessary.
4. After cleaning, reassemble all the parts.



- 5.** Fill the water tank to the maximum level with drinking water, ensuring the water is not below the 2-cup mark.
- 6.** Plug in the machine. It will enter self-inspection mode, with all indicator lights turning on for 1 second and the buzzer beeping once to indicate the operation interface is ready.
- 7.** After entering the operation interface, press the ( ☕ ) button to set the machine to manual powder addition mode. When the ( 🍷 ) indicator light turns on, press the ( ⏻ ) button to start the machine. When the machine enters warming mode, it indicates that the machine has been cleaned. Press the ( ⏻ ) button again to exit warming mode.
- 8.** Pour out the water from the glass cup, indicating that the machine is ready to brew coffee.
- 9.** If no operation is performed within 3 minutes while the machine is in the operation panel, it will automatically enter standby mode.

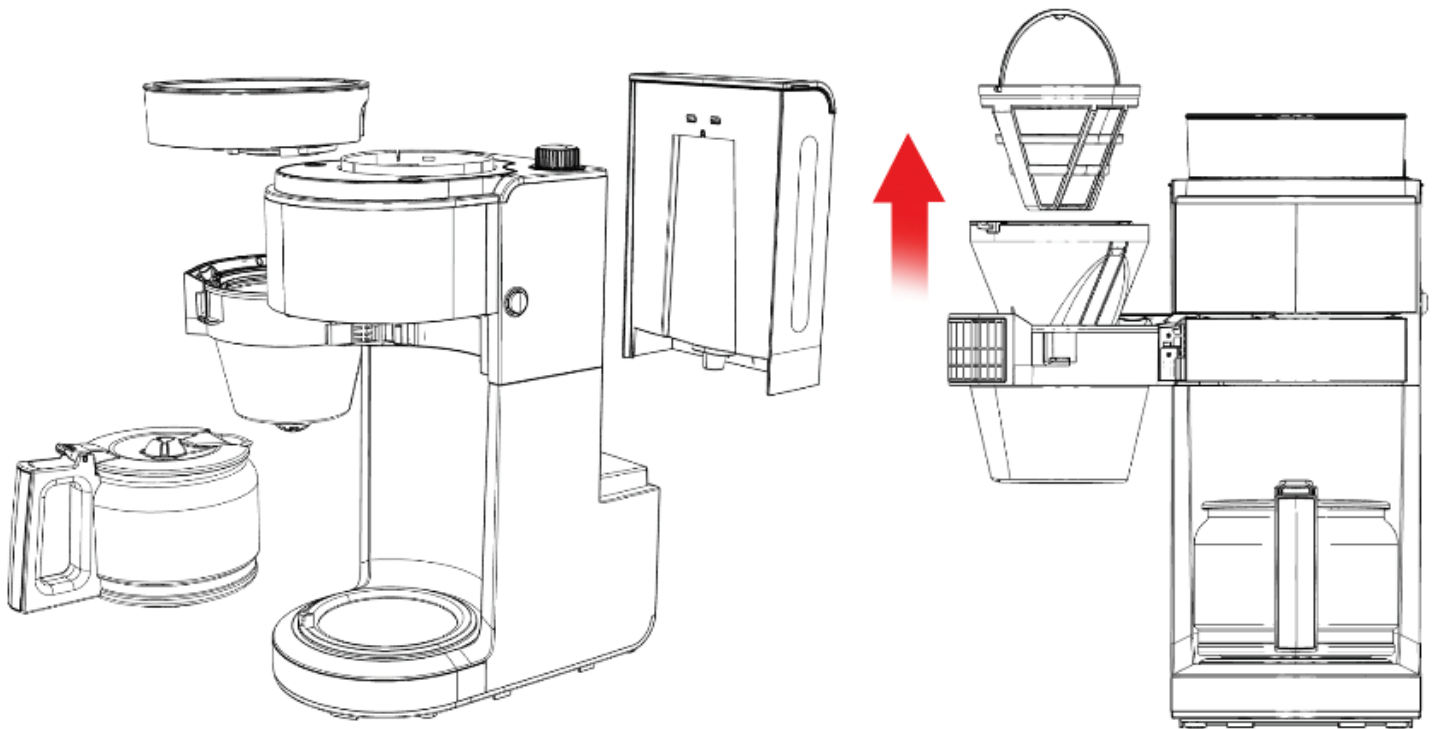

# Instructions for Use

The machine has two modes for making coffee:

Bean Grinding Mode


Manual Powder Addition Mode

**1.** The operation for Bean Grinding Mode is as follows:


**1.1** Open the water tank lid and fill the tank with drinking water up to the maximum mark. The water level should not exceed the 10-cup mark or be below the 2-cup mark.

**1.2** Open the bean container lid and add an appropriate amount of coffee beans (no more than 150g). Close the lid to prevent moisture from affecting the beans.

**1.3** Place the coffee cup in the designated position on the warming plate.

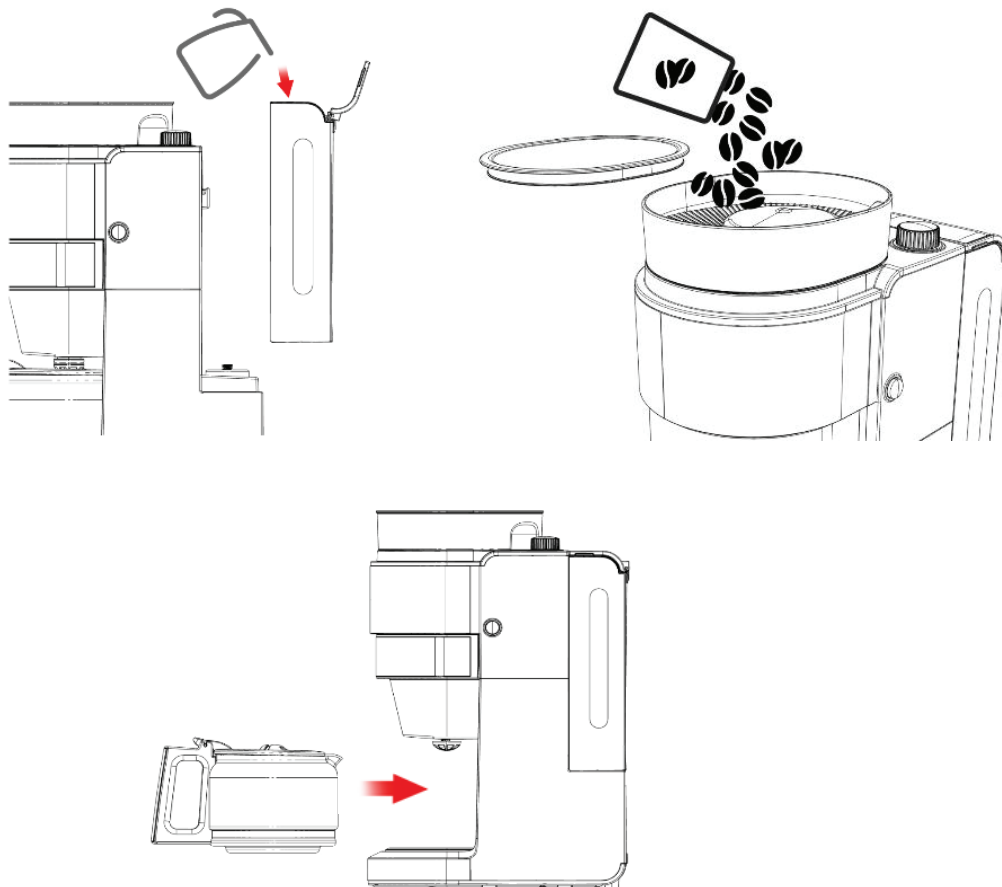

**1.4** Plug in the machine, which will enter self-inspection mode. All indicator lights will turn on for 1 second, and the buzzer will beep once to signal the entry into the operation interface.

**1.5** After entering the operation interface, select your preferred coffee concentration and press the (  ) button to start the machine. When the machine enters warming mode, it indicates that the coffee is ready. You can now enjoy your coffee.



**1.6** During operation, you can press the (  ) button at any time to stop the machine immediately.

**2.** The operation for manual powder addition mode is as follows:

**2.1** Open the water tank lid and fill the tank with drinking water up to the maximum mark. Ensure that the water level does not exceed the 10-cup mark or fall below the 2-cup mark.

**2.2** Position the coffee cup in the designated spot on the warming plate.

**2.3** Press the button on the right side of the machine and rotate the funnel holder to the left. Place the filter screen with coffee powder into the funnel, then rotate the funnel holder to the right to secure it in place.

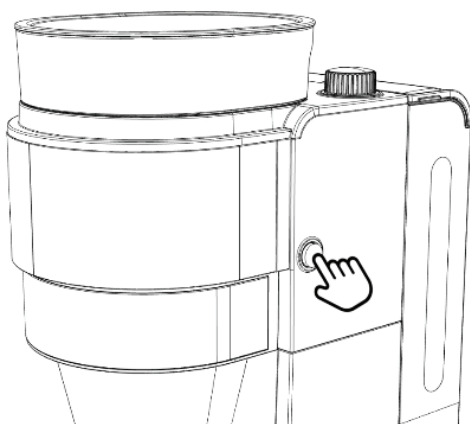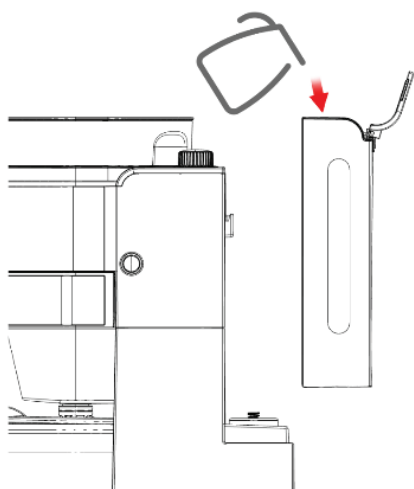

**2.4** Plug in the machine, which will enter self-inspection mode. All indicator lights will illuminate for 1 second, and the buzzer will beep once to indicate that the operation interface has been activated.


**2.5** Once the operation interface is displayed, press the button to enter manual powder addition mode. When the indicator light turns on, press the button again to start the machine. When the machine enters warming mode, it indicates that the coffee is ready. You can now enjoy your coffee.

**2.6** When the machine enters the warming state, the display will show "00:35" and begin counting down. Once the display reaches "00:00," the warming function will automatically turn off.

**Note:** During operation, the button can be pressed at any time to stop the machine immediately.





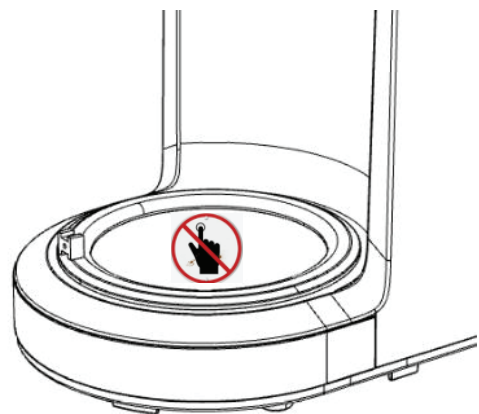





**Warning:**

- 1.** Do not open the funnel holder while the machine is operating to avoid burns from hot water or steam.
- 2.** During operation, do not remove the glass cup for more than 30 seconds to prevent water from overflowing from the funnel.
- 3.** Avoid touching high-temperature parts, such as the glass cup and the surface of the warming plate, during operation to prevent burns.



## Set the Clock and Programming


The appliance has a presetting function for scheduling automatic start-up. To set the clock and program the machine:

1. Press the (  ) button to set the current time and preset time.
2. Press the (  ) button once, and the LED will display "CLOCK." Press the (  ) button and the (  ) button to set the current time, with a range from 0:00 to 23:59.
3. Press the (  ) button twice, and the LED will display "TIMER." Press the (  ) button and the (  ) button to preset the machine's brewing start time, with a range from 0:00 to 23:59.
4. Press the (  ) button three times, and this indicates the timer has been set successfully. The machine will calculate the time. When the b indicator light is on, the machine is entering the reservation state. When the current time and preset time match, the machine will start brewing coffee, and the red indicator light on the (  ) button will turn on.
5. If you want to cancel the reservation function, press the (  ) button again.

## Set Coffee Concentration

1. Plug in the machine, which will enter self-inspection mode. All


indicator lights will turn on for 1 second, and the buzzer will beep once to indicate that the machine has entered the operation interface.

**2.** Set the coffee concentration by pressing the (  ) button. There are three concentration options: low (one bean), medium (two beans), and high (three beans).

**3.** Coffee concentration cannot be selected while the machine is in reservation or operation mode.

## Set Cup Count

**1.** Plug in the machine, which will enter self-inspection mode. All indicator lights will turn on for 1 second, and the buzzer will beep once to indicate that the machine has entered the operation interface.

**2.** Set the amount of coffee powder by pressing the (  ) button. The default setting is 6 cups. The available options for coffee powder are: 2 ,4 ,6 ,8, and 10 cups.


**3.** Cup count cannot be selected while the machine is in reservation or operation mode.

**Note:** When setting the number of cups, add the corresponding amount of water to the water tank. (Do not add too much water, as this will dilute the coffee if a smaller number of cups is selected.) For example, if you need 2 cups of coffee, add water up to the 2-cup mark on the water tank.

## Adjust Coffee Powder Grind Size

**1.** Use the knob below to adjust the grind size. The larger the dot, the coarser the coffee grounds; the smaller the dot, the finer the coffee grounds.

**2.** This machine is a bean-grinding American drip coffee maker. The recommended grind size setting is medium.

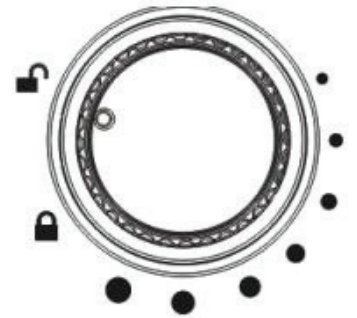


## Cleaning the Powder Channel

**1.** If the machine produces unusual noises during the grinding process or if the brewed coffee is just water, stop the machine immediately and proceed to clean the coffee channel.


**2.** Remove the coffee beans from the bean container. After unscrewing the container, carefully take out any remaining coffee beans from the grinding plate.

**3.** Plug the machine back in. It will automatically enter self-inspection mode, during which all indicator lights will illuminate for 1 second, and the buzzer will sound once, signaling that the machine is ready for operation.

**4.** To activate the powder channel cleaning function, press and hold the (  ) button for 3 seconds. The buzzer will beep once, and the display will show "OPEN," indicating that the powder outlet is open.

**Warning:** Never insert your fingers into the powder channel to avoid injury.



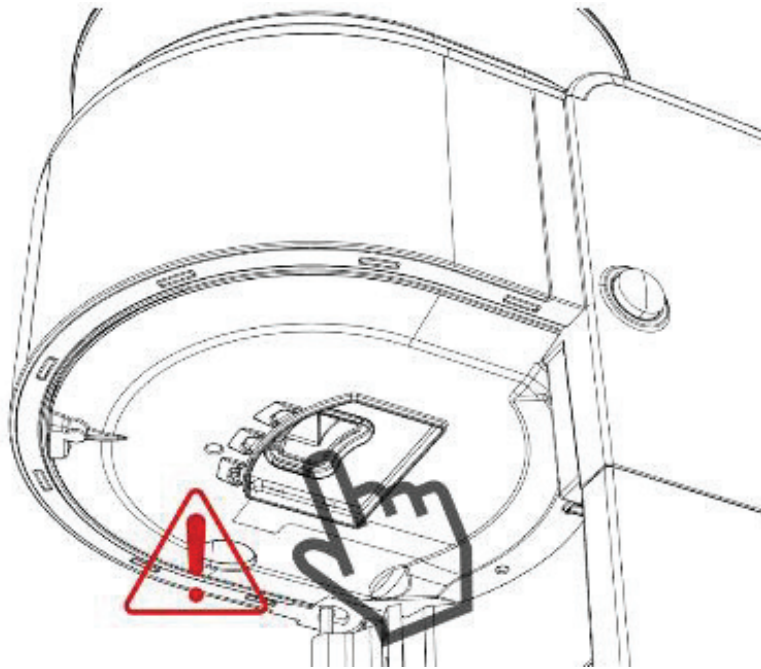


- 5.** Turn the knob to the (  ) position (Fig. B) and carefully remove the bean container. After disassembling the grinder wheel (Fig. A), use the provided cleaning brush to thoroughly clean it. Remove any remaining coffee powder from the lower powder outlet (Fig. C).
- 6.** Once the grinder is clean, press any button to close the lower powder outlet. Proceed with the normal assembly sequence to reinstall the grinder wheel. Turn the knob and reattach the bean container to complete the reassembly.

Fig. A

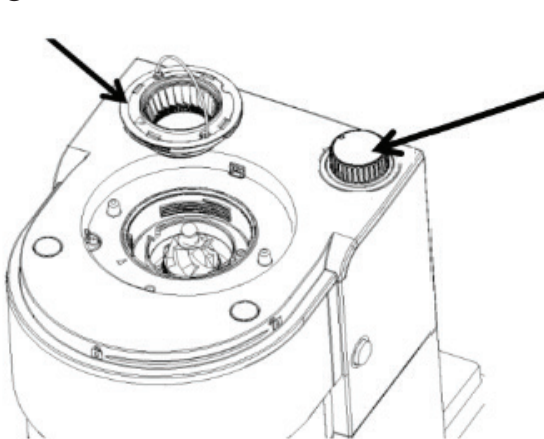


Fig. B


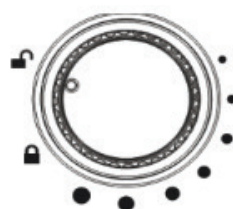


Fig. C



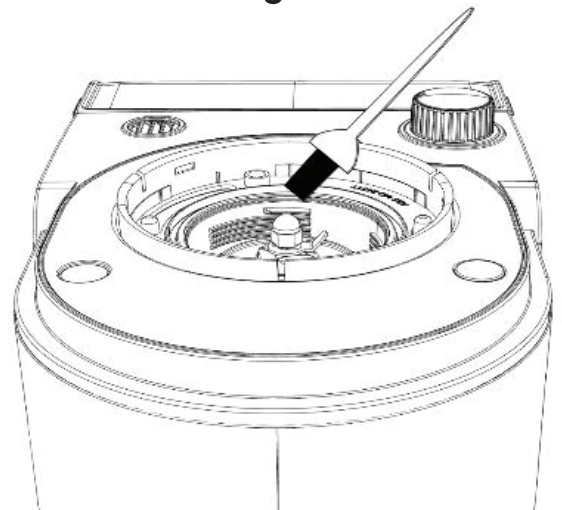

# Regular Cleaning and Maintenance

- 1.** To maintain the pure taste of your coffee, it is recommended to descale and clean the coffee maker every 2 to 3 months.
- 2.** Use a coffee maker descaler for the descaling process (the recommended water-to-descaler ratio is approximately 4:1, or follow the product's instructions). If a descaler is unavailable, citric acid can be used as a substitute (the recommended water-to-citric acid ratio is approximately 100:3).
- 3.** Avoid using coffee powder during the cleaning process.
- 4.** To clean the filter basket and coffee cup, follow the same brewing steps you would normally use for brewing coffee with coffee powder, but without the powder.
- 5.** Rinse thoroughly with clean water at least three times to ensure proper cleaning.
- 6.** During the cleaning process, allow the coffee maker to rest for at least 3 minutes between cycles.



# Regular Cleaning and Maintenance

Problem	Inspection Method	Solution
The grinding motor is not functioning. The coffee maker is unable to brew coffee.	Is the power plug properly inserted into the socket?	Please ensure that the power plug is properly inserted.
	Is the switch set to the correct position?	Please adjust the switch to the required position.
The coffee volume is insufficient. The coffee concentration is too weak.	Is the bean container properly installed?	Please make sure the bean container is properly installed.
	Is there any foreign object inside the bean container?	Please do not place anything other than coffee beans in the bean container.
No coffee powder is being dispensed. The grinding motor is not functioning.	Is the heating tube temperature too high?	Wait for the temperature control to recover to its normal power-up state.
	Is the machine displaying an error message?	Send the machine for inspection and repair.
The coffee maker is unable to brew coffee.	Is the correct amount of water added to the water tank?	Please ensure that the water tank contains the correct amount of water.
The coffee volume is insufficient.	Is the coffee concentration set to the appropriate level?	Please adjust the machine to the required function.
The coffee concentration is too weak.	Are there coffee beans in the bean container?	Please add the appropriate amount of coffee beans to the bean container.
E1	Is the bean container properly installed?	Please ensure that the bean container is properly installed.
E2	Is there a malfunction with the powder sealing plate?	Unplug the machine to restart it.
E3	Is there a blockage in the powder channel or a grinding motor stall?	Use the cleaning brush to clean the powder chamber and powder channel.

# Correct Disposal



This marking indicates that the product should not be disposed of with other household waste. To prevent potential harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, utilize the return and collection systems, or contact the retailer where the product was purchased. They will ensure the product is taken for environmentally safe recycling.



## Warranty

Products that you buy directly from our **LePresso** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **LePresso** website or store. If **LePresso** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **<https://www.lepresso.com/warranty>** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:

**<https://www.lepresso.com/warranty>**

## Contact Us

If you have any questions or concerns about our Shipping and Returns Policy, please contact us at: **[info@lepresso.com](mailto:info@lepresso.com)**

Website: **<https://www.lepresso.com/>**

Instagram: **[lepresso\\_official](#)**