

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**

**14-In-1 Trimming Kit**

SKU: PD-LFST112

# Table of Contents

 
Product Overview	2
Safety Warning	3
Digital Display	5
Charging Guide	5
Attach and Remove Combs	6
Cleaning the Appliance	8
Charging the Appliance	9
Usage Guide	9
Specifications	11
Cleaning, Maintenance, and Storage	11
Warning	12
Disposal	13
Battery Removal	13
Warranty	14
Contact Us	14

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

## Caution

1. Use this appliance only for its intended purpose as described in this manual.
2. Do not use the product if it is malfunctioning, has been dropped or damaged, or has fallen into water.


## Product Overview

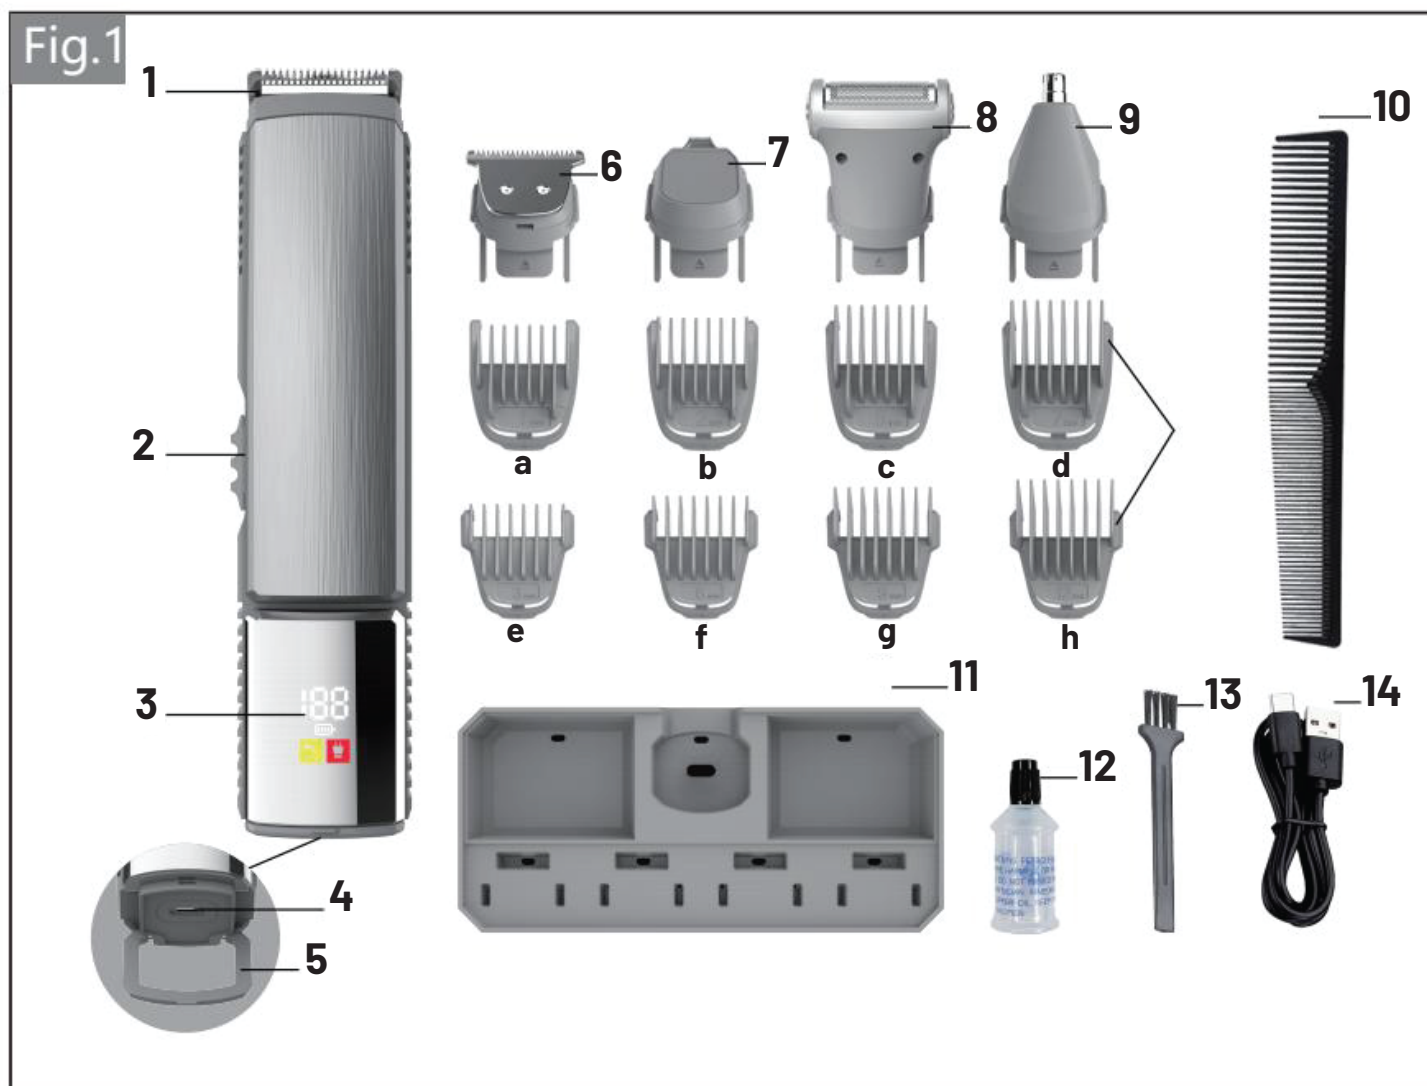

1. Precision trimmer
2. Slide on/off switch
3. Digital display for battery status
4. Charging port
5. Hanger hook
6. Full-size trimmer
7. Design trimmer
8. Micro shaver
9. Nose trimmer
10. Guide combs:
  - a-d: 1 mm, 2 mm, 5 mm, 7 mm
  - e-h: 3 mm, 6 mm, 9 mm, 12 mm
11. Stand base
12. Lubricating oil
13. Cleaning brush
14. Charging USB cable
15. Comb

## **Safety Warning**

1. This product is designed to meet high standards of quality, performance, and design. We hope you enjoy using your new appliance. Please read these instructions carefully before use and store them in a safe place for future reference.
2. Do not allow children under 8 years of age, or individuals with physical, sensory, or mental impairments, or those lacking experience and knowledge, to use this appliance unless they have been properly instructed on its safe operation and fully understand the potential hazards.

3. Children must not play with the appliance. Cleaning and maintenance must not be carried out by children without supervision.
4. Use this appliance only for its intended purpose as described in this manual.
5. Do not use the appliance if it is malfunctioning, damaged, or has been dropped into water.
6. Do not allow individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, to use this appliance unless they are under supervision or have received proper instruction.
7. Do not allow children to play with the appliance, even under supervision.
8. When using the appliance in a bathroom, always unplug it after use. The presence of water poses a risk, even when the hairdryer is switched off.
9. For additional safety, it is recommended to install a residual current device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit supplying the bathroom. Consult a qualified installer for guidance.
10.  **Warning:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
11. **Burn hazard:** Keep the appliance out of reach of young children, especially during use and while cooling down.
12. Do not leave the appliance unattended while it is connected to the power supply.
13. Always place the appliance on a heat-resistant, stable, and flat surface, using the stand if provided.
14. If the power supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid potential hazards.
15. This appliance contains a built-in rechargeable battery. Do not dispose of it in fire, expose it to heat, or charge, use, or store it in high-temperature environments.
16. This appliance is not intended for use on animals.

## Digital Display

### **A.** Battery Capacity (Minutes)


Displays the remaining usage time in minutes based on the current battery level.

### **B.** Cleaning Indicator

Illuminates when the appliance requires cleaning.

### **C.** Charging Indicator


Indicates charging status; the indicator turns off when the battery is fully charged.

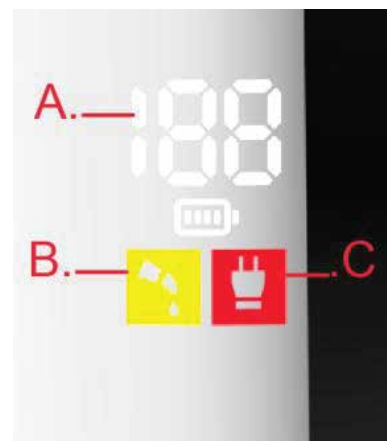

## Charging Guide

- 1.** Before using your personal groomer for the first time, charge it for 2 hours until fully charged.
- 2.** Ensure the appliance is switched off before charging.
- 3.** For convenient USB charging, insert the USB charging pin into the appliance. Connect the USB cable to your computer or any USB adapter, then plug the adapter into the mains power supply.
- 4.** The charging indicator will illuminate to show that the appliance is charging. Once fully charged, the indicator will turn off.
- 5.** When fully charged, the battery capacity will display up to 90 minutes of usage time.
- 6.** Your personal groomer is equipped with overcharge protection; however, do not charge it for more than 2 hours continuously.
- 7.** If the appliance will not be used for an extended period (e.g., 2 months), unplug it from the mains and store it. Recharge fully before using it again.
- 8.** To maintain battery performance, allow the battery to fully discharge every six months, then recharge for 2 hours.

**Notice:** This product features a digital display for battery status.

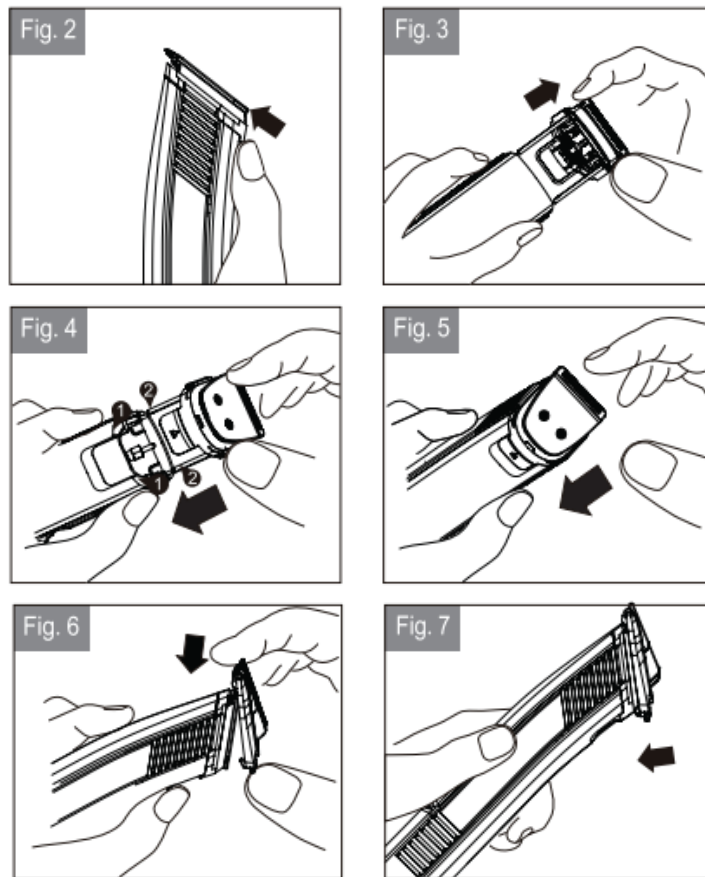

## **Attach and Remove Combs**







- 1.** When changing attachments, position the part correctly using your fingers.
- 2.** Align the two side edges of the head with the body, ensuring they match the locking grooves. Press firmly into place (Fig. 4 and 5).
- 3.** Attach the positioning comb by sliding it from front to back evenly until it locks securely onto the head (Fig. 6 and 7).
- 4.** Removing Accessories: To remove the head attachments, slide them out gently as shown in the illustrations (Fig. 2 and 3).
- 5.** Guide Combs Included
  - 5.1** Includes 4 guide combs for the full-size trimmer.
  - 5.2** Includes 4 guide combs for the precision trimmer.

## Attaching Guide Combs for Full-Size Trimmer

No.	Level	Length(mm)
1	1	3
2	2	6
3	3	9
4	4	12

## Attaching Guide Combs for Precision Trimmer

No.	Level	Length(mm)
1	1	1
2	2	2
3	3	5
4	4	7

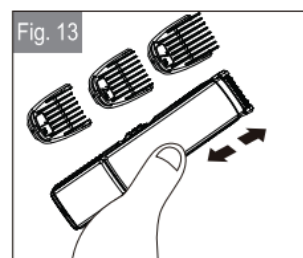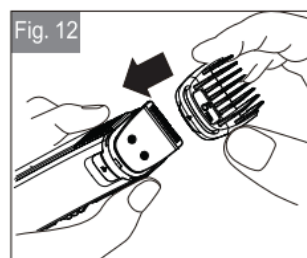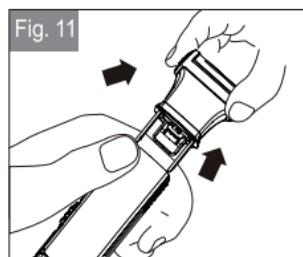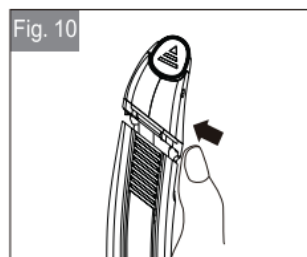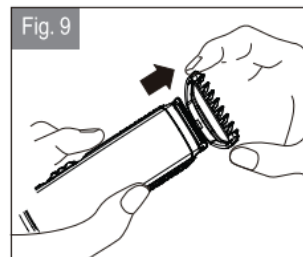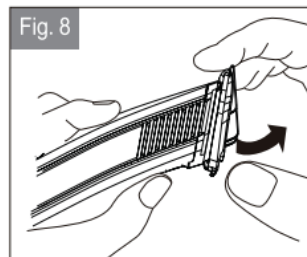

**6.** Remove the positioning combs by sliding them from back to front as shown in the illustration (Fig. 8 and 9).

**7.** To remove the micro shaver attachment, slide it out and detach it from the body (Fig. 10).

**8.** To attach the micro shaver, press both sides of the attachment and insert it into the body until it locks in place (Fig. 11).



**9.** Attach the precision trimmer guide combs from top to bottom, ensuring balanced alignment until the comb locks into the head (Fig. 12).

## **10.** Guide Comb Selection

**10.1** Precision trimmer includes 4 guide combs: 1 mm, 2 mm, 5 mm, and 7 mm.

**10.2** Full-size trimmer includes 4 guide combs: 3 mm, 6 mm, 9 mm, and 12 mm.

**10.3** Slide the guide combs from top to bottom for secure placement (Fig. 13).




## **Cleaning the Appliance**

**1.** When cleaning the appliance, first disassemble it as shown in the illustrations (Fig. 15 ,14 and 16).

**2.** Use the included cleaning brush to remove dust and debris from the internal components.

**3.** This product is water-resistant. Do not immerse the appliance in water.


**4.** The blade head may be rinsed under running water for cleaning (Fig. 17).

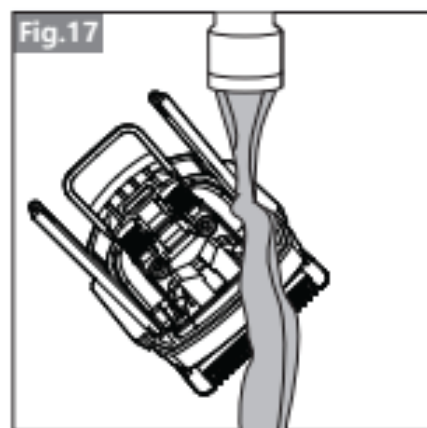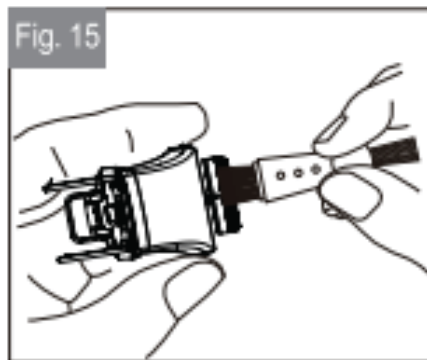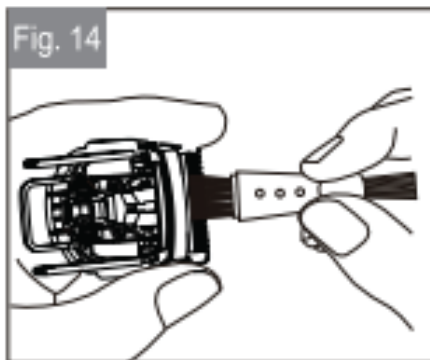

## Charging the Appliance

**1.** Insert the charging pin into the appliance. Then connect it to your computer or any USB adaptor, and plug the adaptor into the mains power supply (Fig. 18).

The charging indicators will illuminate to show that the appliance is charging.

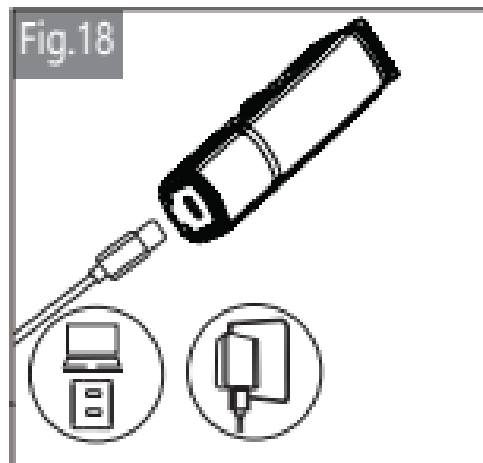

## Usage Guide

**1.** To Thin and Taper the Beard/Moustache (Fig. 19 and 20)

**1.1** Attach a guide comb to the full-size trimmer. If using the trimmer for the first time, start with the maximum trimming length setting.

**1.2** Turn the unit on.

**1.3** Place the flat top of the trimmer comb against the skin.

**1.4** Slowly slide the personal groomer through the hair. Repeat from different directions as needed.

**1.5** If hair accumulates in the trimmer comb during the trimming process, switch off the unit, remove the comb, and clean it by brushing or rinsing.

**2.** To Define the Beard/Moustache Line (Fig. 21 and 22)

**2.1** Hold the personal groomer with the precision trimmer blade facing you.

**2.2** Start at the edge of the beard or moustache line and gently lower the trimmer blade onto your skin.

**2.3** Use trimming motions along the beard/moustache line to shape the desired outline in the facial area, moving away from the beard in the neck area.

### **3. Trim the Edge of Sideburns (Fig. 23 and 24)**

**3.1** Hold the personal groomer with the precision trimmer blade facing you.

**3.2** Start at the edge of the beard or moustache line and gently lower the trimmer blade onto your skin.

**3.3** Use smooth, controlled motions toward the edge of the beard/moustache line to trim to the desired areas of the face, moving away from the beard along the neck area.

### **4. To Remove Hair from Nose (Fig. 25)**

**4.1** Attach the nose trimmer attachment.

**4.2** Gently insert the personal groomer into the nostril.

**4.3** Move the groomer in and out of the nostril while rotating it at the same time.

**4.4** Do not insert the cutting unit more than 6 mm into the nostril.

### **5. Using the Micro Shaver Trimmer (Fig. 26)**

**5.1** Attach the micro shaver trimmer.

**5.2** Hold the groomer so that the micro shaver gently touches your face at a 45-degree angle.

**5.3** Use short, steady movements to shave around your beard or moustache while keeping the device upright to improve control and ease of use.

### **6. To Make Different Designs (Fig. 27)**

Attach the design trimmer attachment to create different styles and patterns.

### **7. To Remove Hair from Eyebrows (Fig. 28)**

Attach the design trimmer attachment to trim or shape eyebrow hair.

### **8. Attaching and Removing the Trimmer Comb Attachment**

**Note:** Always ensure the personal groomer is switched off before attaching or removing any parts.

## Tips for Best Results

- a.** Beard, moustache, and sideburn hair should be dry before trimming.
- b.** Avoid using lotions prior to grooming. Comb the hair in the direction of growth.
- c.** Remove trimmer comb attachments when:
- d.** Defining hairline edges such as sideburns
- e.** Trimming the nape of your neck
- f.** Trimming the beard line at the front of the neck

## Specifications

Material	Stainless Steel Blades, PC/ABS
Waterproof Rating	IPX6
Battery Capacity	600mAh
Charging the Motor	DC 3.7V
Charging Time	2H
Working Time	90Min
Charging Port	USB-C
Guide Comb Lengths	1mm, 2mm, 3mm, 5mm   6mm, 7mm, 9mm, 12mm
Attachments	14 Attachments

## Cleaning, Maintenance, and Storage

### After Each Use:

- 1.** Turn off the personal groomer.
- 2.** Gently brush away any remaining hair.
- 3.** Detach the blade head from the appliance and rinse it under running water for cleaning.

### Cleaning Cautions:

- 1.** Only the guide comb attachment and trimmer blade may be removed for cleaning.

2. Cleaning should be performed using a soft brush, such as the one provided with the product.
3. Use only light-grade oil supplied or standard sewing machine oil for the blades.
4. Do not use harsh or corrosive cleaners on the unit or its blades.
5. Do not submerge the appliance in water, as this may cause damage.

### **Storage:**

1. Always store the appliance and power cord in a dry, moisture-free environment.
2. Do not store the unit in temperatures exceeding 140°F (60°C).
3. Do not wrap the charging adaptor cord around the appliance.


## **Warning**

To Reduce the Risk of Burns, Electrocution, Fire, or Injury to Persons:

1. The appliance should never be left unattended while plugged into a power outlet.
2. Keep the power plug and cord away from heated surfaces.
3. Ensure the power plug and cord do not come into contact with water.
4. Do not plug in or unplug the appliance with wet hands.
5. Do not use the appliance if the cord is damaged. A replacement cord can be obtained through our international service centers.
6. Charge, use, and store the appliance in an environment with a temperature between 15°C and 35°C.
7. Always unplug the appliance from the mains before cleaning.
8. Use only the parts supplied with the appliance.
9. Keep the appliance out of reach of children. Use by individuals with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, may pose a risk. Such individuals should only use the appliance under supervision or with clear instruction from a responsible person.

## Disposal


1. Do not dispose of the trimmer with household waste at the end of its useful life.
2. Disposal can take place at our service centers or at designated collection sites.  
Caution: Do not incinerate or mutilate battery packs, as they may explode or release toxic substances.
3. Do not discard the appliance with regular household waste. Instead, return it to an official recycling collection point at the end of its service life.
4. By doing so, you contribute to the protection and preservation of the environment. (See Fig.29)

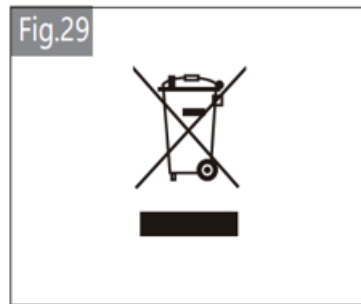

## Battery Removal

1. Lift the battery out of the housing by cutting the connection between the body and the power line using scissors. Twist the connecting wires until they detach. (Fig.30)
- Important:** The battery must be removed from the appliance before disposal. Dispose of the battery safely according to local regulations.
2. Unplug the groomer from the outlet to avoid the risk of electric shock.
  3. Remove the rear cover of the groomer by prying off the rubber panel using a flathead screwdriver.
  4. Pry the on/off switch from the product using the same tool.
  5. Unscrew the upper housing with a Phillips head screwdriver.
  6. Gently separate the upper housing from the body using a flathead screwdriver. This will expose the batteries.
  7. Use wire cutters to clip the wires connected to the batteries.

**8.** Remove the batteries from the appliance and contact your local authorities for proper battery disposal.

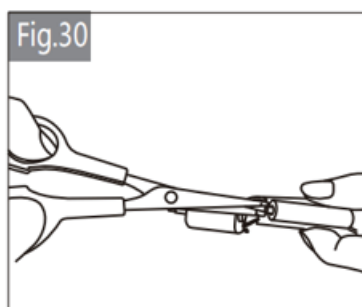

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **[porodo.net/warranty](https://porodo.net/warranty)** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

**[porodo.net/warranty](https://porodo.net/warranty)**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**[info@porodo.net](mailto:info@porodo.net)**

Website: **[porodo.net](https://porodo.net)**

Service Support: **[support@porodo.net](mailto:support@porodo.net)**

Instagram: **[porodo](https://www.instagram.com/porodo)**