

PORODO
LIFESTYLE



Porodo Lifestyle

Vertical Waffle Maker

SKU:PD-LFST118

Table of Contents

Safety Precautions	2
Specifications	2
Instructions for Use	3
Disposal	5
Warranty	6
Contact Us	6

Before using the product, please carefully read this User Manual to guarantee correct usage and keep it secure for future reference.

Safety Precautions

- 1.** Always allow the waffle maker to cool down completely before cleaning or storing it. The surface and interior may remain hot even after use.
- 2.** Keep the appliance out of reach of children and ensure they do not come into contact with hot surfaces or the power cord.
- 3.** Do not touch the heating plates, exterior, or any other hot surfaces while the waffle maker is in use or immediately after use.
- 4.** Ensure that the appliance is placed on a stable, heat-resistant surface to avoid accidents or damage during operation.
- 5.** Always unplug the waffle maker when not in use, especially during cleaning, to reduce the risk of electrical shock.
- 6.** Do not immerse the waffle maker in water or any other liquid. Clean only with a damp cloth.
- 7.** Avoid using the appliance if the power cord or plug is damaged. Replace the cord or have it repaired by a qualified professional before use.
- 8.** Do not leave the appliance unattended while it is in use to prevent overheating or fire hazards.
- 9.** Ensure the power cord is kept away from hot surfaces and is not dangling where it could be accidentally pulled.
- 10.** Only use the waffle maker in accordance with the manufacturer's instructions. Unauthorized repairs or modifications can pose serious safety risks.

Specifications

Input	5V/3A, 9V/3A, 12V/2.5A
MagSafe Output	10W (Max)

Watch Output	3W (Max)
Earbuds Output	5W
Stand Material	Stainless Steel
Operating Temperature	0°C to 40°C
Model Number	LFS118
Appropriate Adapter Power	>25W

Instructions for Use

1. Place the waffle maker on a clean, stable surface.
2. Plug in the waffle maker. The red indicator light will turn on. During the first use, you may notice a slight odor and a small amount of smoke, which is normal for the initial few minutes.
3. Temperature Setting: There are 5 temperature settings. Setting 5 is the highest temperature, and setting 1 is the lowest. We recommend using position 3 for optimal results.



4. Once pre-heating is complete, the green indicator light will turn on, and you will hear 5 chimes. This indicates that the waffle maker is ready for use.
5. Use the batter scoop to fill the batter through the input hole.



6. Cooking Time: If the temperature is set to position 3, the cooking time will be 3 minutes. You can adjust the time as needed; longer cooking times will result in a browner waffle.

7. When the cooking is complete, the green indicator light will turn on and you will hear 5 chimes. Gently push the lock and open the waffle maker slowly. Be cautious not to touch any hot surfaces, as they may be dangerous.



8. Always use a wooden or plastic clamp to remove the cooked waffle to avoid damaging the cooking plate.



9. After removing the waffle, close the waffle maker. You should hear the sound of the lock engaging. You can then proceed to cook a second waffle if desired. **Note:** If the lock is not working properly, stop using the waffle maker and contact a service center.



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at porodo.net/warranty and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**