

PORODO
LIFESTYLE



Porodo Lifestyle
EDGEMASTER T-Blade
Trimmer and Shaver

SKU: PDLFST185

Table of Contents

Preface	2
Attention	2
Specifications	3
Instructions for Use	3
Maintenance Guide	5
Troubleshooting	5
Product Overview	6
Correct Disposal	6
Battery Removal	6
Warranty	7
Contact Us	7

Preface

Thank you for choosing this product. This guide is provided to help you use the hair trimmer and shaver correctly and effectively. Please follow the instructions carefully to ensure optimal performance and longevity of the device.

Attention

Danger: Keep the adapter dry at all times.

Warnings

1. Before connecting the power supply, ensure that the voltage on the product matches the local power voltage.
2. Do not charge the device for extended periods, or when the temperature is below 0°C or above 40°C, as this may reduce battery life.
3. Only use the supplied charging cable for charging; do not use any third-party accessories.
4. Always unplug the charger before cleaning the hair trimmer with water.
5. If the power cord is damaged, replace it with a compatible flexible cord from the manufacturer or an authorized service provider.
6. For stains on the trimmer's body, use a soft cloth with neutral detergent. Do not use alcohol, gasoline, or other chemicals.
7. If any abnormalities occur during charging (e.g., unusual noise or temperature), immediately disconnect the power supply and stop using the product. Contact a service center for assistance.

Specifications

Input	5V/1A
Rated Power	5W
Battery Capacity	2000mAh
Motor Speed	7000RPM
Charging Time	2.5H
Working Time	4H
Charging Interface	USB-C
Material	Zinc Alloy
Model Number	LFS185

Instructions for Use

1. To charge the product, insert the small end of the Type-C charging cable into the bottom socket, then connect the other end of the cable to the transformer as shown in Figure 1.


Note: If the transformer connector is greater than or equal to 6V, the product will not charge.

2. Once connected to the power supply, the charging indicator will light red, indicating that charging is in progress.

3. After approximately 2.5 hours of charging, the red light on the indicator will turn off, indicating that the product is fully charged.

4. When fully charged, the product can operate for up to 4 hours. If the red light flashes, it indicates that the battery is insufficient and needs to be recharged.

- 5.** To begin cutting hair, remove the protective cover from the cutting head as shown in Figure 4. Turn on the switch of the cutting scissors, and the blue indicator light will turn on as shown in Figure 5. Move the scissors slowly against the direction of hair growth, cutting in smooth and circular motions.
- 6.** Three sizes of comb attachments are available: 1mm, 2mm, and 3mm, which can be used depending on the desired trimming length.
- 7.** Thank you for choosing this product. This guide is provided to help you use the hair trimmer and shaver correctly and effectively. Please follow the instructions carefully to ensure optimal performance and longevity of the device.
- 8.** If the product is out of battery, it can be connected directly to the charger for immediate use.
- 9.** If the load exceeds the safe limit, the device will automatically shut down for protection (locked rotor protection).

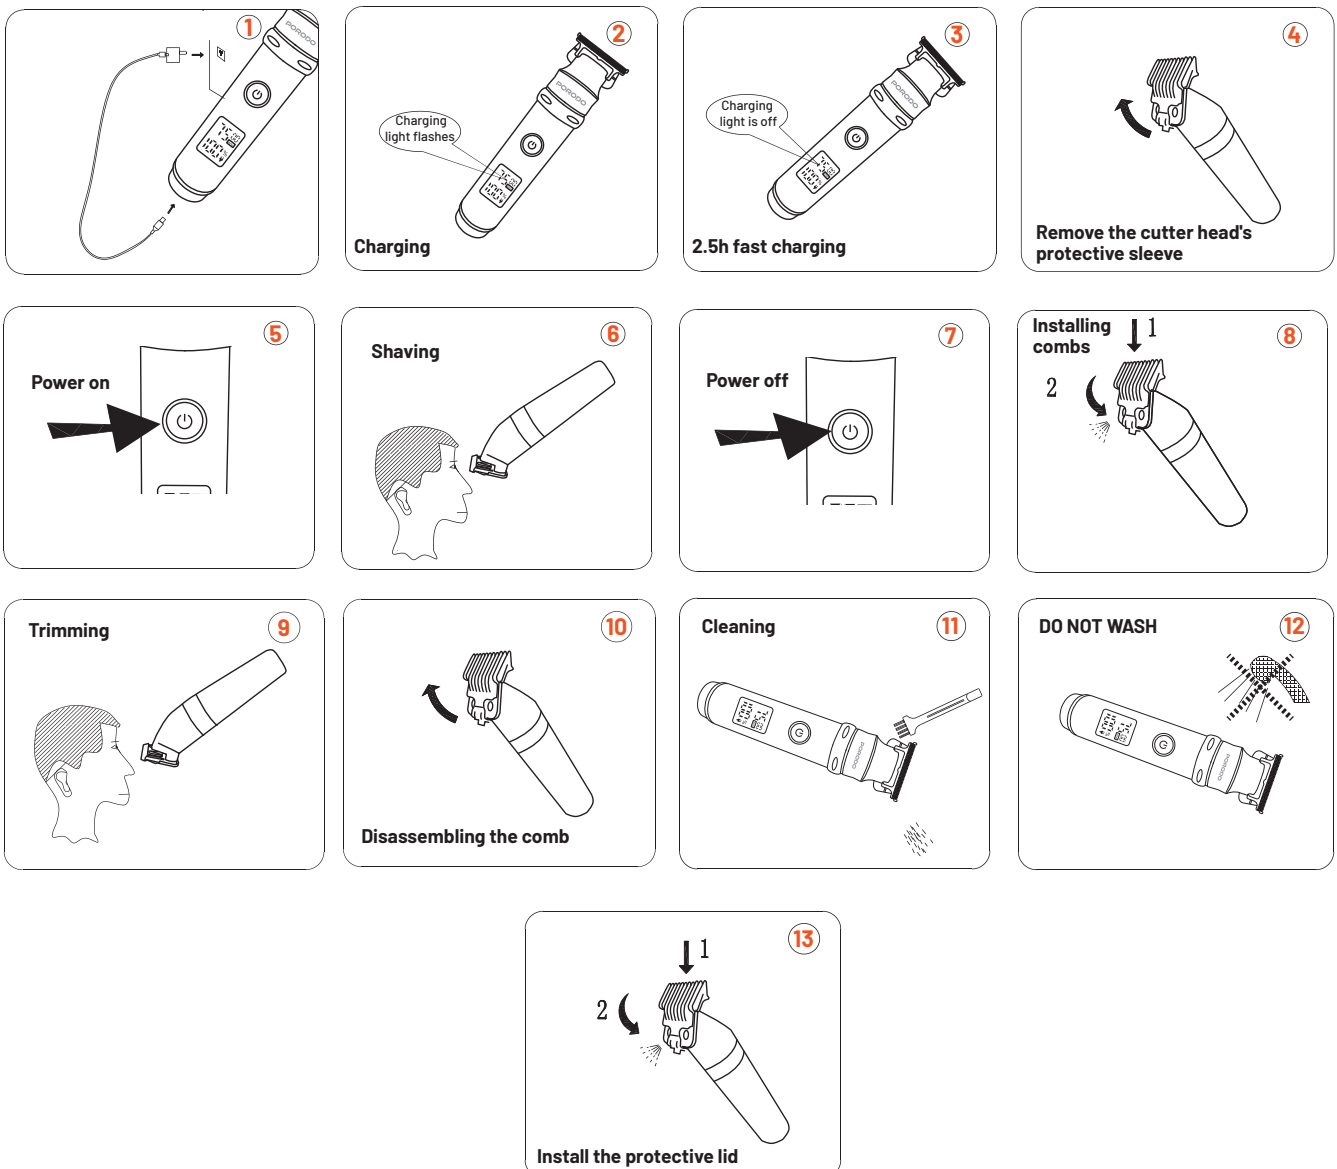

Maintenance Guide


1. Always disconnect the power and turn off the device. If the attachment comb is used, remove it and rinse it under water. Gently brush off any remaining hair from the blade and surface using the provided cleaning brush.
2. For optimal blade performance, apply a drop of lubricating oil to the left, middle, and right sections of the blade head. Turn on the device briefly to distribute the oil, ensuring the blade remains sharp and preventing wear by rotating it lightly.
3. When the trimmer is not in use, cover the blade with the protective sleeve to avoid damage.

Troubleshooting

Issue	Possible Cause	Solution
Not sharp, weak rotation, reduced usage time	The blade is damaged, dirty, or power is insufficient	Replace or clean the blade and recharge the device.
Unable to charge or start up	The adapter is damaged, the switch is faulty, or the power is depleted	Charge the device. If the problem persists, contact a service center for maintenance.
Indicator light is not on	Circuit fault or indicator malfunction	Send to a service center for repair.

Product Overview

No	Parts
A	Blade
B	Machine Body
C	Power Switch
D	LCD Display
E	Charging Interface
F	1/2/3mm Comb Protective Cover
G	Cleaning Brush
H	Lubricating Oil
J	Type-C Charging Cable

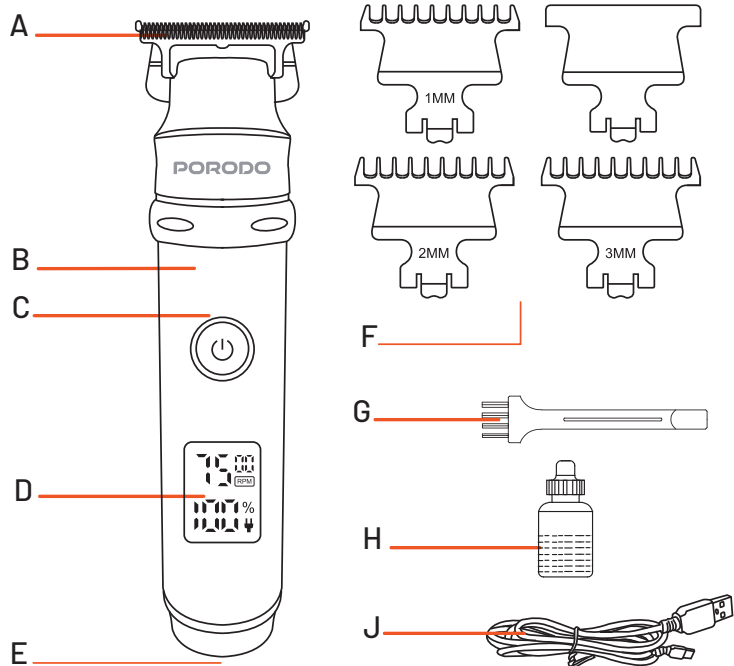

Correct Disposal



The battery contains substances that may harm the environment. Before disposing of the hair trimmer, ensure the battery is removed or send the trimmer to the officially designated recycling bin. Alternatively, you can send the used trimmer to the company's designated maintenance department, where it will be decomposed and recycled.

Battery Removal

To remove the battery, first disconnect the power supply and allow the trimmer to run until the battery is exhausted. Unscrew all the components of the hair trimmer and remove the plastic parts before extracting the battery. Do not charge the battery after removal.

Caution: The battery should only be removed when the hair trimmer is discarded.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**