


**PORODO**  
LIFESTYLE

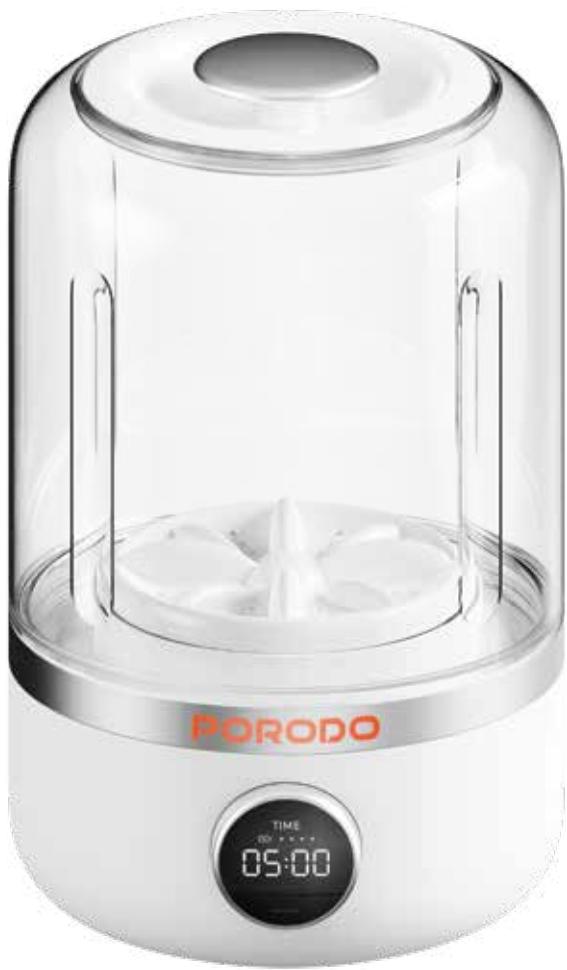


**Porodo Lifestyle**  
**Cordless Mini Washing**  
**Machine**

SKU: PDLFST192WH

# Table of Contents

Product Overview	2
Safety Guidelines	2
Specifications	3
Operation Precautions	3
Instructions for Use	3
Disposal	4
Warranty	5
Contact Us	5

# Product Overview

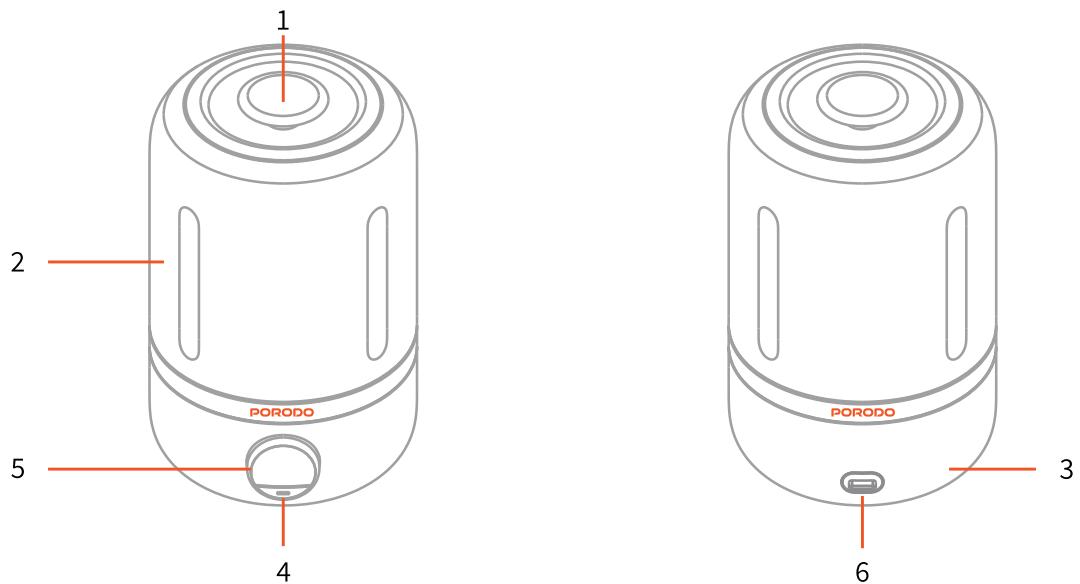

**1. Lid**

**2. Barrel**

**3. Base**

**4. Switch Button**

**5. Display Screen**

**6. Type-C Charging Port**

## Safety Guidelines

- 1. Charge the product before use, and only use it after it is fully charged.**
- 2. If the product will not be used for an extended period, charge it every 3 months to maintain battery health.**
- 3. Use only a standard 5V DC adapter when charging. Using other types of adapters may damage the product.**
- 4. During the charging process, the charging indicator light will flash. Each bar represents 25 % of the battery level, and all four bars will remain lit once the product is fully charged.**

# Specifications

Input	5V/1A
Cup Capacity	1.2L
Rated Power	10W
Battery Capacity	4000mAh
Charging Interface	USB-C
Operating Time	36 Cycles, 180Min, 13 Cycles, 196Min
Product Size	130 x 143 x 211mm
Net Weight	530g
Model Number	LFS192

## Operation Precautions

1. Before operating the washing machine, make sure to securely tighten the cup body and cover the cup lid. Otherwise, water may overflow during the stirring process.
2. Do not attempt to block or prevent the pulsator from rotating when the washing machine is in operation, as this may cause damage.
3. This washing machine is designed specifically for small clothing items. Avoid overloading when washing.

## Operation Precautions

1. Open the lid of the washing machine and place the clothes inside. You can add up to two pairs of underwear or four pairs of socks. However, do not wash these items together.
2. Add an appropriate amount of laundry detergent or a detergent specifically designed for delicate fabrics like underwear. Fill the washing cup with water to cover the clothes. (Ensure the water temperature does not exceed 55°C).

### 3. Choose between two washing modes:

**3.1 Single Click:** Activates the "Daily Wash" mode. The display will show a 5-minute countdown. After three consecutive cycles, wait 10 minutes before starting the next wash.

**3.2 Double Click:** Activates the "Intensive Wash" mode. The display will show a 15-minute countdown. After each cycle, wait 10 minutes before using the machine again.

**4. Pause/Resume:** Press to pause or resume the washing cycle.

**5.** The entire washing machine, including the body, lid, and base, can be rinsed directly under water. After completing the wash, thoroughly rinse out any detergent residue.

**Danger:** Never immerse the base of the washing machine in water.

## █ Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at [porodo.net/warranty](http://porodo.net/warranty) and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
[porodo.net/warranty](http://porodo.net/warranty)

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

**info@porodo.net**

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**