



**Green Lion**

**GALAXY Portable Projector**

SKU: GNGX4K5PROWH


Model No: GPJ4K5

## Table of Contents

Safety Precautions	2
Cautions and Warnings	2
Package Contents	3
Remote Control Diagram	4
Remote Control Description	4
Installation and Debugging	5
Projection Distance Guide	6
Power ON/OFF	6
Connection Settings	7
Projection Adjustment	7
Playing Files from a Storage	8
Screen Sharing	8
Cleaning Instructions	9
Specifications	10
Disposal	12
Warranty	12
Contact Us	12

## Safety Precautions

1. When using the projector, ensure there are no obstacles within 30 cm around the air inlet and outlet. Proper ventilation is essential to prevent hot air from accumulating inside the machine, which could affect its operation.
2. After using the dust removal window, always close the door. Failure to do so may result in serious damage to the projector.
3. Regularly clean the dust screen around the air inlet to prevent blockages and ensure the projector operates efficiently. You can use brushes, vacuum cleaners, or other appropriate cleaning tools.

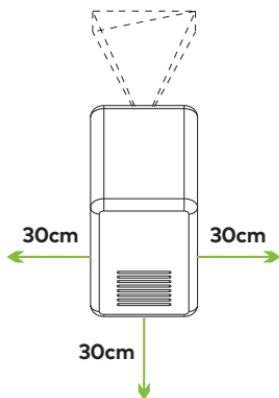

## Cautions and Warnings

1. Do not install the machine in areas directly exposed to air conditioning, water condensation, or high temperatures, as this can cause machine malfunction.
2. Ensure proper ventilation around the machine, and make sure the air vents are not blocked to prevent the buildup of hot air inside.
3. Avoid placing paper clips, objects, or metal parts into the machine. If any objects fall inside, immediately turn off the power and seek professional assistance.

4. To prevent leakage, do not place any liquids near the machine.
5. When transporting the projector, use soft packaging materials to protect the lens from scratches. Always install the lens protection cover during transport to ensure safety.
6. During or after projection, the area around the vent may become hot. Do not touch this area with your hands.
7. Never look directly into the lens while the machine is powered on, as it may cause serious eye damage.

### Notice

Do not open the case. Please entrust qualified professional maintenance personnel to perform any servicing.

**Electric Shock Warning:** This device contains uninsulated voltage, which can cause electric shock if touched. It is extremely dangerous to touch any internal parts of the machine.

### Notice

To prevent fire or electric shock, do not expose the machine to rain or moisture.

## Package Contents



Projector



Remote Control




User Manual



Power Cable

## Remote Control Diagram

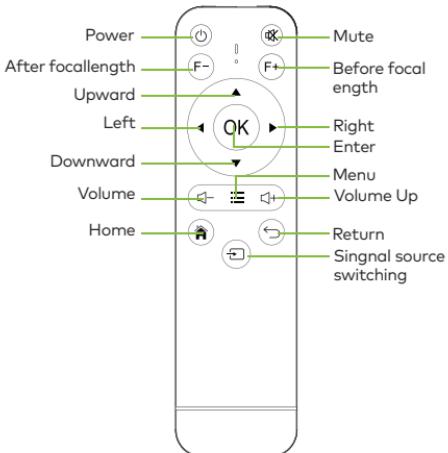


## Remote Control Description



1. Power: To turn the unit on or off.
2. Mute: To mute or unmute the projector speaker.
3. Menu: To open the menu for applications or files.
4. Volume + / -: To increase or decrease the volume.
5. Enter: To choose or click on options.
6. Arrow Keys: Use the up and down buttons to select OSD items, and the left and right buttons to make adjustments.
7. Return: To go back to the previous menu or close the active window.
8. Home: To return to the homepage.
9. Signal Source Switching: To switch signals or open removable disks.
10. Tool: To open the product settings function.
11. F-: To adjust the lens focus forward.
12. F+: To adjust the lens focus backward.

## Installation and Debugging


1. If the projection image appears blurred, rotate the focusing ring on the projector to adjust the image clarity. If the image remains unclear after adjusting, move the projector to improve focus.
2. Autofocus or Manual Focusing: Whether the projector uses autofocus or manual focusing, the focal length can be adjusted via the remote control as long as the autofocus feature is available.
3. **Autofocus Function:** After enabling the autofocus function in the settings interface, the projector will automatically adjust its focus.

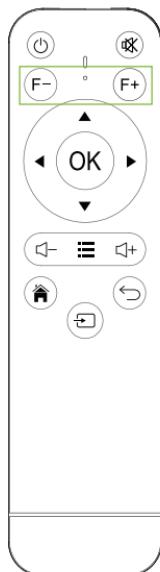

Blurry Image

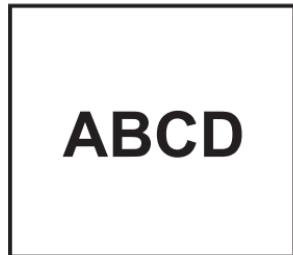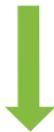 

## Projection Distance Guide

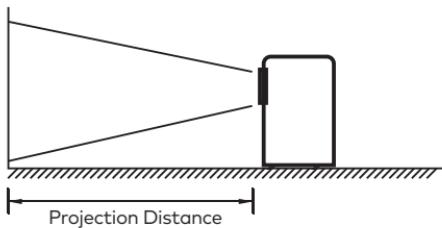


Projection Size (Inch)	Projection Distance (M)
33"	1.5 M
52"	1.7M
62"	2.0M
80"	2.5 M
88"	2.8 M
105"	3.4 M
120"	3.8 M


## Power ON/OFF

1. Press the ON/OFF button on the remote control or the power switch on the unit to turn it off.
2. Put the lens cap on and store the unit in a dry, cool place for safekeeping.

### 1. Home Page

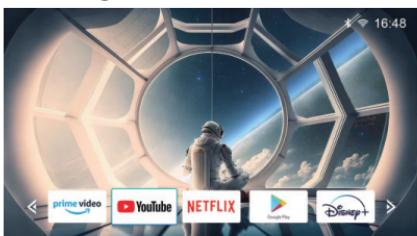

### 2. Projection Settings

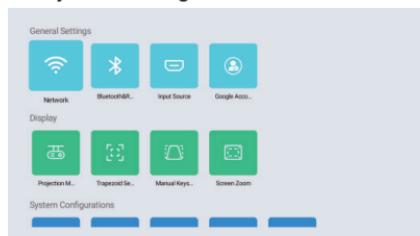


### 3. Language Settings

Select the desired language under System Configuration.



### 4. Time Settings

Choose your preferred time settings under System Configuration.

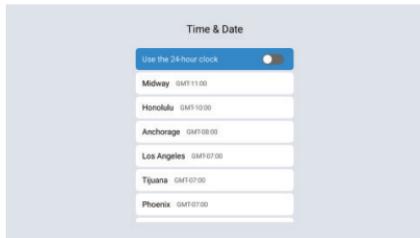

## Connection Settings

### 1. Wi-Fi Settings

Select a hotspot and enter the password to connect.



### 2. Bluetooth Settings


Enable Bluetooth and select the device to pair successfully. The device's Bluetooth name is GPJ4K5.



## Projection Adjustment


### 1. Projection Mode

Choose the projection method that best suits your needs from the Settings screen.

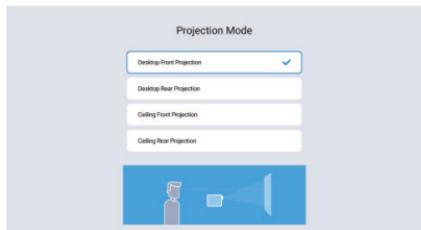


### 2. Picture Correction

In the settings interface, select Manual Keys for image correction.

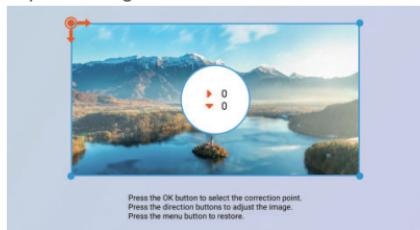

## Playing Files from a Storage


1. After turning on the projector, insert a USB flash drive. The system will automatically detect the external device, and a pop-up prompt will appear.
2. Select the type of file you want to play, and press the "OK" button on the remote control to enter.
3. Press the Signal Input button on the remote control and select USB Device to activate the connection.

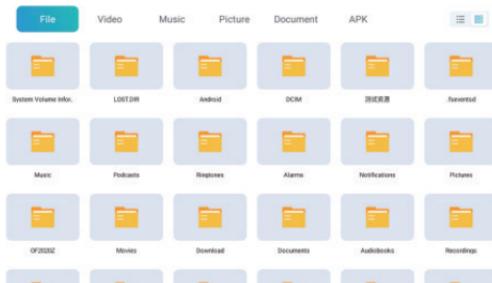

## Screen Sharing


1. Sharing the Same Screen

The projector and mobile phone can be connected via screen sharing software within the same Wi-Fi environment to enable screen sharing. You can use the built-in software that comes with the system, or download other screen-sharing apps from the application store.

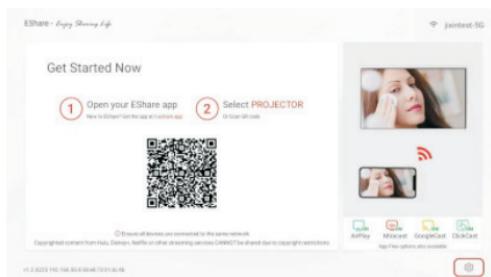

## 2. Other Operations

On the home page, press the down arrow key to select applications, change the desktop background, and adjust sound effects.

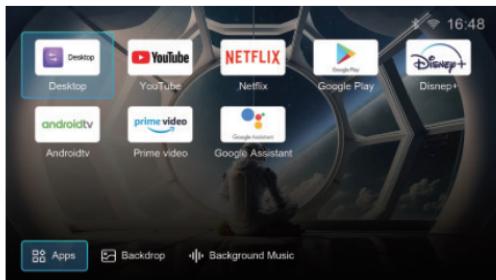

## Cleaning Instructions

### 1. Before Cleaning

- 1.1 Ensure that the power plug is unplugged before cleaning the projector.
- 1.2 Do not use insecticides or volatile chemicals on the projector or lens. Avoid contact with rubber or vinyl products, as these can damage the projector or cause the coating to peel off.

### 2. Cleaning the Projector

- 2.1 Use a soft, dry cotton cloth to wipe the projector.
- 2.2 For more stubborn dirt, dampen a soft cloth with diluted neutral detergent, then wipe with a dry cloth.
- 2.3 If using a chemical fiber cloth, follow all care instructions carefully.
- 2.4 Avoid using thinner, benzene, or other solvents, as they can degrade the quality or cause the coating to peel off.
- 2.5 To remove dirt, attach a brush to the front of the vacuum cleaner. Never use a vacuum cleaner without an adapter or nozzle, as this can cause scratches.

### 3. Cleaning the Lens

- 3.1 Clean the lens using the same method as the projector body.
- 3.2 For camera lenses, use a professional hairdryer or lens cleaning paper. Be careful not to scratch the lens.

#### 4. Cleaning the Air Inlet and Outlet

4.1 Dust accumulation in the air inlet and outlet can obstruct ventilation, increasing internal temperature and causing malfunctions.

4.2 Clean the air inlet and outlet at least once every 150 hours of use.

4.3 Use a vacuum cleaner or brush to remove dust from the air inlet.

4.4 Ensure the projector is turned off and the power is disconnected before cleaning.

4.5 When using a vacuum cleaner, attach a brush head adapter to avoid direct suction on the projector. Never use a vacuum cleaner without an adapter or brush head.

## Specifications

Model No	GPJ4K5
Material	ABS+PC
Resolution	1280*720P (Supports 4K)
CPU	Amlogic 950S
OS	Android 13
Storage	1GB/8GB
Power	27W
Brightness	150 ANSI
Contrast Ratio	2000:1
Screen Size	30"-100"
Projection Distance	0.9-3 m
Rotation	90°
Aspect Ratio	16:9
Input Voltage	100-240V, 50-60Hz
Connectivity	HD, USB, Wi-Fi 2.4G/5G, BT 5.0

Power Cord	UK Plug 1.5 m
Speaker	3 42W
Max Height	23.5 cm
Product Weight	650 g
Folded Dimensions	108*68*162 mm
Expanded Dimensions	108*68*235 mm



## Disposal

Do not dispose of discarded electrical appliances as unclassified urban waste. They should be handed over to an officially designated recycling center, which is beneficial for environmental protection.

## Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:  
<https://www.greenlion.net/warranty>

## Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: [sales@greenlion.net](mailto:sales@greenlion.net)

Service Support: [Support@greenlion.net](mailto:Support@greenlion.net)

Telegram: [@greenlion\\_global](https://t.me/greenlion_global)

Instagram: [@greenlion\\_global](https://www.instagram.com/greenlion_global)