



Green Lion

STEAM MASTER
Dry Iron with Steam Function

SKU:GNSMSBX130WH

Model No: BX130

Table of Contents

Product Overview	2
Description of Button and Indicator	2
Cautions	3
Danger	3
Warnings	3
Attention	4
Before the Initial Use	5
Installation and Use	5
Cleaning and Maintenance	6
Ironing Instructions	6
After Each Use	7
Circuit Diagram	7
Specifications	8
Troubleshooting	9
Correct Disposal	10
Warranty	10
Contact Us	10

Product Overview



Front View	Back View	Side View
1 Hanging Belt	6 Anti-Skidding Foot Pad	8 Ironing Panel
2 Indicator Light	7 Hook Hole	9 Knit Hose
3 Steam Switch	-	-
4 Water Inlet	-	-
5 Water Tank	-	-

Description of Button and Indicator

Click: Power on
Long press for
3 seconds: Shutdown

Red light flashing:
Preheating
Red light: (●●)
Dry ironing

Blue light: (○○) Min level
Blue light: (○●) Middle level
Blue light: (●●) Max level
Blue light flashing: Water
shortage alarm

Red and blue light breathing flashing: Automatic shutdown Rapid flashing of red and blue lights: Automatic cleaning (press and hold for 10 seconds to start, cannot stop midway, pay attention to the risk of burns)

Cautions

Before using this product, carefully read the user manual and retain it for future reference.

Danger

1. Do not immerse this product in water or any other liquids, and refrain from rinsing it under the tap.
2. Exercise caution with the hot steam generated by the garment steamer, as it may cause burns.

Warnings

1. Ensure that the voltage indicated on the product matches the local mains voltage before connecting it to the power supply.
2. If the plug, power cord, or product shows visible damage, or if it has been dropped or leaked, do not use the product.
3. The product should only be serviced by an authorized maintenance center. Do not attempt to repair it yourself, as this will void the warranty.
4. If the power cord is damaged, it must be replaced by a qualified professional at the manufacturer's maintenance department or a similarly authorized service center to avoid any safety risks.
5. Never leave the product unattended while it is plugged in.
6. This product is not suitable for children under 8 years old, individuals with disabilities, or those who are mentally impaired or

have cognitive disorders unless they are supervised and guided by a responsible person to ensure safe usage and awareness of potential hazards.

7. Keep the product and its power cord out of reach of children under 8 years old, especially when the product is in use or cooling down.
8. Children aged 8 and older may clean the product, but only under supervision.

Attention

1. The garment steamer produces high-temperature steam during operation. Do not direct the steam nozzle at people or animals, and avoid ironing clothes while they are being worn to prevent the risk of burns.
2. Ensure the product is connected to a grounded electrical outlet.
3. When the product is hot or connected to the power supply, avoid placing the steam nozzle in contact with any surface.
4. Do not use this product when the water tank is empty. If you plan to leave the product unused for a short period, please turn off the power and unplug the device.
5. Allow the product to cool for 60 minutes before cleaning, installing or disassembling accessories, emptying the water tank, or storing it.
6. Avoid dragging the product on the floor, as the steam may damage or cause fading to walls or doors.
7. This product is designed to work with running water. If the water in your area is particularly hard, scaling may occur quickly. To extend the product's lifespan, we recommend using distilled water in the water tank.
8. Never pour perfume, vinegar, scale remover, ironing agents, or other chemicals into the water tank, as these can damage the product.
9. After ironing, ensure that the power supply is turned off and the power plug is unplugged.

10. This product is intended for household use only. Do not use it in the bathroom or outdoors.

Before the Initial Use

1. Remove any labels or protective covers from the head of the garment steamer. Straighten and organize the electric cords before use.
2. If using the garment steamer for the first time, allow it to produce steam for several minutes. This will help remove any impurities or odors left from the manufacturing process.
3. To prevent circuit overload, it is recommended not to use the same electrical outlet for multiple appliances.
4. Upon opening the package, check the list of items and parts included to ensure everything is accounted for and nothing has been accidentally discarded.

Installation and Use

1. Remove the water tank, fill it with an appropriate amount of water, and then securely insert the water tank back into the machine.
2. Connect the device to a power outlet and turn on the power. Press the steam switch to start the machine. The red light will flash while the machine preheats, and it will remain on when ready for dry ironing.
3. Press the steam switch again, and the blue light will illuminate (3 steam modes are available). Once steam begins to emit, the machine is ready for steam ironing.
4. To turn off the machine, press and hold the steam switch for 3 seconds.
5. In steam ironing mode, if the water tank runs low or the water path becomes blocked, the blue light will flash, indicating a water shortage. After 30 minutes of inactivity, the machine will automatically power off.

Ironing Instructions

1. The garment steamer is very easy to use and is suitable for ironing wrinkled or creased clothing, curtains, and refreshing decorative fabrics. It can be used on most fabrics.

Note: The garment steamer is designed for vertical hanging clothes. Avoid using it when the clothes are in a horizontal position.

2. Before use, check the fabric to ensure it is permeable to steam, so that steam does not accumulate on the fabric and cause it to become wet.
3. Make sure there are no items in the pockets of the clothing before steaming.
4. Ensure there are no objects on the back of the clothing that could be damaged by steam.
5. It is recommended not to use the garment steamer near metal fittings on the clothing, as the high-temperature steam may cause the metal accessories to fade.
6. When pressing the steam button, you may feel a slight vibration and hear a subtle buzzing sound. This is normal.
7. While ironing, position the steam panels on the creases of the fabric, moving up and down to smooth out the wrinkles.
8. If the sound of the garment steamer becomes louder and no steam is emitted, it means the water tank is empty. Please check the water level and refill the water tank as needed.
9. If you release the steam button, the steam will stop immediately.


After Each Use

1. When finished, press the power switch or unplug the power cord from the outlet.
2. Remove the water tank and empty any remaining water.
3. Place the garment steamer on a flat, vertical surface and allow it to cool down.

Cleaning and Maintenance

1. First, remove the steam brush from the head of the garment steamer. Then, use a damp cloth to clean it.
2. Do not use abrasive or corrosive cleaners or solvents.
3. Never immerse the garment steamer in water or any other liquids.
4. Avoid dropping, throwing, or bending the product. Do not attempt to disassemble or modify the appliance.
5. Always empty the water tank after each use.
6. Avoid storing the appliance in damp areas.
7. Keep the appliance away from heat sources and direct sunlight.
8. Regularly check that the steam outlets are clean, free from scaling, and not clogged.
9. It is recommended to store the garment steamer vertically in a flat place, such as a cabinet.
10. Do not dispose of discarded electrical appliances as unsorted municipal waste. Please take them to an officially designated recycling center.

Circuit Diagram

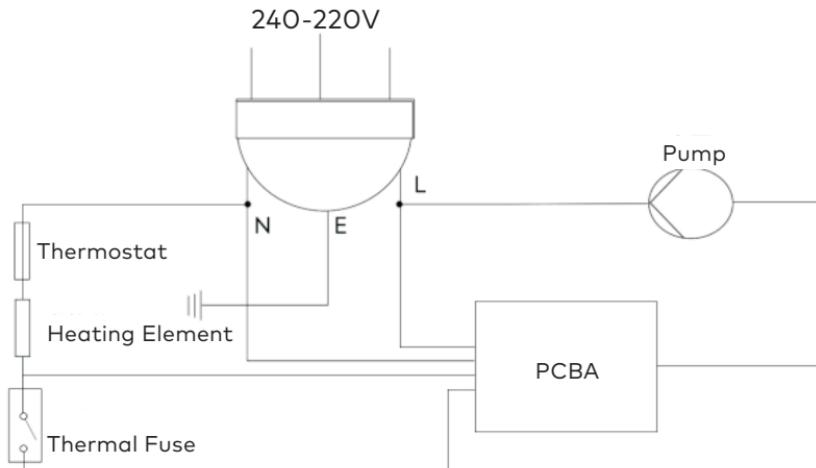

Specifications

Model No	BX130
Material	ABS
Rated Power	1950W
Rated Voltage	220-240V
Rated Frequency	50/60Hz
Heating Element	Aluminum
Water Tank Capacity	600 ml
Steam Output	30g/min
Steam Ready Time	0-25 sec
Continuous Steam Time	20 min
Temperature	140°C
Auto Shut-Off	30 min
Power Plug	BS Plug 1.65 m
Product Weight	1.65 kg
Product Dimensions	375*125*80 mm

Troubleshooting

Problem	processing method
1. The garment steamer does not heat	<ul style="list-style-type: none">-Check whether the plug is inserted correctly. Check power supply.- Check the power button
2. The garment steamer does not produce steam	<ul style="list-style-type: none">- Check water level and whether the water tank are properly installed.- Press hard on the steam button.- Keep the garment steamer upright
3. Water leaks from the water tank	<ul style="list-style-type: none">- Make sure that the water level is not above the highest water level.- Please ensure that the water inlet of the tank is closed properly.- Keep the garment steamer upright in accordance with the operation instructions provided.
4. There is a loud buzz or pumping sound when the garment steamer works	<ul style="list-style-type: none">- Check the water level; if there is no water or the water level is low,-please add water to the water tank
5. Avoid the discoloration of metal accessories on the clothing	<ul style="list-style-type: none">- Do not use the garment steamer on the metal accessories directly.- Steam should be used carefully when there are metal accessories.
6. Spray water from steam outlet	<ul style="list-style-type: none">- Do not use the garment steamer on the metal accessories directly.- Steam should be used carefully when there are metal accessories.

Correct Disposal

Do not dispose of discarded electrical appliances as unclassified urban waste. They should be handed over to an officially designated recycling center, which is beneficial for environmental protection.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)