



Green Lion

Portable 12L Washing Machine

SKU: GNMIWASH12LWH

Model No: GL-WM12

Table of Contents

Safety Precautions	2
Specifications	3
Note on Assembly	4
Product Overview	4
Washing Instructions	5
Electrical Diagram	5
Proper Placement of Clothes	5
Unfolding and Folding the Machine	6
Adding Detergent	6
Set a Washing Program	7
Installation and Drainage Guide	7
Instructions for Using the Machine	8
Cleaning and Maintenance	9
Troubleshooting	9
Material Contents	10
Disposal	12
Warranty	12
Contact Us	12

Safety Precautions

Thank you for using the portable folding washing machine. To ensure the best use of this product and to prevent personal injury and damage to articles, please carefully read and observe the contents of this manual, along with the following symbols.

water immediately. While washing, repeat washing regularly with dry cloths.

Working Conditions: The portable folding washing machine should not be used for cleaning clothes contaminated with gasoline, paint, corrosive chemicals, or acidic and alkaline substances.

Ensure the washing machine is only used in environments that meet the proper conditions outlined below.

Do not place the washing machine in a humid environment (e.g., bathroom), and ensure the temperature where the machine is installed is above 5°C.

Usage Guidelines: Choose a suitable detergent for cleaning. When using detergent, take care to avoid getting it in your eyes. If contact occurs, rinse immediately with clean water.

Wipe the machine regularly with a clean cloth to remove any moisture and prevent damage.

Keep children away from the washing machine, especially when using powdered detergent.

Do not tilt or move the machine during operation, as this could cause water leakage.

Do not touch the adapter plug with wet hands.

Do not store flammable substances or liquids near the washing machine to avoid potential fire risks.

Never pour water or detergent into the lower section of the machine, as this could cause it to malfunction.

Avoid using water temperatures above 60°C, as this could damage the machine and cause it to malfunction.

If the machine malfunctions or is not working correctly, immediately disconnect it from the power source and stop using it.

Do not attempt to repair or replace parts unless indicated in this manual. For repairs, contact the after-sales service or refer to the Questions and Answers section for more information.

If the adapter is damaged, it should only be handled by a qualified professional to prevent any danger.

Always ensure that any maintenance or repairs are carried out by professional technicians to maintain the machine's safety and functionality.

Before folding the washing machine, make sure the adapter is securely inserted and safely removed to avoid damage.


Specifications

Model No.	GL-WM12
Power	36W
Voltage	110V-240V
Frequency	50/60Hz
Noise Level	60dB
Capacity	12L
Cleaning Cycle	3 Gears
Bactericidal Cleaning	Blue Light Bacteriostasis
Drain Function	Yes
Product Weight	1.57 kg
Product Dimensions	300*300*350 mm

Note on Assembly

Ensure the folding washing machine is properly connected. If not, it will not function correctly.

Product Overview

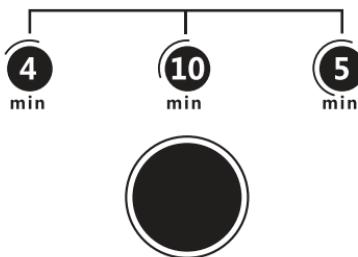


Press 2 seconds to start/ stop

Washing Instructions

1. The washing machine effectively weakens the adhesion between stains and clothes, enhancing the washing effect.
2. It is recommended to use low-foaming or non-foaming detergent powders available in the market.
3. When adding detergent, please place it directly into the washing tub.
4. The machine can wash clothes that are below the rated capacity.
5. Since this is a single-washing machine, manually remove the clothes after washing and place them into the drain basket. Proceed with dehydration after the washing cycle is complete.

Electrical Diagram

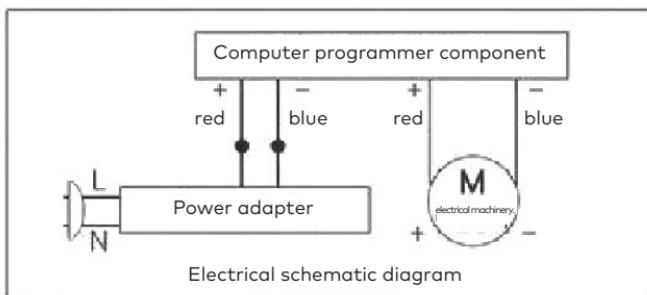

Proper Placement of Clothes

1. To maintain the washing machine's performance, carefully remove any visible dirt, fibers, or debris from both the inside and outside of the clothes before placing them in the machine.
2. For optimal washing results, arrange the clothes evenly inside the washing tub. Avoid cramming or folding them to prevent tangling, which may lead to an unsatisfactory washing performance.

Unfolding and Folding the Machine

1. Unfolding the Washing Machine:

- 1.1 First, remove the lid of the bucket.
- 1.2 Lift the handle with one hand, and with the other hand, press the bottom of the bucket. (Note: the pulsator cannot be pressed with the other hand, and pressing may deform it.)
- 1.3 Lift the handle forcefully and gradually unfold the washing machine's folding bucket.

2. Folding the Washing Machine:

- 2.1 Remove the bucket cover. With both hands, hold the upper frame of the washing machine and gently press downward.
- 2.2 Gradually retract the folding bucket into a compact state before covering it with the bucket cover.
- 2.3 If the folding bucket cannot be fully pressed into place in one step, fold the edges inward with your hands to ensure that the bucket is properly folded.
- 2.4 Once the folding bucket is in place, attach the bucket cover to complete the operation.

3. Drain Basket Installation: Ensure the drain basket is installed in the correct position as shown.

Adding Detergent

1. Add the detergent directly into the washing tub, using an appropriate amount based on the laundry load.

2. Important Notes:

- 2.1 Do not use strong acids or alkaline detergents to avoid damaging the machine.
- 2.2 Please use water-soluble detergent to prevent clogging in the drain pipe during the washing process.
- 2.3 It is recommended to choose low-foaming or non-foaming detergent to avoid excess foam that can overflow and impact the washing performance.

Set a Washing Program

1. The washing machine is equipped with 3 gears: 4th, 10th, and 5th gears correspond to washing times of 4 minutes, 10 minutes, and 5 minutes, respectively. Choose the appropriate gear based on the laundry amount and the level of dirt.
2. Press the key once to activate the 5-minute program.
3. Press it again, and the 10-minute program will be activated, switching the program cyclically.
4. After selecting the desired program, the machine will automatically start after 3 seconds of inactivity.
5. Upon completion, the program light will blink for 5 seconds, and the buzzer will sound three times.
6. The light will turn off after 5 seconds, indicating that the program has finished.

Note: Each washing machine undergoes a functional test before leaving the factory, so a small amount of water or water marks may remain inside the machine.

Installation and Drainage Guide

1. Choose an installation site away from heat sources and avoid placing the machine in direct sunlight to prevent damage to the shell.
2. Do not place the machine in an area where it could freeze (below 5°C) in winter.
3. Ensure the machine is placed on a stable and level surface.
4. To drain the water, first power off the machine and disconnect it from the adapter.
5. Hold the machine's handle with one hand, and with the other hand, secure it in the buckle hole of the base.
6. Tilt the upper opening of the washing machine downward and gradually empty the water.

7. When filling the washing tub, pour clean water directly into the tub.
8. Do not exceed the maximum water level indicated (labeled as "H").
9. Do not pour hot water above 60°C directly into the washing machine, as it could deform the machine due to high temperatures.
10. Ensure the voltage and frequency of the power supply match the specifications listed on the nameplate of the washing machine.
11. Removing the Link from the Washing Machine:
 - 11.1 Disconnect the adapter from the power socket.
 - 11.2 Disconnect the adapter from the washing machine.
 - 11.3 Drain the water from the washing tub.
12. Wipe the machine clean and ensure it is properly maintained.

Instructions for Using the Machine

1. Place the clothes to be washed into the washing tub, then add the appropriate amount of detergent.
2. Pour in the required amount of water (enough to completely cover the clothes, ideally 5–3 cm higher than the clothes).
3. Press "Washing Time" for 1 second and select the desired program. After selecting the program, do not operate the machine for 3 seconds. The program will start automatically.
4. Once the program is finished, the signal lamp will flash for 5 seconds and beep three times. After 5 seconds, the signal lamp will turn off, indicating that the program is complete.
5. Remove the washed clothes from the machine.
6. Disconnect the adapter from the washing machine and the power socket.
7. Select an appropriate drainage method to empty the water from the washing machine.
8. Wipe the washing machine clean.

Cleaning and Maintenance

1. After completing the washing cycle, drain the water from the washing machine to prevent any changes in water quality during long-term storage.
2. When storing the machine, fold it according to the provided folding method.
3. Place the cover on top, then store it in the bag provided with the machine. Ensure the adapter is also stored with the machine.

Troubleshooting

If you suspect that the washing machine has malfunctioned during use, please refer to the table below for possible issues and solutions. If the problem persists after following the steps, please contact a service center for assistance. Do not disassemble the washing machine yourself.

Problem	Possible Cause	Solution
Three lights flash at the same time	Excessive clothing	Reduce the laundry load, wait for a moment, and then reselect the washing program.
Touch the key without response	Clothes are tangled	Untangle the clothes manually, wait for a while, then reselect the washing program.
	Touch insensitivity	Spread the clothes manually, wait for a while, then reselect the washing program.
Water is not draining properly	Drainage is incomplete	Drain the water using the upper drainage system, and dry the tub with a clean cloth until there is no visible water remaining.
Excessive water level during washing	Excessive water level	Reduce the water amount, lower the water level, and ensure that the water does not overflow from the edge gap during washing.
Poor contact between adapter and machine socket	Poor contact between the adapter and the machine socket	Wipe the adapter's plug with an eraser, reconnect it to the machine, and ensure the connection is secure before restarting the machine.
Noisy operation	The sound inside the machine	The machine includes a decelerating motor. The noise you hear is normal, as it is part of the decelerating motor's operation during the washing cycle.
Drain basket is not installed correctly	Improper placement of the drain basket	Place the drain basket back in its correct position and restart the draining process.
Clothes are not placed correctly	Improper placement of clothes	Evenly distribute the clothes in the drum and restart the draining process.

Material Contents

In accordance with the "Requirements for Restricted Use of Hazardous Substances in Electronic and Electrical Products" GB/T2011-26572 (RoHS), the following section lists the names and contents of hazardous substances that may be present in this product.

Part Name	Harmful Material					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Barrel Body						
Drum (instead of "loam cake")	○	○	○	○	○	○
Handle	○	○	○	○	○	○
Base	○	○	○	○	○	○
Connecting Cable (instead of "connecting line")	○	○	○	○	○	○
Screw	○	○	X	○	○	○
Electrical Components (instead of "electrical machinery")	○	○	○	○	○	○
Control Board (instead of "breadboard")	○	○	○	○	○	○
O-Ring	○	○	○	○	○	○
Silicone Seal	○	○	○	○	○	○
Power Cord	X	○	○	○	○	○

This table is compiled according to SJ/T 11364.

O: The content of this harmful substance in all homogeneous materials of this component is below the limit specified in GB/T 26372 (IEC 62321).

X: The content of this harmful substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572. However, components marked with "X" exceed the limit due to the lack of a mature alternative technology in the industry at present.

Environmentally Friendly Use Period

The sign on the product indicates that the service life for environmental

protection is 10 years. The term for environmental protection refers to the period during which toxic and harmful substances in electronic and electrical products will not leak to the outside or mutate suddenly. During this period, users of the products will not cause significant environmental pollution or harm to human health and property.

Prompt Explanation:

According to the "Regulations on the Management of Recycling and Disposal of Waste Electrical and Electronic Products," when users no longer need the product or when its lifespan ends, they should follow the relevant state laws



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://t.me/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)