



Green Lion

**POP MATE
Popcorn Maker**

SKU: GNPOPM12MKWH

Model No: GL-PM12

Table of Contents

| | |
|--------------------------|---|
| Important Safety Notes | 2 |
| Specifications | 4 |
| Product Components | 4 |
| Using the Popcorn Maker | 5 |
| Cleaning and Maintenance | 6 |
| Storage | 6 |
| Disposal | 7 |
| Warranty | 7 |
| Contact Us | 7 |

Important Safety Notes

When using electrical appliances, basic safety precautions should always be followed, including the following:


1. Read all instructions before use.
2. Do not touch hot surfaces. Always use handles or knobs.
3. To protect against electric shock, do not immerse the cord, plugs, or appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from the outlet when not in use, and before cleaning. Allow the appliance to cool before removing parts or cleaning.
6. Do not operate any appliance with a damaged cord or plug, or if it malfunctions. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
10. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
11. Use extreme caution when moving an appliance containing hot oil or other hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
13. Do not use the appliance for anything other than its intended use.
14. A popper that is plugged into an outlet should not be left unattended.


- 15.** Use extreme caution when unloading popcorn. Always turn the unit over a countertop so that residual hot oil or water running out will not cause burns.
- 16.** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is designed to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug.
- 17.** A short power-supply cord is provided to reduce the risk of entanglement or tripping over a longer cord.
- 18.** If using a long detachable power-supply cord or extension cord:
- 19.** The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
- 20.** If the appliance is grounded, the extension cord should be a grounded 3-wire cord.
- 21.** Please adhere to all safety precautions.
Please refer to the rating label for the maximum continuous usage time (KB 5 minutes is the maximum usage time).
- 22.** Ensure that breaks last at least 10 minutes.
- 23.** This appliance is not intended to be operated by an external timer or separate remote control system.
- 24.** For safety reasons, a damaged or defective supply cord should only be replaced by an authorized service center.
- 25.** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction regarding the appliance's use by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
- 26.** Save these instructions.

Specifications

| | |
|--------------------|-------------------|
| Model No. | GL-PM12 |
| Material | PP+PC+PA+Aluminum |
| Rated Power | 1200W |
| Rated Voltage | 220-240V |
| Rated Frequency | 50Hz |
| Popping Capacity | 60g Per Batch |
| Popping Time | 2-3 min |
| Cool Down Time | 10-15 min |
| Noise Level | <85 dB |
| Power Cord | UK Plug 75 cm |
| Product Weight | 770 g |
| Product Dimensions | 133*196*276.5 mm |

Product Components

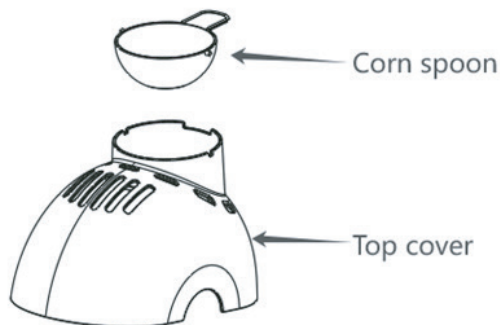

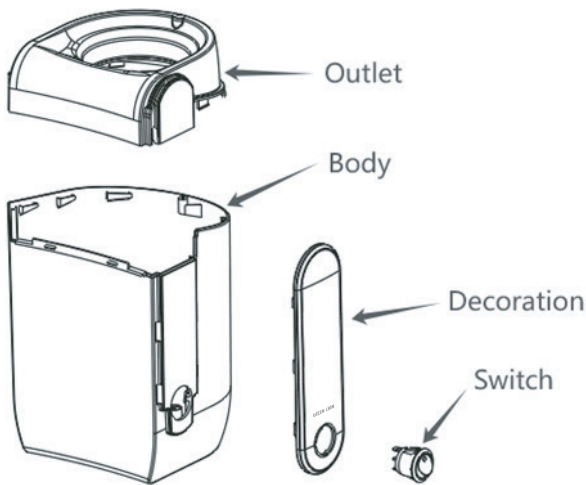

Using the Popcorn Maker

1. Place the Popcorn Maker on a level surface.
2. Before using for the first time, it is recommended to wipe the Popcorn Maker and its accessories with a damp cloth.
3. Use the provided Measuring Cup to measure the popcorn. One full measure per session is sufficient. Using more than one full measure could overfill the Popcorn Maker and disrupt its proper functioning.
4. Pour the popcorn into the Aluminum Heat Chamber through the product's inlet.
5. After each use, ensure the measuring cup is placed back in its designated position inside the top cover.
6. Position a large bowl under the spout, ensuring that the edge of the bowl touches the body of the popcorn maker. This ensures the popcorn is ejected directly into the bowl without any interference, as the popcorn remains hot and premature contact may cause minor discomfort.
7. Switch on the popcorn maker. After a brief moment, the continuous

popping action will automatically feed popcorn from the aluminum heat chamber through the spout until all kernels have popped. This process typically takes about 3 minutes.

8. Once the popping has stopped, turn off the popcorn maker and disconnect the mains plug from the power supply.

9. If more popcorn is needed, carefully remove any remaining popcorn from the aluminum heat chamber. Take caution when handling the top cover, as both the cover and measuring cup will be hot during operation.

Note: Allow the popcorn maker to cool for approximately 10 to 15 minutes before using it again.

Warning: Popcorn is typically very dry. When using the popcorn maker, place the measuring cup on top of the top cover with the butter side facing up. Never add ingredients such as oil, butter, margarine, salt, or sugar. The popcorn maker is designed solely for popping the kernels as they are. If desired, you may add flavoring after the popcorn has been popped.

Cleaning and Maintenance

1. Before cleaning, always disconnect the popcorn maker from the power supply.

2. Ensure the popcorn maker has completely cooled down before cleaning.

3. Wipe the plastic parts of the popcorn maker with a damp cloth. Avoid using abrasive products as they may damage the appliance.

4. Only the top cover and the measuring cup should be cleaned in warm, soapy water.

Storage

When the popcorn maker is not in use, disconnect it from the power supply and store it in a safe, dry location, out of reach of children.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
Website: <https://www.greenlion.net/>
Sales: sales@greenlion.net
Service Support: Support@greenlion.net
Telegram: [@greenlion_global](https://t.me/greenlion_global)
Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)