



**Powerology**

## **FOLDABLE CAMPING LIGHT**

SKU: PPBCHA116BK



# Table of Contents

Product Overview	2
Specifications	2
Packing List	3
Product Sections	3
Setup Guide	4
Safety Precautions	5
Disposal	6
Warranty	7
Contact Us	7

## Product Overview

The product is a versatile and portable camping light featuring a telescopic rod and a built-in 15,000mAh power bank. It supports Type-C charging and provides a top spotlight beam for clear illumination. With an adjustable rod and a hanging hook, the lamp offers flexibility in positioning, making it perfect for camping, outdoor activities, or general use. It features real-time scene monitoring and multi-scene mounting, ensuring convenience and practical use in various environments. This lightweight and portable design makes it an ideal companion for outdoor adventures.

## Specifications

Model Number	PPBCHA116
Material	Aluminum Alloy + PC/ABS
Battery Capacity	15600mAh
Rated Power	30W
Input Power	18W
Output Power	5V/3A, 9V/2.22A, 12V/1.67A, 22.5W
Charging Interface	USB-C
Battery Life	3-60H
Recharge Time	3.5H
Color Temperature	3000K/6000K
Waterproof	IP54
Length	1.52m
Product Weight	980g
Product Size	69 x 69 x 269mm
Brightness	1000LM (Single Light) 3000LM (Three Lights) 300LM (Flashlight ±%5)

## Packing List

1. Camping Light \*1
2. Charging Cable \*1
3. Tent Pegs \*3
4. Protective Bag \*1



 
(1)



(2)





(3)





  
(4)
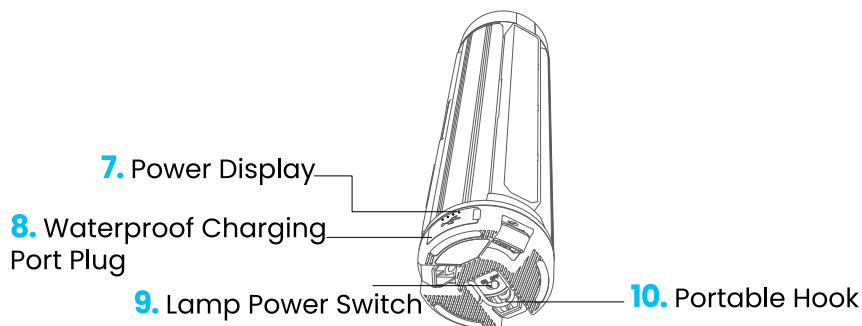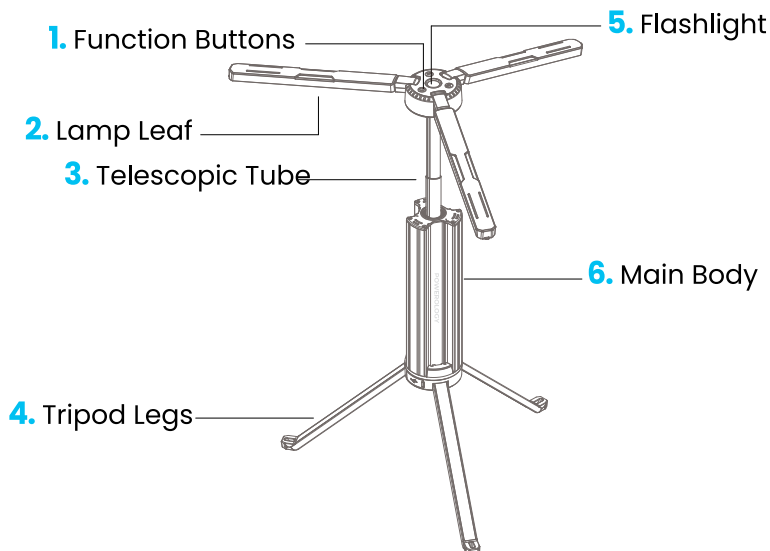
## Product Sections

 

 




 
 

 
 
# Setup Guide

## A. Button Instructions

 
	<p>Switch Button:</p> <p>Press once to turn on Lamp Leaf 1;</p> <p>Press twice to turn on Lamp Leaves 2 + 1;</p> <p>Press three times to turn on Lamp Leaves 3 + 2 + 1;</p> <p>Press four times to turn off all lights.</p>
	<p>Mode Switch Button:</p> <p>Press once to switch to 3000K warm light;</p> <p>Press twice to switch to 6000K cool light;</p> <p>Press three times to activate flashlight mode;</p> <p>Long press (2 seconds) to activate SOS mode;</p> <p>Short press in SOS mode to turn it off.</p>
	<p>Brightness Adjustment:</p> <p>In lighting or flashlight mode, short press to toggle through low brightness - medium brightness - high brightness.</p>

## B. Battery Status


Remaining Battery Level Indicator	
	100% — 75% remaining power
	75% — 50% remaining power
	50% — 25% remaining power
	Less Than 25% remaining power
	Less than 10% remaining power (the last LED will blink to remind the user to charge)

Current Charging Status Indicator	
	Fully Charged
	75% Charged
	50% Charged
	25% Charged
	Less than 25%


**C. Instructions for Use**

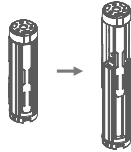

 
1. Closed light



 
2. Extend the telescopic rod



 
3. Flip up to open the lamp leaves

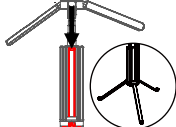

 
4. Press down at the indicated position to open the support legs, pull out the legs, then rotate them outward until they automatically lock into place



 
5. Adjust the lamp leaves to change the angle of the light



 6. Open the waterproof plug to charge the light



 7. The telescopic height can extend up to 164cm

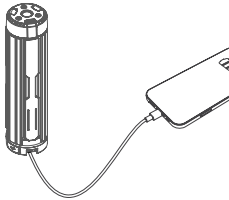

8. Use as a power bank

**Setup Guide**

Charge before use to ensure smooth performance, charge the device fully before using it.

Charge immediately when the battery is low to avoid damage. Prolonged use with a low battery can harm the cells, affecting the charging ability.

Retract the telescopic rod slowly to prevent the internal mechanisms from jamming.

Avoid forcing the lamp leaves past their limit to prevent damage.

Don't touch the lamp head while in use to avoid burns.

Do not attempt to disassemble or alter the product to prevent potential fire hazards.

Ensure the charging port stays dry while charging.

All parameters are based on lab tests; actual performance may vary slightly in real use.

To prevent overheating, the k01 will reduce its brightness when charging during operation.

When using a fast-charging cable during charging or discharging, the leftmost indicator light on k01 will show green.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



## **Warranty**

Products that you buy directly from our **Powerology** website or shop come with a 24-month warranty.

The 24-month warranty applies to products purchased directly from our **Powerology** website or store. If **Powerology** products are bought from any of our verified retailers, then the product is eligible for only a 12-month warranty. To extend your product's warranty, visit our website **powerology.me/warranty** and fill in your details in the provided form along with an uploaded picture of the product to process your request. Once approved, you will receive a confirmation email of the extended product warranty. Upload the required information within 48 hours of purchase to be eligible for a 24-month warranty period.

For more info, please check:  
**powerology.me/warranty**

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at: **hey@powerology.me**

Website: **powerology.me**

Instagram: **powerology\_official**

Facebook: **powerology.ME**