



Green Lion

E-Scooter


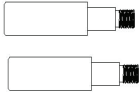

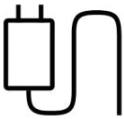
SKU: GNGBK250ESBK

Model No: GBK-250


Table of Contents

Packing List	2
Parts Instructions	2
Assembly Instructions	3
Charging	4
Riding	5
Riding Safety	6
Folding	10
Maintenance	10
Specifications	13
Toxic & Harmful Substances	15
Application Download	15
Disposal	16
Warranty	16
Contact Us	16


Packing List

			
Scooter *1	Handle Bars*2	Allen Key *2	Charger *1

Parts Instructions

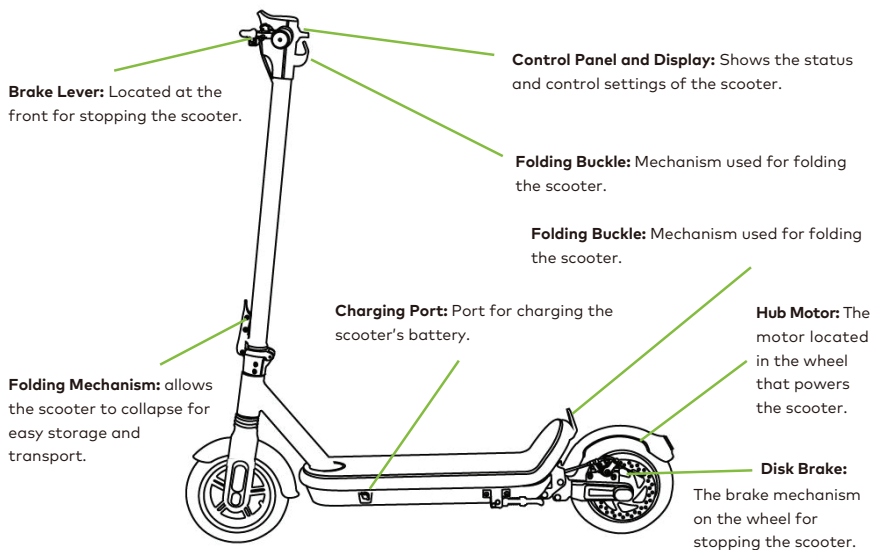

1. Battery Indicator: Five lights indicate the battery level. When the battery is low, all five lights will turn off, and the scooter will slide until it stops.

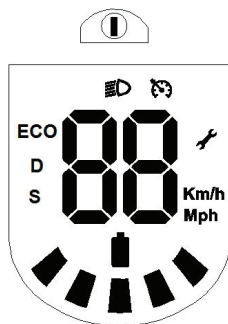

2. Current Gear: Double press the switch to change gears between the first (ECO), second (D), and third (S) gear.

Top speed of first gear (ECO) is 10 km/h.


Second speed of second gear (D) is 15 km/h.

Top speed of third gear (S) is 25 km/h.


3. Power Switch: Long press the switch to turn the power on/off. When the power is on, short press the switch to turn on/off the headlight.

Assembly Instructions


Unfold the scooter and put down the kickstand.

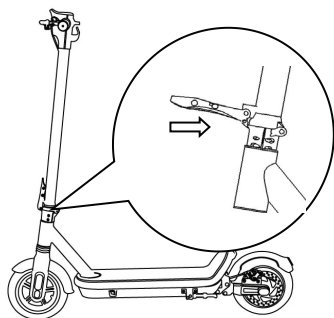


Install the throttle brake with the handlebars (R and L).

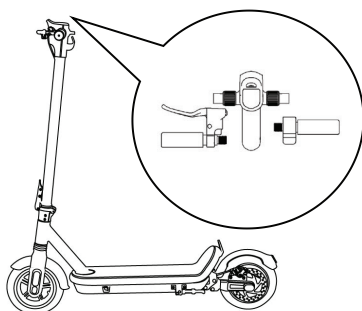




Install the handlebars with the pipe (R and L). Lock the throttle brake screws.

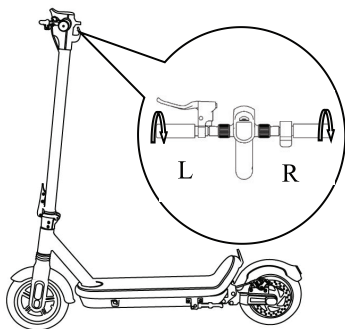


After installation, switch the power on to test the functions.

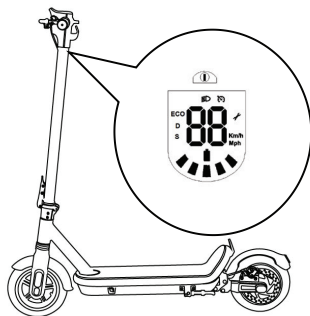


Charging

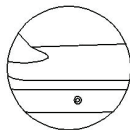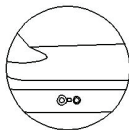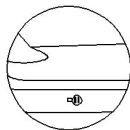

Open the rubber cap on the port. Insert the charger into the port. After charging, put the cap back.

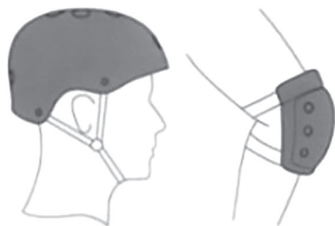

Using Helmet and kneepads are necessary due to the risk of falling and injury during learning

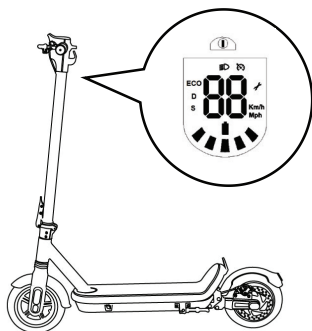


1. Turn on the power and check the power indicator.





2. Stand on the board with one foot, while the other foot pushes against the ground.

After the speed reaches 5 km/h, the motor is ready for acceleration.

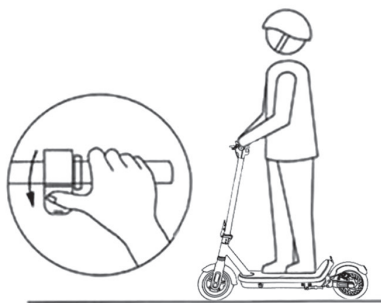

3. Press the accelerator lever slightly, and the scooter will accelerate. Put both feet on the board once you can maintain balance. Press the lever to speed up the scooter.

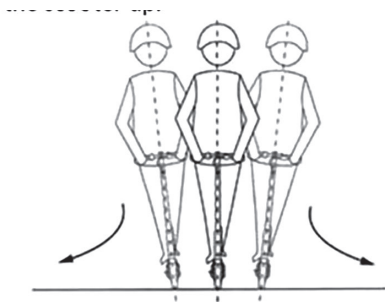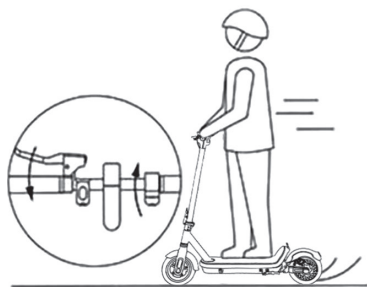

4. Release the accelerator to slow down. The energy recovery system will be automatically activated. Squeeze the brake lever at the left handlebar to stop the scooter.

5. Tilt your body slightly to the side you want to turn, and slowly turn the handlebars.


Riding Safety




Do not ride in the rain.



Please slow down before speed bumps, potholes, and other uneven surfaces. Bend your knees to steady yourself on complex roads.

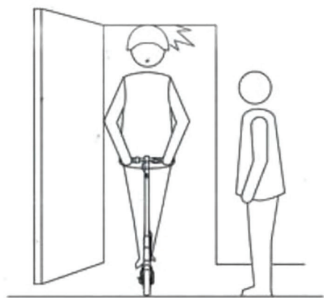


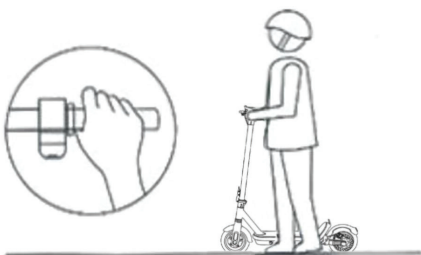
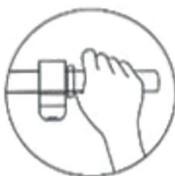
 Watch your head when passing doors.




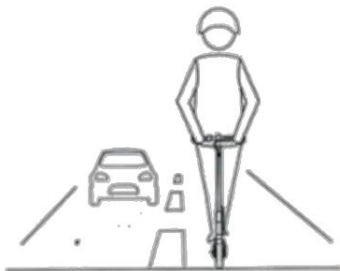
 Do not accelerate downhill.




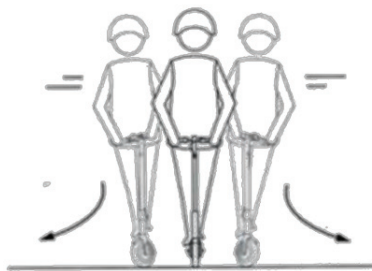
 Do not hang heavy objects such as a backpack on the handlebars.




 Do not press the accelerator when you are walking on foot.



 Do not ride on the roadways.



 Do not turn suddenly at high speed.




No riding in water above 2cm.



No riding with another person or a child.




Do not step on the fender.

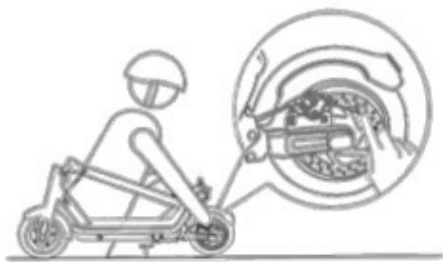

Do not touch the disk brake after frequent braking, as it will be very hot!



Do not release the handlebars while riding.

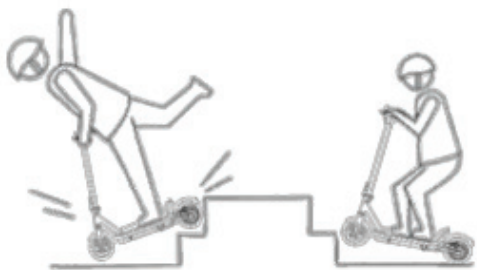

No riding upstairs or downstairs.

An electric scooter is a sporting entertainment tool, but once you drive it into a public area, there are also possible safety risks. Strictly follow the instructions in this manual when driving to protect you and others' safety to the maximum extent, and to abide by local laws and regulations.

At the same time, you need to understand: Once you ride an electric scooter on public roads or other public places, you are facing the risk of accidents, even if you are in full compliance with this safe guide. Like all vehicles, the faster the electric scooter is, the longer the braking distance. Therefore, it is important to be vigilant and maintain proper speed while driving, and it is important to maintain a reasonable safety distance with other people and vehicles. Please be vigilant and drive at low speed before entering unfamiliar terrain.


Please respect pedestrians when riding. No frightening pedestrians, especially children. Remind pedestrians to slow down when you are approaching their back. When you approach them face-to-face, keep on the side and slow down.

The seller shall not be liable for personal injuries, accidents, and any other unfavorable events resulting from violating the instructions in this manual.


Do not lend the electric scooter to a person who has no experience to avoid injuries. Once you let someone ride the scooter, you are responsible for their safety. You must make sure that they have carefully read this user manual.

Please check the electric scooter every time before riding. If you find that any parts are lost, the battery capacity is obviously reduced, the tire is flat or excessively worn, or there are any abnormal sounds or malfunctions, do not ride it.

Folding

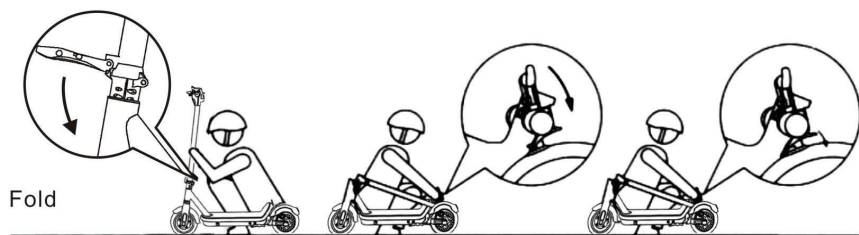

Make sure that the power of the electric scooter is turned off, open the folding mechanism, put down the pipe, and hook the handlebars onto the rear fender. When opening, press the hook at the rear fender until the handlebars can be released, then unfold the electric scooter.

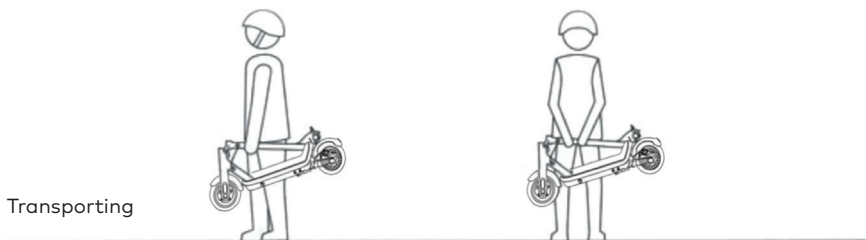

After folding, hold the pipe with one hand or both hands to carry it.
Let me know if you need any further adjustments!

Maintenance

Cleaning and Storage

1. Please use a soft cloth dipped in a little water to wipe the scooter body.
If it is difficult to clean the dirt, you can use toothpaste and wash with

a toothbrush repeatedly, and then use a damp cloth to clean. If there are scratches in plastic parts, you can use sandpaper to polish.

2. Do not use alcohol, gasoline, kerosene, or other corrosive, volatile chemical solvent cleaning, otherwise the appearance and internal structure of the body will be seriously damaged. It is forbidden to use a pressure water gun to spray or flush, and ensure that the electric scooter power is switched off all along, the charger has been unplugged, and the rubber cap is tightened. Otherwise, it may cause electric shock or serious failure.

3. When not in use, try to store the electric scooter in a dry and cool place, and avoid long-time storage outdoors. Sun exposure, overheating, or cold outdoor environments will accelerate the appearance of the electric scooter and tire aging and reduce the life of the electric scooter and its battery pack.

Battery Maintenance

1. Do not use other models or brands of batteries, as there may be a security risk.

2. Do not touch the battery contacts, and do not open or expose the shell. Avoid metal objects touching the battery contacts to cause a short circuit, or it may cause damage to the battery or personal injury or even death.

3. Only use the original charger, otherwise, there is a risk of damage or fire.

4. Improper disposal of used batteries may cause serious contamination of the environment. Follow the local regulations to dispose of the battery pack.

5. Please recharge the battery in time and charge it fully before storage to extend battery life.

6. Do not place the battery over 50°C or below -20°C (for example, do not place the electric scooter or its battery pack in a car under the summer sun), and do not put the battery into a fire. Otherwise, it may lead to

battery failure, overheating, and even fire. If you don't ride it for more than 30 days, please fully charge it, store it in a cool dry place, and fully charge it every 60 days, or the battery may be damaged, and this damage is not within the warranty.

7. To avoid the full exhaustion of power, please recharge the battery in time. It can greatly extend the battery life. In addition, at room temperature, the battery pack can offer a higher mileage and performance. And if it is used in an environment below 0°C, battery life and performance will drop. Typically, at -20°C, the mileage may be only half of it at room temperature. As the temperature rises, the battery mileage will be restored.

8. A fully charged electric scooter will deplete its stored power after about 120-180 days of standby. If not timely charged before its power is depleted, it is likely to lead to excessive battery discharge damage, this damage is irreversible, and can no longer enjoy free warranty.


(**Note:** non-professional personnel is prohibited to remove the battery.)

Disk Brake Adjustment




If you feel the brake is too tight, please use the M5 Allen wrench anticlockwise to release the screw on the disc brake. Adjust the brake cable to make the tail slightly shorter, and tighten the screw. If you feel the brake is too loose, release the screw, adjust the brake cable to make the tail slightly longer, and then tighten the screw.

Debugging

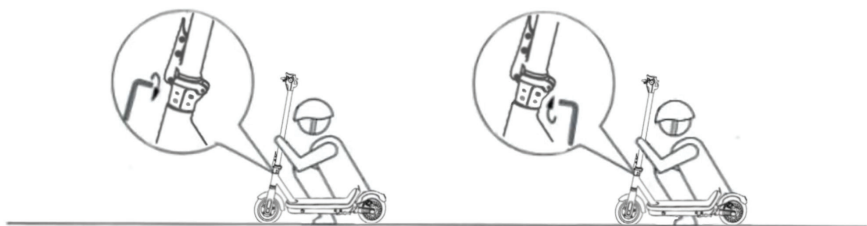

If the pipe shakes, use the Allen wrench to fasten the two screws on the folding mechanism.

Pump

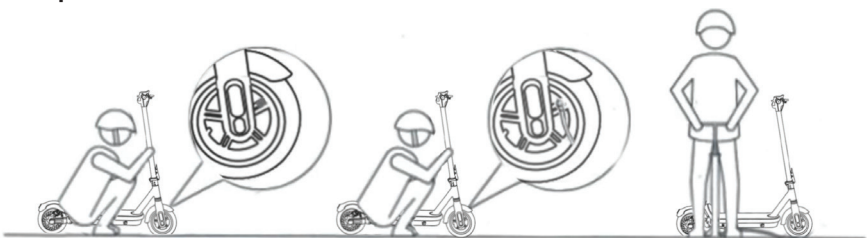

If the tire has gone down, remove the cap on the inlet, connect it to an air pump to inflate it.

Specifications

Model No.	GBK-250
Material	Aluminum Alloy
Motor	DC Brushless
Power	250W

Headlight	30W
Battery	10Ah Li-ion
Voltage	36V
Wheel Size	8.5"
Gear	3 Levels
Front Brake	Electric
Rear Brake	Drum
Top Speed	30 km/h
Charging Time	6-7 Hrs
Charging Input	240-120V
Mileage	25-30 km
Climbing Angle	10° - 12°
Load Capacity	100 kg
Product Weight	15.65 kg
Folded Dimensions	50*43*111 cm
Extended Dimensions	121*43*111 cm

Toxic and Harmful Substance

Name of Component	Harmful Substance					
	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Charger	X	○	○	○	○	○
Battery	X	○	○	○	○	○
Air Tap	X	○	○	○	○	○
Charging Port	X	○	○	○	○	○
Master Control Board	X	○	○	○	○	○
Instrumentation Circuit Board	X	○	○	○	○	○
Wheel Motor	X	○	○	○	○	○
Car Frame	○	○	○	○	○	○
Tire	○	○	○	○	○	○

This Table is formulated in line with the SJ/T 11364.

"O": Indicates that the content of this harmful substance in all homogeneous materials of this component is below the limit prescribed in GB/T 26572.

"X": Indicates that the content of this harmful substance in at least one homogeneous material of this component is beyond the limit prescribed in GB/T 26572.

Application Download

Download and install the Smart Life app from Google Play or the App Store.
Search for "Smart Life" in your app store.
Scan the QR code to complete the setup.



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

This **Green Lion** product comes with a 12-month warranty when purchased from our website, official store, or approved sellers.

To extend the warranty, please visit <https://www.greenlion.net/warranty> and fill out the form with your product details. Make sure to upload a clear picture of the product.

After we review and approve your request, you will receive a confirmation email stating that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://www.instagram.com/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)