



Green Lion

E-Scooter

SKU: GNGBK300ESBK

Model No: GBK-300

Table of Contents

Preface	2
Riding Safety	2
Packing List	5
Diagram	6
Assembly Guide	7
Charging	8
Specifications	8
Instructions for Use	9
Warning	10
Disposal	13
Warranty	15
Contact Us	15

Preface

Thank you for choosing this product. Please read this manual carefully and retain it for future reference. The information provided in this manual is essential for ensuring user safety and proper usage of the product.



Riding Safety

1. The E-Scooter is a recreational product. Before mastering riding skills, you need to be responsible for any injuries or damage caused by rider inexperience or failure to follow the instructions in this document.
2. Please understand that while you can reduce risks by following all the instructions and warnings in this manual, you cannot eliminate all the risks. Always remember that riding the E-Scooter involves risks such as injury from loss of control, collisions, and falls. When entering public spaces, comply with local laws and regulations. Faster speeds require longer braking distances. Sudden braking on low-traction surfaces may cause wheel slip or falls. Always maintain a safe distance from others and slow down in unfamiliar areas.

3. Always wear a helmet when riding. Use an approved bicycle or skateboard helmet that fits properly with the chin strap in place, providing protection for the back of your head.
4. Do not attempt your first ride in any area where you might encounter children, pedestrians, pets, vehicles, or other obstacles and potential hazards.
5. Respect pedestrians by always yielding the right of way. Pass on the left whenever possible. When approaching a pedestrian from the front, stay to the right and slow down. Avoid startling pedestrians. When approaching from behind, announce yourself and slow down to walking speed when passing. Please obey local traffic laws and regulations if the situation is different.
6. In places without laws, comply with the safety guidelines outlined in this manual. The manufacturer is not responsible for any property damage, personal injury/death, accidents, or legal disputes caused by violations of the safety instructions.
7. Do not allow anyone to ride your E-Scooter on his/her own unless they have carefully read this manual and followed the New Rider Tutorial in the App. The safety of new riders is your responsibility. Assist new riders until they are comfortable with the basic operation of the E-Scooter. Make sure each new rider wears a helmet and other protective gear.
8. Before each ride, check for loose fasteners and damaged components. If the Kickscooter makes abnormal sounds or signals an alarm, immediately stop riding. Diagnose your Kickscooter via the Segway-ninebot App and call your dealer/distributor for service.
9. Be alert! Scan both ahead and in front of your E-Scooter — your eyes are your best tool for safely avoiding obstacles and low-traction surfaces (including but not limited to, wet ground, loose sand, loose gravel, and ice).

10. To reduce the risk of injury, always read and follow all CAUTION and WARNING notices in this document. Do not ride at an unsafe speed. Never ride on roads with motor vehicles. The manufacturer recommends riders be 14+ years old. Always follow these safety instructions.

a. People who should not ride the E-Scooter include

i. Anyone under the influence of alcohol or drugs.

ii. Anyone with health issues putting them at risk if they engage in strenuous physical activity.

iii. Anyone with balance issues or motor skills problems that would interfere with their ability to maintain balance.

iv. Anyone whose weight is outside the stated limits (see Specifications).

v. Pregnant women.

b. Riders under the age of 18 should ride under adult supervision.

c. Comply with local laws and regulations when riding this product.

d. To ride safely, you must be able to clearly see what is in front of you and must be clearly visible to others.

e. Do not ride in the snow, in the rain, on roads which are wet, muddy, icy, or that are slippery for any reason.



f. Do not ride over obstacles (sand, loose gravel, or sticks). Doing so could result in a loss of balance or traction and could cause a fall.

11. Do not attempt to charge your E-Scooter if the charger, or the power outlet is wet.

12. As with any electronic device, use a surge protector when charging to help protect your E-Scooter from damage due to power surges and voltage spikes. Only use the Segway charger. Do not use a charger from any other different product models.

13. Only use approved parts and accessories. Do not modify your E-Scooter. Modifications to your E-Scooter could interfere with the operation of the E-Scooter, resulting in serious injury and/or damage, and could void the Limited Warranty.


Packing List

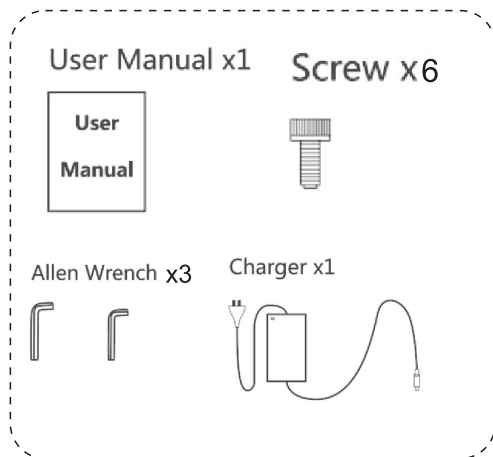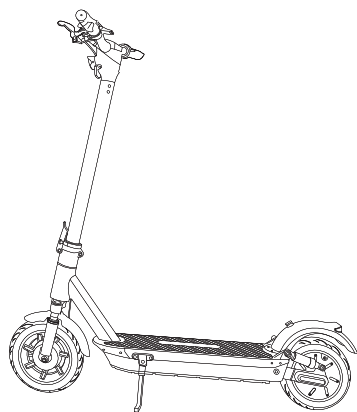

When unpacking your E-Scooter, please verify that the above items are included in the package.

If any components are missing, please contact your dealer/distributor or nearest service center. After verifying that all components are present and in good condition, you can assemble your new E-Scooter. Please retain the box and packaging materials in case you need to ship your E-Scooter in the future. Remember to power off your E-Scooter and unplug the power card before assembling mounting accessories or cleaning the mainframe.

Diagram

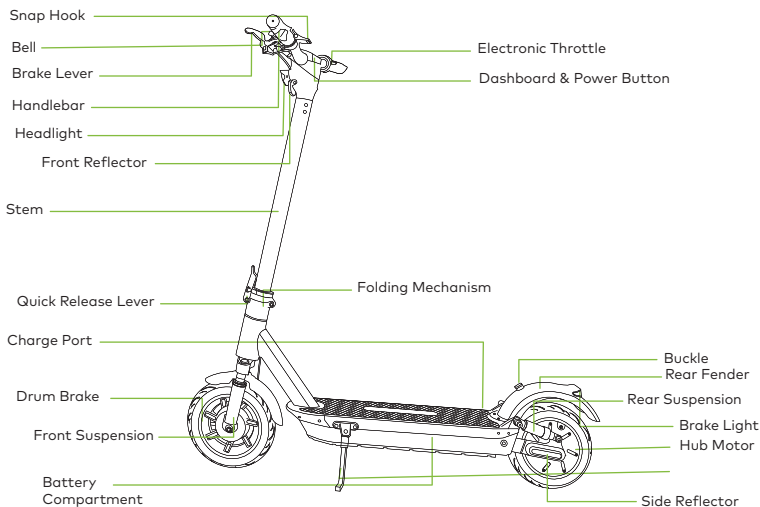

Dashboard & Power Button

Pedestrian mode: pedestrian gear 6KM/H makes pushing the scooter easier.

Speed Gear: Right-click of the right button to switch between three gears 2, 1, and 3. Double-click the right button to switch to the "Pedestrian" gear, and double-click again to switch to the original gear. 1st gear 10KM/H, 2nd gear 20KM/H, 3rd gear 30KM/H. (With memory function, the default is the gear used before the last shutdown.)

Power On and Off: Power on and off switch.

Brake: The icon indicates that the brake has been activated.

Error: The wrench icon indicates that the scooter has detected an error.

Non-zero Start: The icon indicates that when the scooter speed reaches 3KM/H, press the accelerator, and the motor starts working.

Light Switch Control: Click the left button to control the front tail light on/off.

Speed Unit Switching: When the meter is turned on, press the right button three times to switch between kilometers ("KM/H") and miles ("mph") units.

Bluetooth: The icon indicates that the scooter has been successfully connected to the mobile device.

Mileage Switching: When the meter is turned on, double-click the left button to switch between single mileage/total mileage.

Battery Level: The battery power is indicated by 5 bars. Each representing approximately 20% of a full battery.


Lock Function Switch: Right-click left button 8 times to open the lock function, the "lock scooter display" icon lights up, and the motor can't turn in the locked state. Press the left button again 8 times to unlock the scooter.

Assembly Guide

- 1.** Unfold the handlebar stem and fasten it.


Then unfold the kickstand to support the E-Scooter.

Double insurance of folding system

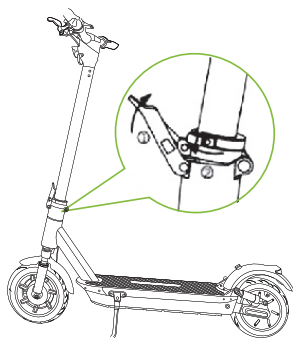


- 2.** Firmly connect the wires inside the handle and the stem.


Slide the handle onto the stem. Be aware of the correct orientation.

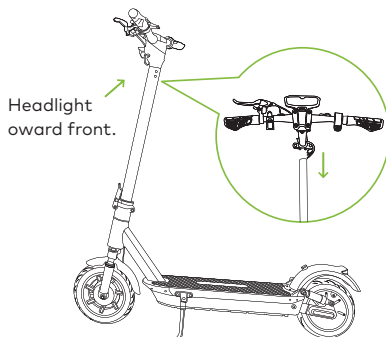


- 3.** Install six screws (two on each side) with the included hex wrench.

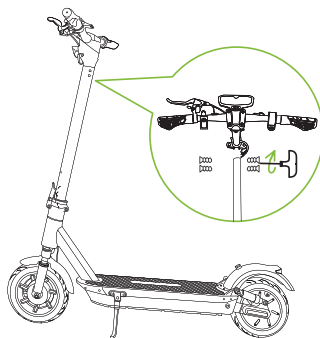

- 4.** Verify that your E-Scooter can be powered on and off.

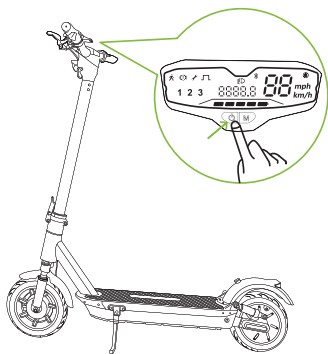

Charging

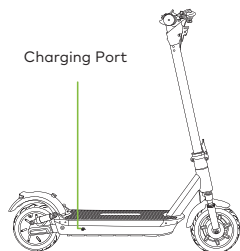

Charging Step Tips:



1. Open the charge port cover.



2. Insert the charge plug.



3. Close the charge port cover when finished

WARNING

Do not charge if the charge port or power cord is wet.

Do not charge or use your battery if it is damaged or shows traces of water.

Always close the charge port cover when not charging.

Specifications


Model No.	GBK-300
Material	Aluminum
Motor	DC Brushless
Power	500W
Battery	10Ah Li-ion
Voltage	36V
Wheel Size	10"
Gear	3 Levels
Brake System	Double Disc
Top Speed	35 km/h
Charging Time	5-6 Hrs

Charging Input	120-240V
Mileage	25-30 km
Climbing Angle	10-15°
Load Capacity	100 kg
Product Weight	18.5 kg
Folded Dimensions	125*85*59 cm
Extended Dimensions	125*85*126 cm

Instructions for Use




Wear an approved helmet and other protective gear to minimize any possible injury.

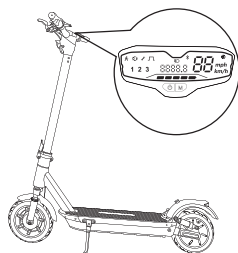

Power on the E-Scooter and check the power level indicator. Charge the E-Scooter if the battery level is low.




Stand on the footrest with one foot and push off with another foot to start gliding.

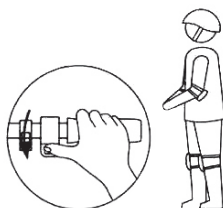


Put your other foot on the footrest to keep both feet stable. Press the throttle with your right hand to speed up when balanced.

Note: For your safety, the motor will not engage until the E-Scooter reaches 1.86 mph (3 km/h).

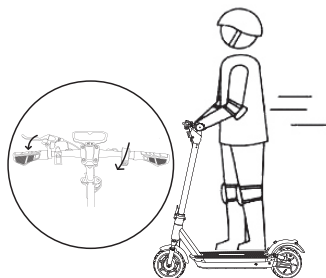

Slow down by releasing the throttle and brake by squeezing the brake lever.

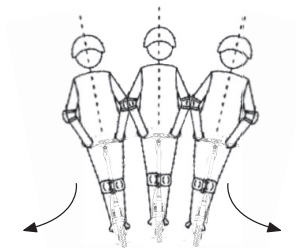

To turn, shift your body weight and turn the handle slightly.

Warning


When hard braking, you risk serious injury due to loss of traction and falls. Maintain a moderate speed and look out for potential hazards.



DO NOT ride the E-Scooter in the rain.
DO NOT get wet.




DO NOT ride over speed bumps, thresholds, or other bumps at HIGH SPEED.

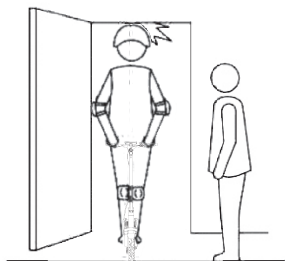

Watch your head when passing through doorways.



Do not keep your feet on the rear fender.

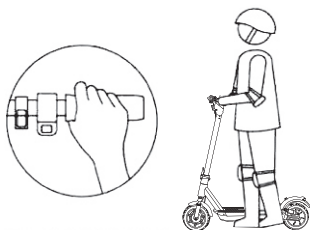

DO NOT press the throttle when walking with the Kickscooter.




Avoid contacting obstacles with the tire/wheel.




DO NOT carry heavy objects on the handlebar.



DO NOT ride the E-Scooter with only one foot.

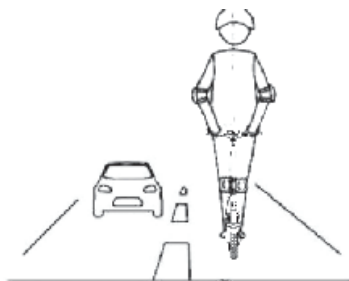


DO NOT ride on public roads, motorways, or highways.

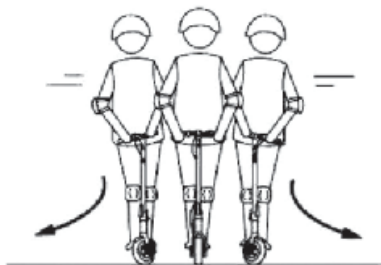


DO NOT rotate the handle violently while driving at high speed.



DO NOT ride through puddles or other bodies of water.

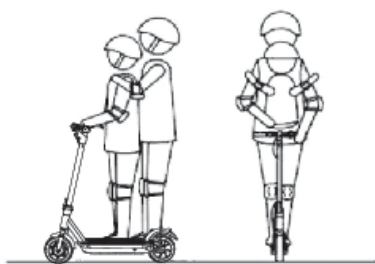


The E-Scooter is for one rider only. Do not carry any passengers. Do not carry a child. Do not ride when pregnant.

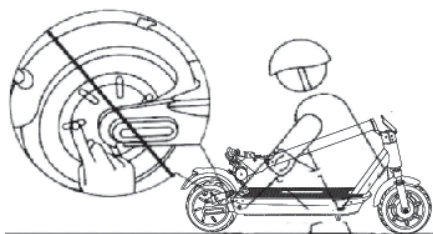


DO NOT touch the hub motor after riding because it can get hot.



DO NOT take your hands off the handlebar while riding. Do not ride with one hand only.

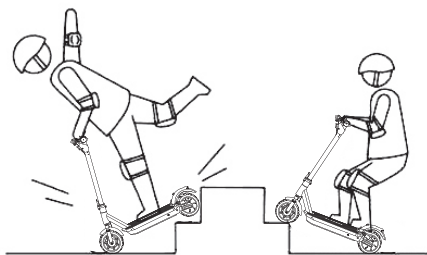

DO NOT ride up and down stairs or jump over obstacles.

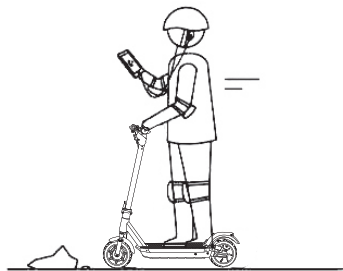

Do not use a mobile phone or wear earphones when operating the E-Scooter.

WARNING

Always keep both hands on the handlebar or you risk serious injury due to loss of balance and falls

Disposal

WEEE Disposal and Recycling Information

Correct disposal of this product: This marking indicates that this product should not be disposed of with other household waste throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of materials. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental recycling.

Battery Recycling Information for the European Union

Batteries or packaging for batteries are labeled in accordance with European Directive 66/2006/EC and amendment 56/2013/EU concerning batteries and accumulators and waste batteries and

 
WEEE Disposal and Recycling Information

Correct disposal of this product: This marking indicates that this product should not be disposed of with other household waste throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of materials. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental recycling.

Battery Recycling Information for the European Union

Batteries or packaging for batteries are labeled in accordance with European Directive 66/2006/EC and amendment 56/2013/EU concerning batteries and accumulators and waste batteries and

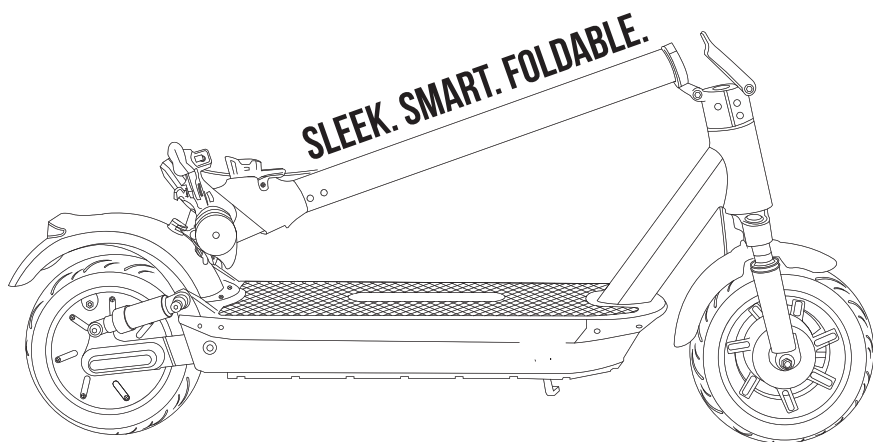

Warranty

This **Green Lion** product comes with a 12-month warranty when purchased from our website, official store, or approved sellers.

To extend the warranty, please visit **<https://www.greenlion.net/warranty>** and fill out the form with your product details. Make sure to upload a clear picture of the product.

After we review and approve your request, you will receive a confirmation email stating that your product's warranty has been extended.

For more info, please check:

<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: **<https://www.greenlion.net/>**

Sales: **sales@greenlion.net**

Service Support: **Support@greenlion.net**

Telegram: **[@greenlion_global](https://t.me/greenlion_global)**

Instagram: **[@greenlion_global](https://www.instagram.com/greenlion_global)**