



Green Lion

FORCE MAX Vacuum Cleaner

SKU: GNFORMXVACBK
Model No: GL-VC17

Table of Contents

Important Safety Instructions	2
Precautions	3
Product's Intended Use	4
Warning	4
Product Components	5
Display Screen Introduction	6
Product Installation	7
Instructions for Use	8
a. Battery Charging	8
b. How to Empty the Dust Cup	8
c. Filter Maintenance	9
Using the Cleaning Brush	9
Troubleshooting	10
Specifications	10
Disposal	12
Warranty	12
Contact Us	12

Important Safety Instructions

Warning: Basic safety precautions should always be followed when using electrical appliances to reduce the risk of fire, electrical shock, or injury.

1. Personal Safety

1.1 Store the appliance indoors in a dry place and out of the reach of children.

1.2 Always use the appliance responsibly. It is suitable for individuals aged 10 years and above, and for those with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, if supervised or instructed on its safe use.

1.3 Ensure children do not play with the appliance and supervise when using or maintaining it.

1.4 Only use the attachments recommended in this manual. Misuse or the use of other accessories may present a risk of injury.

1.5 Exercise caution when cleaning stairs.

1.6 Keep the appliance and accessories away from hot surfaces.

1.7 Do not obstruct the appliance's openings or hinder airflow. Keep any objects, such as dust, lint, clothing, and fingers, away from all openings.

1.8 Take care to keep hair away from moving parts and openings.

2. Electrical Safety

2.1 Only use batteries and chargers provided by the manufacturer.

2.2 Never modify the charger in any way.

2.3 Ensure the charger is designed for the appropriate voltage. Verify the voltage matches the rating of the appliance.

2.4 Use a charger suitable for the battery type; using an incorrect charger can pose a fire risk.

2.5 Before using, inspect the charger cord for signs of damage or aging. A damaged or entangled cord increases the risk of fire or electric shock.

- 2.6** Do not abuse the charger cord. Never carry the charger by the cord.
- 2.7** Never pull the cord to disconnect it from a socket. Grasp the plug and pull to disconnect.
- 2.8** When storing, do not wrap the cord around the charger.
- 2.9** Keep the charger away from hot surfaces and sharp edges.
- 2.10** If the charger becomes damaged, replace it immediately.
- 2.11** Do not handle the charger or appliance with wet hands.
- 2.12** Always remove the charger from the socket before removing the battery, cleaning, or maintaining the appliance.

3. Battery Safety

- 3.1** This appliance uses Li-ion batteries. Do not incinerate batteries or expose them to high temperatures, as they may explode.
- 3.2** Liquid ejected from the battery may cause irritation or burns.
- 3.3** In an emergency, contact a professional immediately.
- 3.4** Leaks from the battery cells may occur under extreme conditions. If battery leakage occurs, do not touch the liquid. If the liquid contacts skin, wash immediately with soap and water. If the liquid contacts the eyes, flush with clean water for at least 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of it following local regulations.
- 3.5** Shorting the battery terminals may cause burns or fires.
- 3.6** When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws, or any other small metal objects that could cause a short circuit.
- 3.7** When disposing of the appliance, remove the battery and dispose of it safely according to local regulations.

Precautions

- 1.** Before using the appliance, or after any impact, inspect it for signs of wear or damage, and perform repairs as necessary.
- 2.** Do not use the appliance if any part is damaged or defective.

3. Repairs should be carried out by a certified service agent or a qualified professional in compliance with applicable safety regulations. Unqualified repairs could be hazardous.
4. Never modify the appliance, as this may increase the risk of personal injury.
5. Only use replacement parts or accessories that are provided or recommended by the manufacturer.

Product's Intended Use

1. This appliance is designed for dry vacuum cleaning only.
2. Do not use the appliance to pick up liquids or use on wet surfaces.
3. Avoid picking up any flammable, burning, or smoking materials.
4. Use the appliance only as described in this manual.
5. Do not use on concrete, tarmacadam, or other rough surfaces.


Warning

1. Do not use water, solvents, or polishes to clean the exterior of the appliance; instead, wipe clean with a dry cloth.
2. Never immerse the unit in water or clean it in a dishwasher.




Product Components


Main Body:

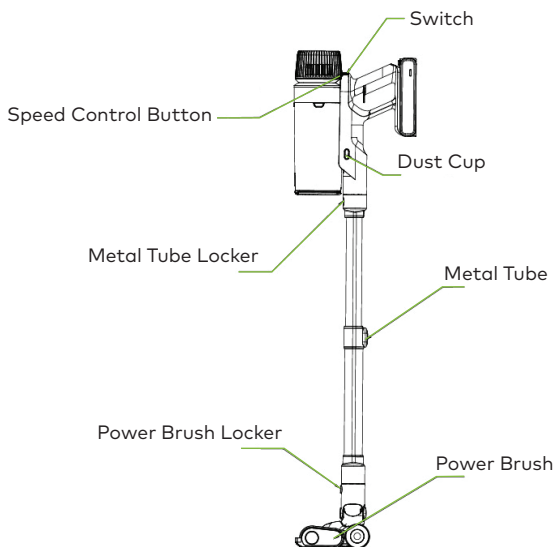

Wall-Mounted: Wall Mounting Slot

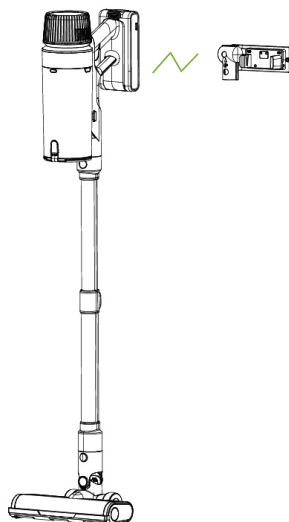


Display Screen Introduction

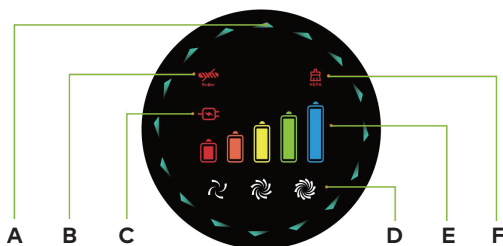


- A. Charge and discharge indicator lights
- B. Floor brush blocked indicator
- C. Working indicator
- D. Suction mode indicator (MIN/MID/MAX)
- E. Remaining battery power
- F. Full cup reminder


Real-time display of remaining power and gear status

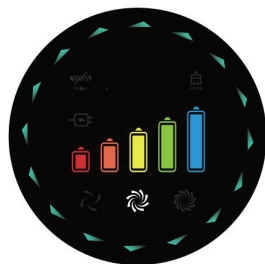


Gear adjustment light display

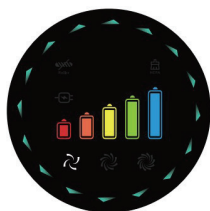

MIN

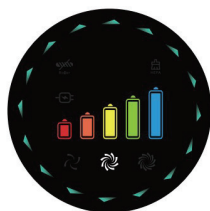

MID




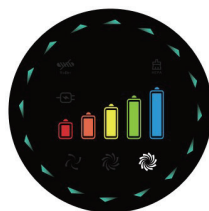


MAX

Product Installation


1. Using the vacuum as a stick

- a)** Assemble the battery into the dust cup. Ensure the battery bolt head is properly inserted into the dust cup slot, as shown below.
- b)** Attach the metal tube to the body of the vacuum until you hear a click sound.
- c)** Attach the brush to the other end of the metal tube, as shown below.
- d)** Press the switch to start the vacuum. Choose from three available speed settings.

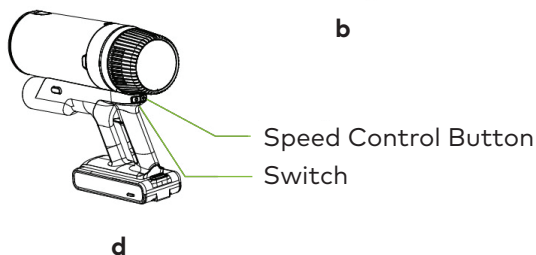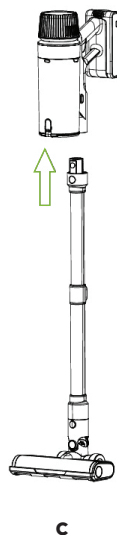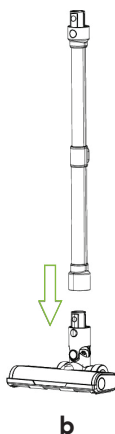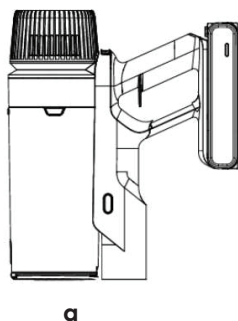


2. Using the vacuum as a handheld

 
Insert the desired accessory (bristle brush or long crevice) to the body of the vacuum, as shown below.



Longcrevice

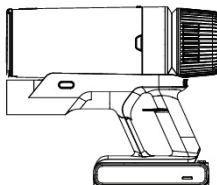

Bristlebrush

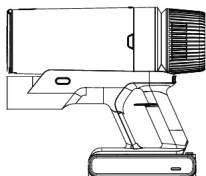

Instructions for Use

a. Battery Charging

Charging time: 4.5 hours

1. When the battery level falls below 15%, the battery indicator on the display will begin flashing. The vacuum cleaner should be charged as soon as possible.

2. During charging, the power indicator on the display will change based on the battery power, and the battery icon will continue to flash.

3. Once fully charged, the display will remain on for 1 hour before turning off completely. The battery indicator will flash white while charging, and the white color will remain steady once the battery is fully charged.


b. How to Empty the Dust Cup

Open the dust cup as shown below. Dispose of the dust collected in the cup.

c. Filter Maintenance


1. Press the battery pack button to remove the battery.
2. Open the dust cup as shown below.
3. Take out the filter case, then remove the filter.
4. Wash the filter case thoroughly.

Note: Reassemble the parts only when completely dry.

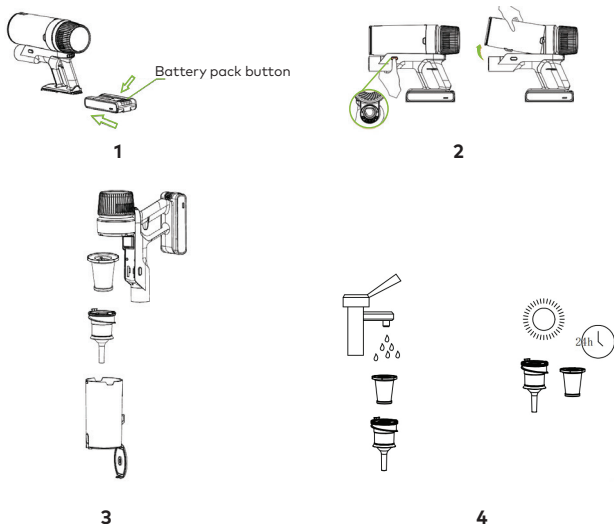

Using the Cleaning Brush

- A. Brush Side: Use the brush side to clean the metal mesh and inlet filter.
- B. Knife Side: Use the knife side to remove any tangled hairs from the brush roller.

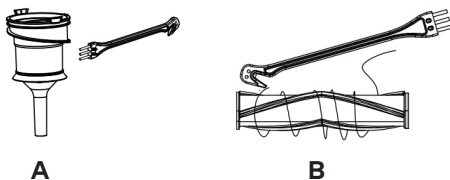

Troubleshooting

1. Problem: Suction gets weak Solution:	1.1 Empty the dirt cup. 1.2 Clean the HEPA filter. 1.3 Check if the dirt cup is installed correctly.
2. Problem: Roller brush stops spinning & has strange noise Solution:	2.1 Check if the brush (especially the bearing part) is stuck by hair. 2.2 Check if the filter cup is installed correctly in the right place. 2.3 Detach the tube and use the handheld part only. 2.4 If the issue persists, contact the seller for help.
3. Problem: Battery doesn't hold a charge Solution:	3.1 Check if the vacuum cleaner is fully charged (with 3 lights on). 3.2 Check if the charger & charging base are connected correctly. 3.3 If there is no light when charging, contact the seller for help.

Specifications

Model Number	GL-VC17
Material	ABS
Motor Type	BLDC, 29.6V
Rated Power	400W
Output Voltage	35V
Frequency	50/60 Hz
Noise Level	< 82 dB
Vacuum Levels	10 / 18 / 29 kPa

Charging Input	100-240V
Working Time	18 / 38 / 55 minutes
Battery Capacity	2200mAh, Lithium-Ion
Charging Time	4.5 hours
Charging Port	UK Plug (1.8 m cable)
Dustbin Capacity	800 ml
Product Size	220*240*1130 mm
Product Weight	2.1 kg



Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.greenlion.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
<https://www.greenlion.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: <https://www.greenlion.net/>

Sales: sales@greenlion.net

Service Support: Support@greenlion.net

Telegram: [@greenlion_global](https://www.instagram.com/greenlion_global)

Instagram: [@greenlion_global](https://www.instagram.com/greenlion_global)