



Green Lion

Lite Vacuum Cleaner Cordless / 180° Foldable Tube

SKU: GNVC16CLNRGY Model No: GL-VC16

Table of Contents

Important Safety Instructions	2
Personal Safety	2
Electrical Safety	2
Battery Safety	3
Cleaning and Maintenance	4
Components	4
Product Installment	5
Product Operations	7
Trouble shooting	9
Specifications	10
Disposal	11
Warranty	11
Contact Us	11

Important Safety Instructions

Warning: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety

- 1. Store it indoors in a dry place and out of the reach of children.
- 2. Always use responsibly. This appliance can be used by children aged 10 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- **3.** Do not let children play with the appliance; supervise children using or maintaining the appliance.
- **4.** Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended may present a risk of personal injury.
- 5. Take extra care when cleaning stairs.
- 6. Keep the appliance and accessories away from hot surfaces.
- **7.** Do not block the appliance's openings or hinder air flow; keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body).
- 8. Particularly keep hair away from openings and moving parts.

Electrical Safety

- 1. Only use batteries and chargers supplied by the manufacturer.
- 2. Never modify the charger in any way.
- 3. The charger has been designed for a specific voltage. Always check

that the voltage is the same as stated on the rating plate.

- **4.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- **5.** Before using, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock.
- 6. Do not abuse the charger cord.
- 7. Never carry the charger by the cord.
- **8.** Do not pull the cord to disconnect it from a socket; grasp the plug and pull to disconnect it.
- 9. Don't wrap the cord around the charger when storing.
- 10. Keep the charger cord away from hot surfaces and sharp edges.
- **11.** The supply cord cannot be replaced. If the cord is damaged, the charger should be discarded and replaced.
- 12. Do not handle the charger or the appliance with wet hands.
- 13. Do not store or charge the appliance outdoors.
- **14.** The charger must be removed from the socket before removing the battery, cleaning, or maintaining the appliance.

Battery Safety


- **1.** This appliance includes Li-ion batteries; do not incinerate batteries or expose to high temperatures, as they may explode.
- 2. Liquid ejected from the battery may cause irritation or burns.
- 3. In an emergency situation, contact professional help immediately.
- 4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid that gets on skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.

- 5. Shorting the battery terminals may cause burns or fire.
- **6.** When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws, or other small metal objects that could make a connection from one terminal to another.
- **7.** When you dispose of the appliance, remove the battery and dispose of the battery safely in accordance with local regulations.

Cleaning and Maintenance Instructions


- **1.** Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth.
- 2. Never immerse the unit in water and do not clean in a dishwasher.

Components

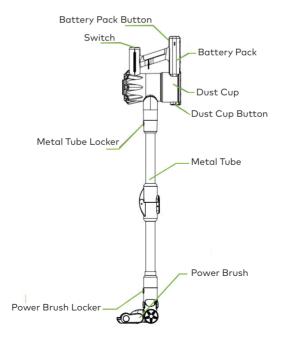


Product Installment

- I. Use as the Stick Vacuum Cleaner
- **a)** Assemble the battery into the dust cup, make sure the battery bolt head is inserted into the dust cup slot correctly as shown below.

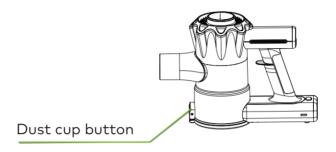


b) Attach the metal tube to the body as shown below until you hear a click sound.

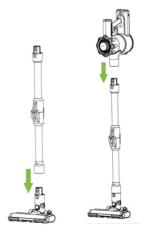

c) Attach the brush to another head of the tube as shown.


d) Press the switch to work.

Three-speed control for choice

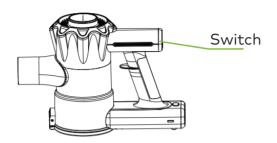


II. Use as a Hand Vacuum

 Insert the accessory (bristle brush or long crevice) to the body as shown below.



Long crevice

 

Bristle brush

P

Product Operation

III. Battery Charging

Charging time: 4-5 hours

- **1.** When the battery indicator is blinking white, please turn off the appliance and charge it.
- 2. When charging, the battery light blinks white.
- **3.** When fully charged, the battery light stays white (not blinking), then please unplug the charger.



MIN - On low speed

MID - On medium speed

MAX - On high speed




IV. Make the Dust Cup Empty




- V. Maintain the Filter
- 1. Press the battery pack button to remove the battery.
- 2. Open the dust cup as shown below.
- 3. Dust cup button
- 4. Take out the filter case, then take out the filter.

Wash the filter case.

Note: Assemble it when totally dry.

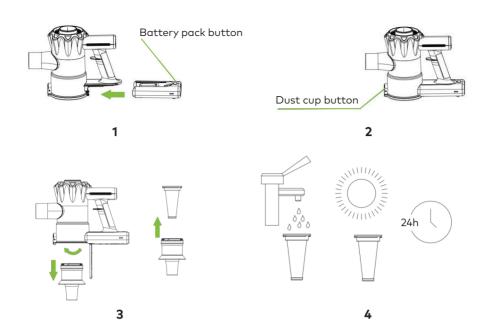

- 5. How to Use the Cleaning Brush?
- a. The brush side is used to clean the metal mesh and inlet filter.

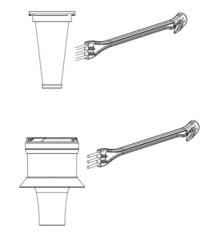

b. When the Brush Roller is tangled, the Brush Tangled Indicator will be flashing, indicating that the floor brush needs to be cleaned.

To avoid possible injury, switch off the appliance and remove the floor nozzle from the device to ensure that the brush will not accidentally start its operation while you are cleaning it.





Troubleshooting

Suction Gets Weak	 Empty the dirt cup. Clean the HEPA filter. Check if the dirt cup is installed correctly.
Roller Brush Stops Spinning & Has Strange Noise	 Check if the brush (especially the bearing part) is stuck by hair. Check if the filter cup is installed correctly in the right place. Detach the tube, use the handheld part only. If it doesn't work, contact the seller for help.
Battery Doesn't Hold a Charge	 Check if the vacuum cleaner is fully charged with 4 lights on. Check if the charger & charging base is connected correctly. If there is no light on when charging, contact the seller for help.

Specifications

Model No.	GL-VC16
Material	ABS
Motor	DC, 22.2V
Rated Power	150W
Output Voltage	26.5V
Frequency	50/60 Hz
Noise Level	< 82 dB
Vacuum Pressure	7/9/12 kPa
Charging Input	100-240V
Battery Capacity	2200mAh
Charging Time	4.5 hours
Working Time	15 / 25 / 45 minutes
Charging Port	UK Plug, (1.8 m)
Dustbin Capacity	700 ml
Product Size	1100*220*210 mm
Product Weight	1.8 kg

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Green Lion** website or shop come with a 24-month warranty.

When you buy **Green Lion** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **https://www.greenlion.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check: https://www.greenlion.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

Website: https://www.greenlion.net/

Sales: sales@greenlion.net

 ${\tt Service \ Support@greenlion.net}$

Telegram: @greenlion_global Instagram: @greenlion_global