

**PORODO**  
LIFESTYLE



**Porodo Lifestyle**

**4-IN-1 DUAL-POT  
GLASS AIR FRYER**

SKU: PDAF532TBK

# Table of Contents

Product Overview	2
Specifications	2
Safety Precautions	3
Glassware Protection	4
Product Components	5
Control Panel Details	5
Usage Instructions	5
Important Notes	8
Before First Use	9
Operation Instructions	9
Menu Functions	9
Adjusting Time and Temperature	10
Pause Function	10
After Cooking	11
Cleaning and Maintenance	11
Circuit Schematic	12
Error Codes	12
Disposal	12
Warranty	13
Contact Us	13

## Product Overview

The Porodo Lifestyle 4-in-1 Dual-Pot Glass Air Fryer offers a versatile and health-conscious cooking experience with four specialized modes: Bake, Crisp, Recrisp, and Fry, each designed to deliver optimal results for a variety of dishes. Its non-toxic borosilicate glass design ensures safe cooking while allowing easy monitoring and promoting healthier meals. The air fryer features a large 4L pot and a smaller 1.5L pot, perfect for preparing dishes like fries, vegetables, fish, wings, steak, and cookies, making it ideal for both family meals and individual servings. With its user-friendly interface and multifunctional capabilities, this air fryer simplifies cooking while maintaining the quality and flavor of your favorite foods.

## Specifications

Rated Voltage	220-240V
Rated Frequency	50/60Hz
Rated Power	1500W
Capacity	Large pot 4L/ small pot 1.5L
Power Cord	UK 3-Pin Plug
Product Size	269x271.5x294mm
Product Weight	5.70 kg
Model Number	PDAF532T

## Safety Precautions

1. Never immerse the power cord, plug, or the entire appliance in water or under the faucet. Doing so can result in electrical shock or damage.
2. Prevent liquids from entering the appliance to avoid electrical shock or short circuits.
3. Do not cover the air outlet or socket of electrical appliances during operation.
4. Some parts of the appliance may reach high temperatures during use. Avoid direct contact with your hands.
5. Ensure the appliance's output voltage matches the voltage specified on its label.
6. Check the electrical power cord and accessories for damage before use.
7. Keep children away from electrical appliances to prevent accidents.
8. Avoid placing power cords over sharp edges of tables or counters.
9. Do not use wet hands to plug in or operate the appliance.
10. Avoid using the appliance near flammable materials such as tablecloths, curtains, or wallpaper.
11. External power cables must not be damaged or frayed.
12. Place the appliance on a stable, heat-resistant surface during use. Avoid placing it on materials that are prone to heat damage or wear.
13. Keep a clearance of at least 10 cm around the appliance and avoid placing objects on top of it.
14. Do not use the appliance unattended.
15. Persons with physical, sensory, or intellectual disabilities, or those without sufficient experience, should avoid using the appliance unless supervised.
16. During use, the appliance will discharge air through the rear exhaust port. Ensure the area around the port remains clear and do not block it.
17. Always unplug the appliance by pressing the off button and then removing the plug from the socket. Never pull the cord directly to avoid damage.
18. If the power cord or any electrical component is damaged, it must be replaced by the manufacturer, its maintenance department, or a qualified professional to avoid danger.

- 19.** During the baking process, parts of the appliance that are easily touched will become very hot. Keep children and others away from the appliance.
- 20.** This appliance is designed for domestic and similar purposes, including:
  - a. Staff kitchens in shops, offices, and other work environments
  - b.** Farms
  - c.** Guest houses, motels, and other residential accommodations
- 21.** Always unplug the appliance from the socket and allow it to cool down before cleaning.
- 22.** Avoid using accessories other than those provided with the appliance.
- 23.** The appliance is intended for home use only; do not use outdoors.
- 24.** Always unplug the appliance when not in use.
- 25.** You may notice a slight odor or smoke during the first use. This is normal and is due to production residues, which will slowly disappear after use.


## **Glassware Protection**

- 1.** Sudden temperature fluctuations can cause glassware to break. Do not add cold liquids or food to hot glassware, and avoid adding hot liquids or food to cold glassware. Also, do not allow hot glass to come into direct contact with cold or wet surfaces or objects.
- 2.** When cleaning glassware, allow it to cool down to below 120 degrees before cleaning.
- 3.** These glass containers are not suitable for use in the oven or stove. Do not use them with any heating appliance or heat source other than this machine or microwave oven. Never place empty containers in the microwave.
- 4.** Physical damage or impact can cause glassware to break. Be careful not to scratch the glass when using metal vessels and knives.
- 5.** Do not drop or hit glassware against hard objects, nor should you use the vessel to hit hard objects.
- 6.** Do not use glassware that is cracked or severely scratched.

7. If glassware breaks or cracks, wear thick gloves and clean the glass carefully. Glass can be very sharp, so dispose of broken glass properly and do not attempt to recycle it.
8. Glass pots can be cleaned in the dishwasher. If necessary, they can also be cleaned with hot soapy water and cleaning detergent by hand.
9. Plastic lids are only suitable for microwaving and storage.


## Product Components

1. Control panel
2. Furnace head
3. Adapter cover
4. Large container lid
5. Large frying rack
6. Large glass pot
7. Small container lid
8. Small frying rack
9. Small glass pot

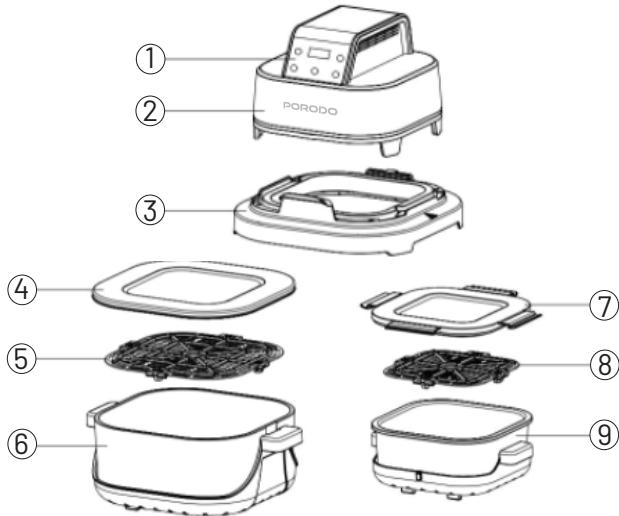

## Control Panel Details


1. Display Screen
2. Function Menu
3. Time/Temperature Reduction
4. Time/Temperature Switch
5. Start/Stop
6. Menu Selection
7. Increase in Time/Temperature

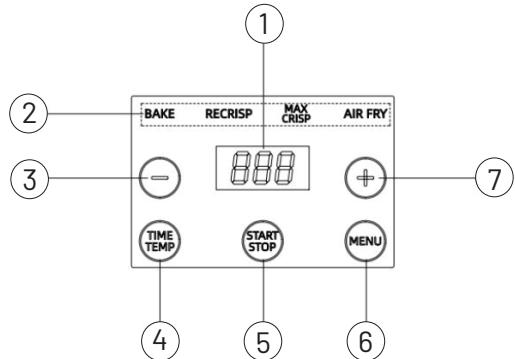

## Usage Instructions

1. Placing the Machine
  - a. Place the machine on a stable, horizontal surface.
  - b. Ensure there is at least 10 centimeters of space on the back and sides.


**c.** Keep the machine away from curtains, wall fabrics, and other combustible materials, maintaining a distance of at least 30 centimeters from them.

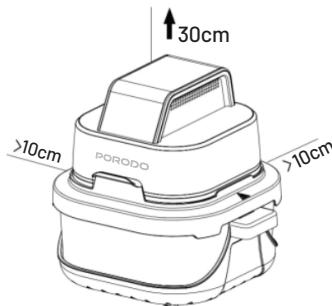


**2. Setting Up the Glass Pot**

**a.** Place the shelf under the glass pot, then position the stove head on top of the glass pot.


**b.** When using a large glass pot container, an adapter cover must be used. Insert the stove head into the adapter cover, and you should hear a click, indicating that it is securely in place.

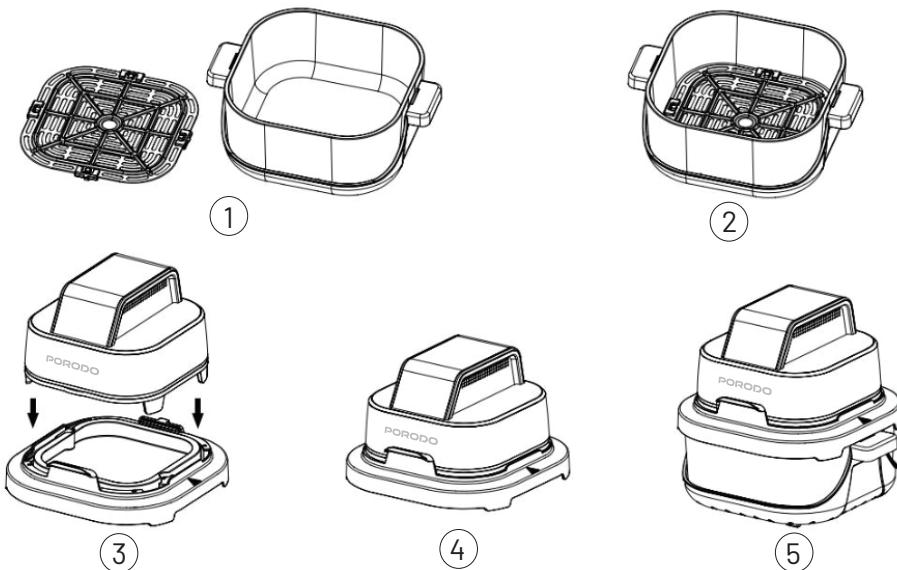


**3. Use small glass containers as shown below.**

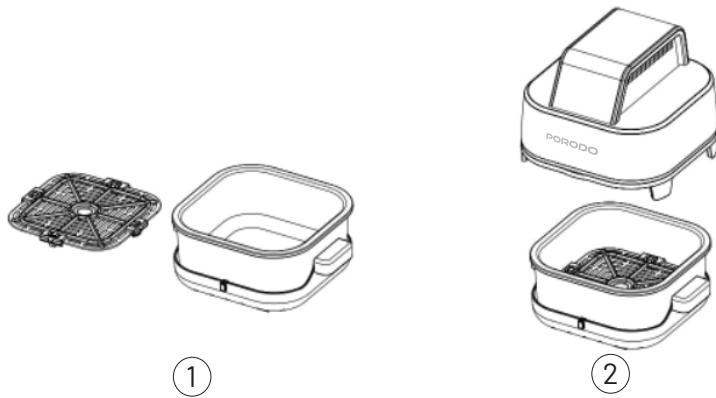

**4.** The large fresh lid must be used after the container and food have cooled down. It is used for storing ingredients as shown below.

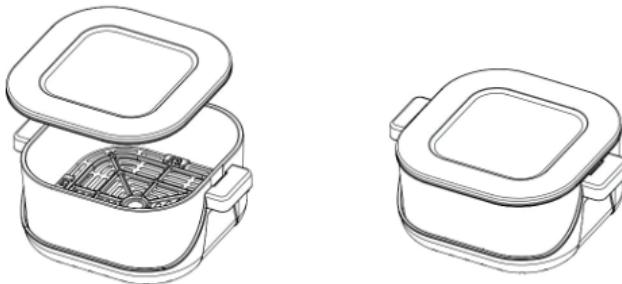


**5.** Small fresh cover is usually used to seal food ingredients for easy carrying and use

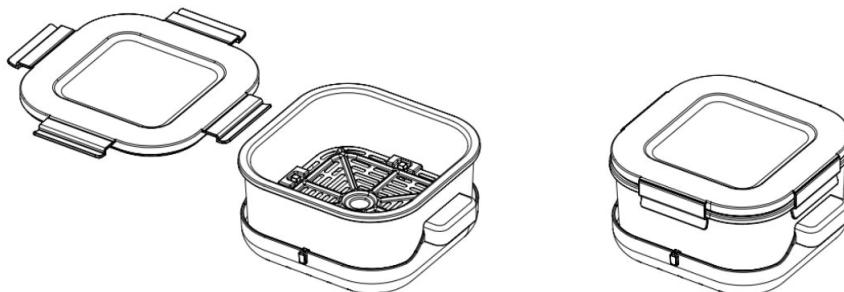

## 6. Disassembly and Installation

- a. Disassembly: First pull the clasp on the handle position of the base, then remove the glass container.
- b. Installation: First pull the clasp on the handle position of the base, then place the glass container inside.

**NOTE:** You can complete one side first, then proceed to the other side.

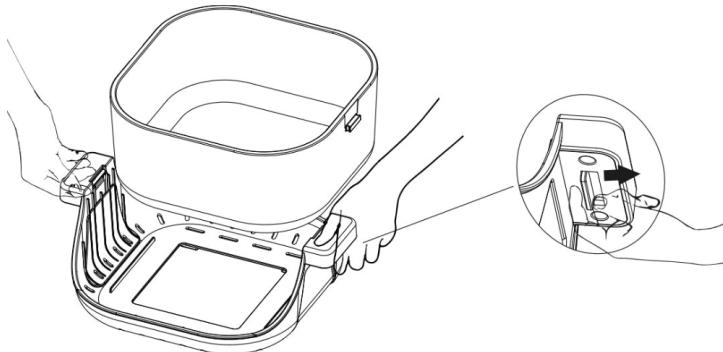

## Important Notes

1. After cooking, the surface of the glass utensils will be very hot. Do not touch it directly with your hands. Always use heat-resistant gloves or other appropriate tools to handle the food.
2. Glass utensils should always be used in conjunction with the base, not placed directly on the table.
3. Wait for the glassware to cool down before washing to avoid potential damage.
4. The food should not exceed the surface of the glass utensils, as it may expand when heated. Food closer to the heat source is more likely to burn.
5. The equipment includes a safety switch. Press down on both switches to activate the machine. The equipment will operate as shown in the safety operation diagram on the right.
6. The machine can only be used when the furnace head is properly fitted over a glass instrument. During normal operation, ensure the switch is not touched, except for the power supply. Other keys cannot be used until the machine is in operation. Press the power button and display screen to activate the system, which will show "OPEN".



## Before First Use

1. Carefully remove all packaging materials and select a flat, stable surface to place the product.
2. Clean the glass pots, shelves, and all other accessories with hot water, dish soap, or a soft cloth.
3. Use a clean cloth to dry the glass pot.

## Operation Instructions

1. Once the power is connected, the machine will emit a sound, the display screen and indicator light will flash on and off, and the "START/STOP" key will light up, indicating that the power is on.
2. Press the "START/STOP" key to turn on the device. All indicators and display lights will turn on, and the machine will enter standby mode.
3. In standby mode, select the function menu by pressing the "MENU" key. After selecting the function menu, the menu will begin to flash.
4. The machine will automatically shut down after 60 seconds of inactivity in standby mode.
5. In standby mode, after selecting a function, the corresponding function menu indicator will flash. Press the "START/STOP" key to enter working mode.
6. To turn off the device, press and hold the "START/STOP" key for 3 seconds.

## Menu Functions

The following table indicates the menu presets of the air fryer. You can also manually adjust the time and temperature of the device as you desire.

Functions	Default Temperature	Default Time	Temperature Range	Time Adjustment Range
BAKE	200°C	12min	60~200°C	1~60min
RECRISP	180°C	3min	60~200°C	1~60min
MAX CRISP	200°C	15min	60~200°C	1~60min
AIR FRY	200°C	20min	60~200°C	1~60min

**BAKE:** For making baked goods and desserts.

**RECRISP:** To restore the crisp taste of leftovers by heating them gently.

**MAX CRISP:** Use high temperature heat to fry your food and achieve maximum crispness, which is best for frozen foods.

**AIR FRY:** Used for increasing the crispness and crunch of foods, almost without oil.

**NOTE:** The larger the portion of baked food, the longer time and higher temperature it takes to cook.

## Adjusting Time and Temperature

1. After selecting the function menu, if you need to adjust the cooking time and temperature, press the "TIME/TEMP" key to switch between the time and temperature settings.
2. To adjust the cooking temperature, press the "TIME/TEMP" key, and the temperature value on the display will flash. Use the "+" and "-" keys to increase or decrease the temperature.
3. To set the cooking time, press the "TIME/TEMP" key, and the digital display for the time will flash. Adjust the time using the "+" and "-" keys.

## Pause Function

1. During cooking, if the burner is removed from the container, the cooker will automatically stop, and the digital screen will display "OPEN". In this case, only the "START/STOP" key will respond, while all other keys will be locked. When the burner is placed back on the container, the cooker will resume the previous cooking process.

**2.** When the instrument is working, press the "START/STOP" key to pause the cooking process. The "START/STOP" key will continue to flash. Press the "START/STOP" key again to resume cooking.

**NOTE:** When the burner is removed from the container to pause the function while the appliance is working, the appliance enters standby mode if no operation is performed within the next 10 minutes.

**NOTE:** During cooking, turn the food regularly or irregularly to help it cook more evenly.

## After Cooking

**1.** When the device finishes working, it will emit a "drop, drop, drop" sound. The heater will stop working, but the fan will continue cooling for a minute until the internal temperature drops.

**2.** After cooling, the furnace head can be removed directly from the container and placed on any table.

**Note:** When taking food out of the container, do not touch it directly with your hands, as it may be very hot. Be careful not to burn your hands.

**Tip:** If the cooking effect is not satisfactory, simply cover the container with the burner and add a few more minutes to the cooking time.

**3.** After cooking is complete, press the power button to turn off the power and unplug the power cord from the wall.


## Cleaning and Maintenance

**1.** Clean the glass pot and the shelf after each use.

**2.** The furnace head protective net can only be wiped clean with a wet cloth; do not wash it with water.

**3.** After cleaning and drying, reassemble all parts and store them in a ventilated, dry environment free from corrosive gases until the next use.

## Circuit Schematic

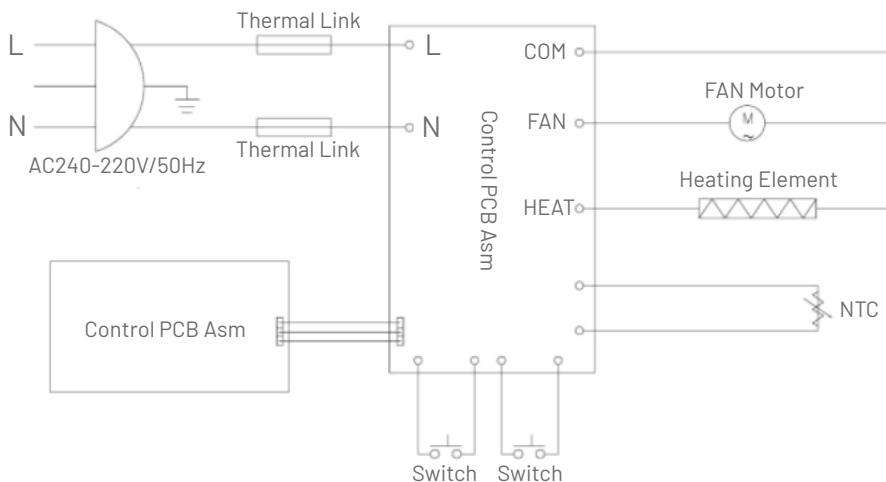

## Error Codes

Code	Code Interpretation	Possible Cause
E1	NTC out-of-order	The temperature sensor is open.
E2	NTC out-of-order	The temperature sensor is short-circuited.
E3	The circuit board is faulty	Communication failure
E4	The high temperature protection device is activated	The temperature of the pot is higher than 240 degrees.

## Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

## **Warranty**

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at <https://www.porodo.net/warranty> and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

## **Contact Us**

If you have any questions about this Privacy Policy, please contact us at:

[info@porodo.net](mailto:info@porodo.net)

Website: <https://www.porodo.net/>

Service Support: [support@porodo.net](mailto:support@porodo.net)

Instagram: [porodo](#)