

PORODO



Porodo



**4G/LTE Home and Outdoor
Portable Router**

SKU: PD4GCPMF





  Table of Contents

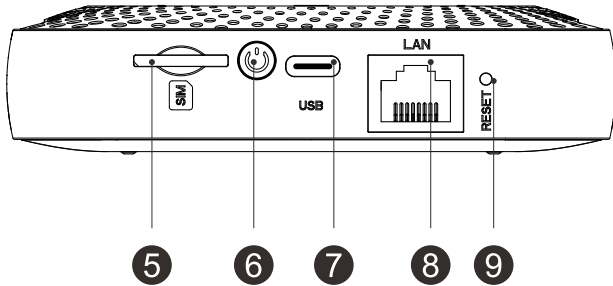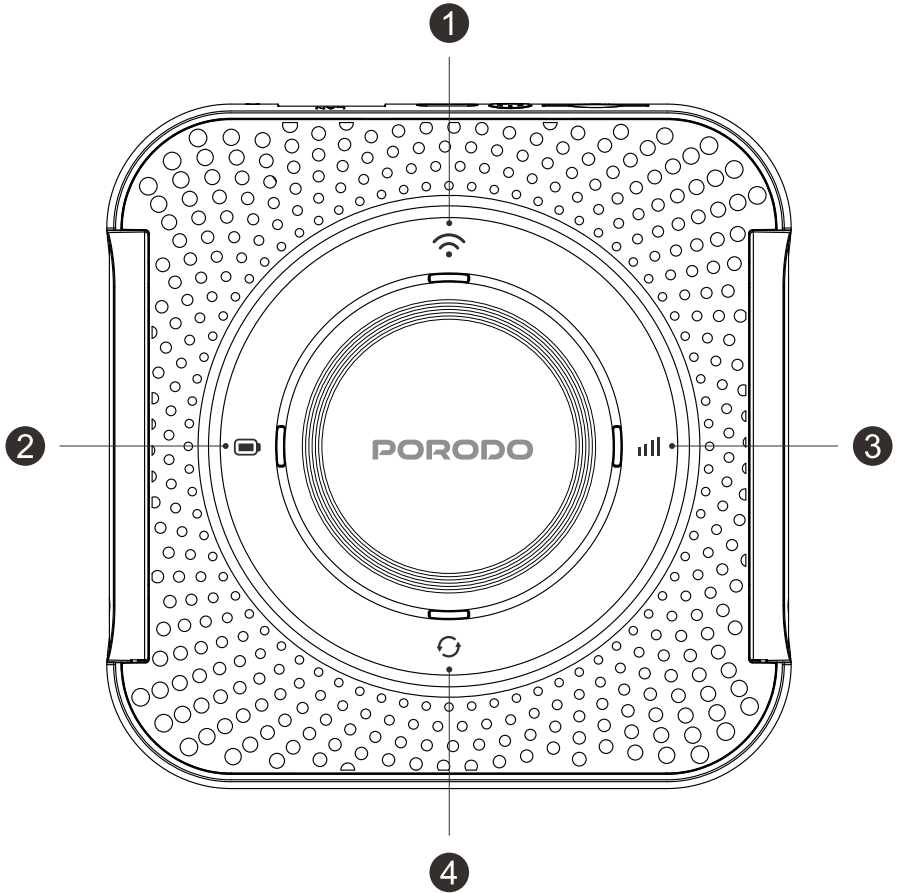Product Components	2
Operating Condition	4
Installation Instructions	4
Connecting Devices	4
Device Login	5
Quick Setting	6
FAQ	7
Safety Precautions	7
Specifications	8
Disposal	8
Warranty	9
Contact Us	9



Product Components



a. Display Components

Indicator	Indicator Name	Indicator Status	Indicator Descriptions
① 	Wi-Fi Indicator	Solid green light	Wi-Fi is on.
		Off	Wi-Fi is abnormal or off.
		Flashing green light	User connected.
② 	Battery Message Indicator	Flashing green light	Battery is charging.
		Solid green light	Battery power is more than 30 %or fully charged.
		Solid red light	Battery power is less than or equal to 30 %.
③ 	Signal Indicator	Off	No network.
		Solid green light	Data connection is open.
		Flashing green light	Data connection is closed.
④ 	System Indicator	Solid green light	Device power on, light is on.

b. Interface Overview

Interface	Component Descriptions	Function
⑤ 	SIM card slot	The device uses a Micro SIM.
⑥ 	Power button	In the shutdown state, press and hold the power button for 10 seconds to start the device.
		In the power-on state, press and hold the power button for 3 seconds to shut down the device.
⑦ USB	USB interface	The device charges its battery through the power supply.
		The device will start automatically when an external power supply is connected.
⑧ LAN	LAN interface	The RJ45 port can be used to connect to a LAN for PC access or to a router set to wired broadband mode, serving as a WAN port.
⑨ RESET	Reset hole	To reset the device to factory settings, insert a pin into the reset hole and hold it for 3-5 seconds

 
Operating Condition

To ensure optimal performance, the router should be operated within the recommended working environment.

1. Maintain a safe distance between the router and heat sources, and ensure adequate ventilation at all times.
2. Position the router on a stable, horizontal surface.
3. Operate the router in a clean, dry, and dust-free environment.
4. During thunderstorms, disconnect the router from the power supply and all cables to prevent potential damage from lightning.

Installation Instructions

1. Carefully insert the SIM card into the designated SIM slot, ensuring it aligns with the direction indicated by the silk-screen markings.
2. Press and hold the power button for 10 seconds, then release it to power on the device.
3. Using a mobile device, locate and select the Wi-Fi network broadcast by this device, and connect to access the Internet.

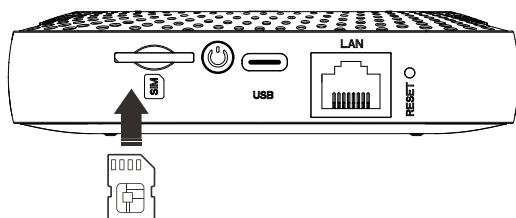

Connecting Devices

 
You may connect to the router using the following methods:

1. Wired Connection

Before accessing the web settings page, it is recommended to configure your computer to "Obtain an IP address automatically" and "Obtain DNS server addresses automatically."


2. Wireless Connection (Wi-Fi)

- 2.1 Use your mobile device to search for the router's wireless network and connect to it.
- 2.2 Default Wi-Fi Name (SSID): 4G-WIFI-XXXX
- 2.3 Default Wi-Fi Password (Key): 1234567890

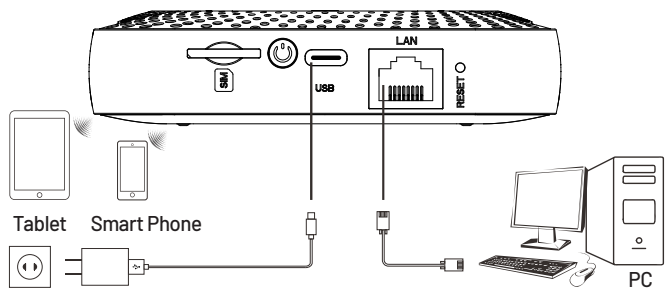

Device Login

 1. Connect your mobile phone or computer to the Wi-Fi network broadcast by the router. For detailed network information, please refer to the device nameplate.
2. Open a web browser, preferably Google Chrome or Microsoft Edge, and enter the router's default IP address in the address bar to access the web interface. Enter the default password "admin" to log in and access the configuration settings.

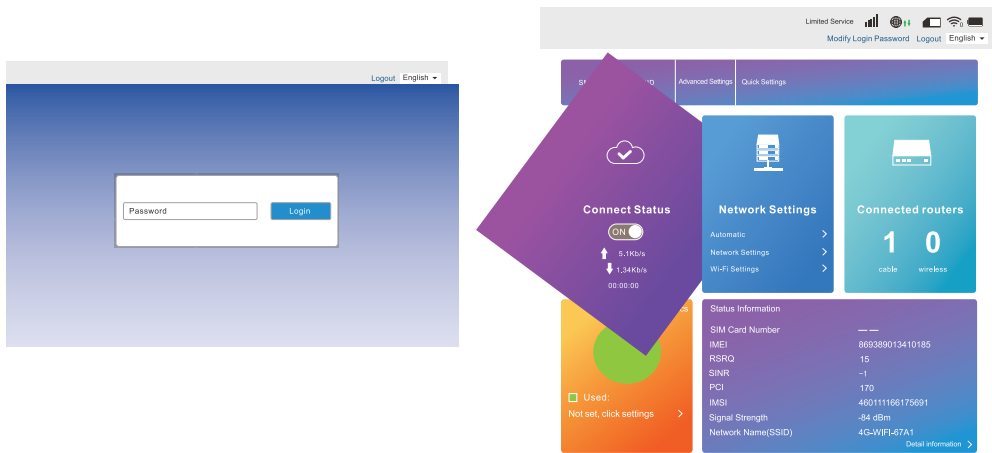

Quick Setting

1. Wi-Fi Configuration: Select "Set Wireless Intranet" to access the Wi-Fi configuration page. From here, you may modify the SSID, update the Wi-Fi password, and adjust other relevant network settings as needed.

Wi-Fi Settings

Set up wireless so that your mobile phone or laptop could access network via it

Main SSID

Guest SSID

WPS

Internet Wi-Fi

Advanced Settings

WLAN MAC Filter

Wi-Fi Switch

Multi SSID Switch

Main SSID

Network Name(SSID *)

Security Mode

Pass Phrase *

Show on lcd

Max Station Number

☒ Enable

☐ Disable

☐ Enable

☒ Disable


4G-WIFI-67A1

☒ SSID Broadcast

WPA-PSK/WPA2-PSK

☐ Display Password

Please input at least 8 characters



☐ Yes

☒ No

32

Apply

Apply

2. APN Configuration: Select "Set Internet Connection" and then "APN Setting" to access the APN configuration page. Here, you can modify the APN access point and update any related connection settings as required.

Connection Settings

Connection Mode

Network Selection

APN

APN

Current APN

Mode

Profile

POP Type

Profile Name *

APN *

Authentication

User Name

Password

Dial No.

CUCC

☒ Auto

☐ Manual

CUCC

Ipv4v6

CUCC

3gnet

PAP

☐ Display Password

Add New

6

FAQ

Q: I cannot open the router's login page on my browser. What should I do?

A: Please ensure that your phone or computer is connected to the router. Verify that the IP address entered in the browser is correct: 192.168.2.1.

Q: How can I reset the router to factory default settings?

A: Keep the router powered on, then press and hold the WPS/RST button for more than 5 seconds. Release the button and wait for the router to reboot.

Q: I have forgotten the router's login username and password. What should I do?

A: Reset the router to factory default settings. The username and password will be restored to the default administrator credentials.

Q: I have forgotten the Wi-Fi password for the router. How can I recover it?

A: Reset the router to factory default settings. The Wi-Fi password will be restored to its default value.

Safety Precautions

1. Always use the original power adapter. The manufacturer is not responsible for any damage or malfunction caused by the use of third-party adapters. Power adapter specification: 12V==1A
2. Do not operate the device near metal structures or equipment that emits strong electromagnetic waves, as this may interfere with signal reception.
3. This device is not waterproof. Ensure it remains dry and store it in a cool, dry environment.
4. Avoid using the device immediately after a sudden temperature change. Condensation may form inside or outside the device. Wait until the device has returned to room temperature and all moisture has evaporated before use.
5. Handle the device with care. Do not drop, bend, or strike the device, as this may cause permanent damage.

- 6. Do not attempt to disassemble the device unless you are a qualified professional. For maintenance or repairs, contact an authorized service center.
- 7. The recommended operating environment is a temperature range of 0°C to 35°C and relative humidity between 5 %and 95 %.
- 8. Use only the original battery to avoid damage or risk of explosion. Using an incorrect battery may be hazardous. Follow the manufacturer’s instructions for the proper disposal of used batteries.

Specifications

Input	Type-C 5V/2A
Power	10W
Battery	4000mAh
CPU	ZTE
WiFi	2.4G, 802.11 b/g/n/
4G Bands	B1 ,3 ,7 ,12 ,20 ,40 ,41
Encryption	WPA2-PSK, WPA2, WPA-PSK
Category	CAT4
Download	150Mbps
Upload	50Mbps
Signal Distance	40m
Model Number	PD4GCPMF

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**