



Porodo Soundtec

**SMOOTH-TOUCH
WIRELESS STEREO HEADPHONE**

SKU: PDSTCYZ19

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Button and Interface Guide	4
Usage Instructions	4
Charging Instructions	5
Important Notes	6
Disposal	6
Warranty	7
Contact Us	7

Product Overview

The Smooth-Touch Wireless Stereo Headphones by Soundtec deliver immersive audio with a smooth finish and boundless wireless sound. Equipped with 40mm drivers, they provide high-quality stereo sound, while the lightweight build ensures comfort for all-day wear. With up to 20 hours of playtime, these headphones offer all-day battery life, making them perfect for extended use. Their foldable design allows for easy portability, so you can take them anywhere. Featuring TF card support and Type-C charging, these headphones are versatile and practical. Included in the box are the headphones, a USB-C cable, and a 3.5mm jack cable for added connectivity options.

Specifications

Model	PDSTCYZ19
Input	5V
Battery Capacity	400mAh
Recharge Time	2H
Speaker Diameter	40mm
Playtime	20H
Standby Time	180H






Bluetooth Version	5.3
Sensitivity	113dB
Transmission Distance	10m
Frequency Response	20Hz-20kHz
Charging Interface	Type-C

Product Features

1. Enjoy high-quality stereo sound with 40mm drivers, delivering clear and dynamic audio for an enhanced listening experience.
2. The headphones are lightweight and comfortable, allowing extended use without discomfort, ideal for daily wear or travel.
3. Provides up to 20 hours of playback on a single charge, ensuring uninterrupted music, podcasts, or calls throughout the day.
4. The foldable design allows easy storage and transport, fitting conveniently into a bag or case when not in use.
5. Play music directly from a TF card, allowing you to enjoy your favorite tunes without connecting to another device.
6. Equipped with a Type-C charging port for fast and efficient recharging, so your headphones are ready quickly.

- Experience rich, detailed audio with clear bass and crisp treble, providing a balanced listening experience for music, calls, or other media.
- The package includes the headphones, a USB-C charging cable, and a 3.5mm audio cable for wired use, offering versatile connectivity options for various devices.

Button and Interface Guide

	ON/OFF Wireless /Radio/TF	Long-press the power button to turn the device on or off. Short-press the power button to switch between modes: Wireless, Radio, or TF card.
	Next Track	Long-press the forward button to skip to the next song or radio station. Short-press the same button to increase the volume.
	Previous Track	Long-press the backward button to skip to the previous song or station. Short-press the same button to decrease the volume.
	Answer/Hang up/ Pause/ Play	Short-press the call button to answer an incoming call. Long-press the call button to reject a call. Short-press the same button to pause or play music.
	Tf Card slot	Insert a TF card to play MP3 files directly from the card.
I/O	I/O (Audio Input / Output)	Connect the device to external audio input devices such as an airport speaker, or output audio to external speakers.
USB	Charging	Charge the device using the Type-C connector.

Usage Instructions

- Ensure the indicator lights are functioning properly. A red light indicates charging, alternating blue and red lights indicate wireless connection, and a

steady red light shows the charging status. Do not use the device if the indicator lights malfunction, as this may signal a fault.

2. To turn on the device in wireless mode, press and hold the ON/OFF Wireless/Radio/TF button until the indicator flashes blue and red, indicating it is ready to pair. Avoid turning on the device near strong magnetic fields or water to prevent damage.

3. Enable Bluetooth on your phone and search for the device named "PDSTCYZ19." Select the device to complete pairing. Do not connect incompatible devices, as this may cause malfunction.

4. To play music from a TF card, insert the card into the TF card slot. Press the ON/OFF Wireless/Radio/TF button to switch to TF card mode. The indicator will flash while decoding audio files. Do not force the TF card into the slot or use damaged cards to avoid damage.

5. Use the Next Track and Previous Track buttons to navigate through songs or radio stations.

6. To answer or hang up a call, or to pause/play music, short-press the Answer/Hang Up/Pause/Play button. To reject a call, press and hold this button for three seconds. Avoid pressing buttons excessively or using sharp objects to prevent damage.

7. Do not expose the device to water, high humidity, or direct sunlight during use, as this may damage internal components or the battery.

8. Always use the recommended charging cable and adapter. Avoid using incompatible chargers or power sources to prevent overheating, battery damage, or fire hazards.

Charging Instructions

1. Ensure the headset is powered off before beginning the charging process.

2. Connect the charging cable to the headset and plug the other end into a computer USB port or compatible charger. The indicator light will turn red, indicating that charging is in progress.

3. The headset includes built-in battery protection and fire prevention features, ensuring safe charging.
4. Charging is complete when the indicator light turns off automatically, and the headset will stop charging once fully charged.
5. The headset will automatically shut down when the battery is low. Please recharge the device promptly to avoid interruption.
6. Do not open or disassemble the headset during charging to prevent damage to the battery and internal components.

Important Notes

1. This headset is not waterproof. Keep it away from water and moisture to prevent internal damage and ensure reliable performance.
2. Charge the headset only through a computer's USB port. Do not connect it to external power adapters or high-voltage chargers.
3. To maintain battery performance, avoid leaving the headset unused for extended periods. Charge and discharge it at least once a week.
4. When recording calls or playing music, turn off the power supply to prevent noise interference.
5. The headset will automatically power off if no connection is established within three minutes.
6. When the headset is not connected, double-click the play button to switch between Chinese and English voice prompts.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **<https://www.porodo.net/warranty>** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

<https://www.porodo.net/warranty>

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **<https://www.porodo.net/>**

Service Support: **support@porodo.net**

Instagram: **porodo**