

***PORODO
GAMING***



Porodo Gaming
**MULTIMEDIA &
GAMING CONSOLE**

SKU: PDX622

Table of Contents

Product Overview	2
Specifications	2
Important Notes	3
Schematic View	4
Button Functions	5
System Settings Guide	5
Game Installation Guide	6
Product Features	6
Charging Instructions	7
Video Output Connection	7
Navigation and Controls	8
Troubleshooting Guide	8
Disposal	9
Warranty	9
Contact Us	9

Product Overview

The Porodo Multimedia & Gaming Console is a powerful handheld device designed for both gaming and multimedia playback. It features over 5000 pre-installed games, providing endless entertainment options. With a 4.5-inch display, the console offers a crisp, clear visual experience for gaming and video playback. Equipped with stereo speakers and a built-in 3000mAh battery, it ensures long-lasting use for extended gaming sessions. Additionally, the console supports wired handles for enhanced gameplay and features HDMI video output for easy connection to external displays. With 64GB of expanded memory, you have ample space to store more games, videos, and other content, making this console a versatile choice for on-the-go entertainment.

Specifications

Interface	Type-C, Mini HDMI, 3.5mm, USB-A x2
Image Support	JPG, JPEG, JPE, BMP, PNG formats
Video Format	FLV, MP4 formats
Games Supported	CPS, FBA, FC, GB, GBA, GBC NEOGEO, SFC, MD, PS; Users can add related format games
Product Weight	180g

 
 
Product Dimensions	1.8 x 7.2 x 17 cm
Screen Size	4.5 inch
Screen Resolution	480*854
Battery Capacity	3000mAh
Speaker Output	0.8W
Processor	ATM7051 Quad-core ARM Cortex-A9
Processor Clock Speed	900 MHz
Memory	128MB RAM, 64GB Storage
Operating System	Linux System
Model Number	PDX622

 
Important Notes

Please read the following instructions carefully to ensure proper use of the player.

- 1. Do not strike or apply strong impact to the console.
- 2. Avoid contact with benzene, thinners, or other chemicals.
- 3. Keep the device away from strong magnetic or electric fields.
- 4. Do not expose the device to direct sunlight or heat sources.
- 5. Do not attempt to disassemble, repair, or modify the device yourself.
- 6. Do not use the player or headset while riding, driving, or operating any vehicle to prevent accidents.
- 7. Avoid listening at high volume levels to protect your hearing.
- 8. Do not expose the console to water or other liquids.

Schematic View

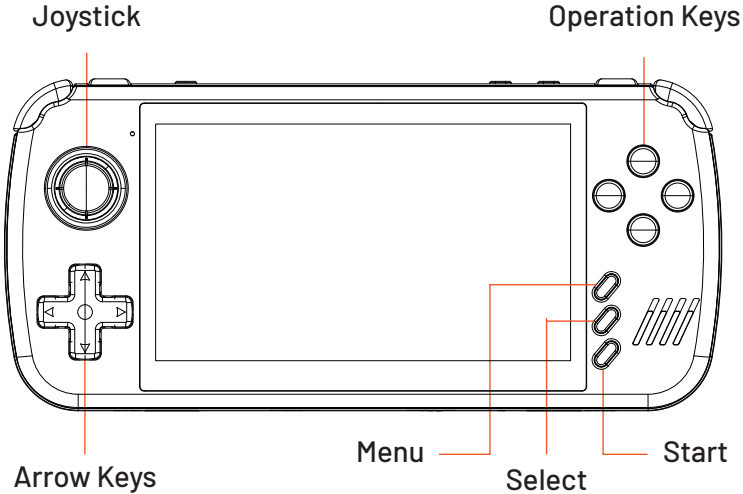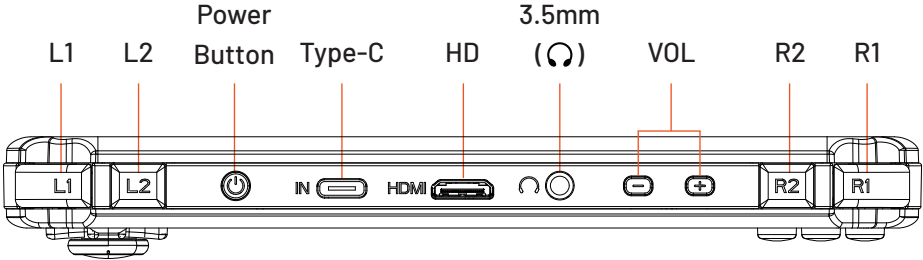

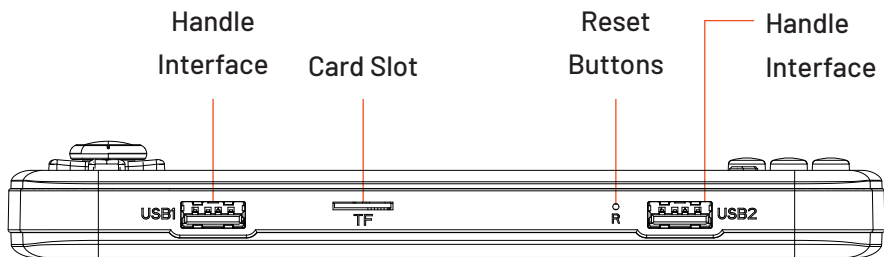

Button Functions

After entering the main interface of the system, refer to the following table for key operation.

A	Confirm Key, Enter the game or start the function to use.
B	Cancel Button
X	Control Characters to punch/shoot/jump, different interface game functions vary.
Y	Control Characters to punch/shoot/jump, different interface game functions vary.
Menu	Used to open the in-game menu.

System Settings Guide

After booting, press the X key to enter the setting interface:

1. **Language Setting:** Go to System Settings> Language. Use the cross key or joystick to change the language, then press the A key to confirm.
2. **Theme Style:** Use the cross key or joystick to modify the style, then press the A button to confirm.
3. **Backlight Setting:** Use the cross key or joystick to adjust the brightness, then press the A key to confirm.
4. **Advanced Settings:** This section shows detailed information such as the machine version and memory size. You can also enable or disable the key tone (open or close).

Game Installation Guide

1. Use your computer to read the TF card and transfer both the game file and the preview file. Ensure the game file has the same name as the preview file.
2. Copy the files to the path: /game in the corresponding simulator or folder.

Product Features

1. The device features a 4.5-inch IPS screen with a resolution of 480×854, providing clear and vibrant visuals.
2. The device can be connected to a TV for a larger display experience.
3. The memory can be expanded using a TF card for additional storage capacity.
4. The device supports wired controllers to enhance gaming control.
5. The device is compatible with a wide range of games, including CPS, FBA, FC, GB, GBA, GBC, NEOGEO, SFC, MD, and PS formats, and allows users to download additional game formats for more options.
6. The game search function enables users to locate games easily by entering the first letter of the title.
7. The instant save function allows users to preserve game progress at any time.

8. The device automatically keeps a record of recently played games for quick access.
9. The standby mode serves as an energy-saving feature to extend playtime.
10. The device allows users to set and access their favorite games quickly.
11. The system offers multilingual support for a more personalized gaming experience.
12. The display settings can be customized, including options for energy-saving modes, brightness, interface background, and more.

Charging Instructions


The device is equipped with a 3000mAh rechargeable battery. When the battery level is low, the screen may flicker or sound performance may degrade. Charge the device promptly. Before charging, save your game progress and connect the adapter to begin charging. The recommended charging voltage is 5V.

Note: Do not charge the device for more than four hours continuously.

Video Output Connection

To connect the device to a TV or external display, follow these steps:

1. Plug the MINI-HD cable into the MINI-HD port on the device.
2. Connect the other end of the MINI-HD cable to the TV's HD interface.
3. Your TV should now display the content from the device.

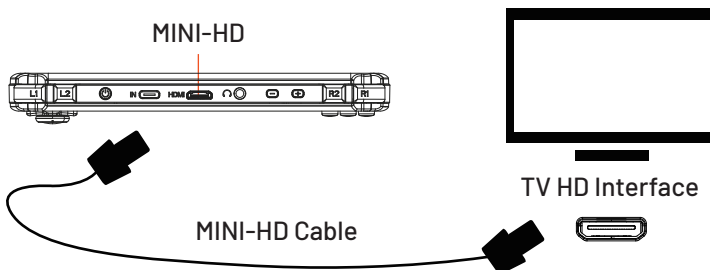

Navigation and Controls

1. Main Interface

1.1 SELECT Button – Set or Remove Favorites

Highlight any game on the main screen and press the SELECT button to add or remove it from your favorites list.

1.2 Type: Enter the game category and use the joystick or arrow keys to choose the emulator type.

1.3 History: View a list of recently played games.

1.4 Search

[A] Enter characters

[B] Hide the keyboard

1.5 Select Confirm characters

[X] select characters

[Y] Delete characters

2. In-Game Menu

Press the menu button while playing to access the following options: Restart the game, Return to the game, Save progress, Load progress, Adjust settings, and Exit the game.

Troubleshooting Guide

1. Game Console Will Not Power On

Check whether the battery is depleted. Connect the USB cable or charger, then attempt to power on the device again.

2. No Sound in Headphones

Verify that the volume is set to an appropriate level. Ensure the headphones are securely connected to the headphone jack.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**