

PORODO
LIFESTYLE



Porodo Lifestyle
4-IN-1
FACIAL CLEANSING BRUSH

SKU: PDLFST208WH

Table of Contents

Product Overview	2
Specifications	2
Product Features	3
Brush Heads Introduction	4
Washing Instructions	5
Charging Instructions	5
Safety Precautions	6
Maintenance	7
Disposal	7
Warranty	8
Contact Us	8

Product Overview

The Porodo 4-in-1 Facial Cleansing Brush is designed to offer an advanced facial care experience, featuring 2 speed levels and 360° rotation to provide a thorough and gentle cleanse. It comes with 4 interchangeable brush attachments to suit different skin types. The brush’s rounded tips are specifically designed to glide gently over sensitive skin, effectively removing dirt and makeup while minimizing irritation. It helps to combat blackheads, deeply cleanse pores, and nourish the skin. This facial brush is ideal for those with oily or combination skin, as it penetrates deep into pores to remove dirt and oil. Whether you're looking for a mild or intense cleanse, this brush ensures your skin remains fresh and revitalized.

Specifications

Battery Capacity	500mAh
Working Time	2H
Water-Resistance Level	IPX6
Charging Interface	Type-C
Charging Time	3H
Net Weight	123.5g
Brush Heads Included	Exfoliating Facial Brush, Deep Cleansing Brush, Daily Cleansing Brush, Silicone Cleansing Brush
Product Size	5.8 x 6.6 x 16.5 cm
Model Number	LFS208

Product Features

A. 2 Speed Levels

The brush provides two speed settings, allowing you to customize your facial cleansing experience based on your needs. The lower speed is perfect for a gentle daily cleanse, while the higher speed is ideal for a deeper, more intense exfoliation to remove stubborn dirt, oil, and makeup.

B. 360° Rotation

The 360° rotating head ensures a thorough and even cleansing process, reaching all areas of your face for a consistent wash. This rotation helps to deeply penetrate the skin's pores, removing impurities and promoting better absorption of skincare products. The rotation feature also mimics the natural movement of hand cleansing, giving you a more effective clean.

C. 4 Brush Attachments

This facial brush comes with four interchangeable brush heads, each designed to address specific skin concerns. The brush heads are crafted to suit various skin types, from sensitive to oily. Whether you need a gentle exfoliation, blackhead removal, or an ultra-soft brush for delicate skin, the multiple options ensure you can customize your care.

D. Gentle and Effective for Sensitive Skin

The brush is specially designed for those with sensitive skin. The soft bristles glide gently over the skin, reducing the risk of irritation while effectively cleansing. It helps in removing dirt, dead skin cells, and blackheads without causing redness or discomfort, making it suitable for even the most sensitive skin.

E. Targeted for Oily and Combination Skin

For individuals with oily or combination skin, this facial brush offers a powerful cleansing solution. The rotating head and the different brush attachments work together to deeply clean pores, removing excess oil and dirt that can lead to acne and breakouts. It helps maintain a balanced complexion by controlling oil production while providing a nourishing cleanse.

Brush Heads Introduction

1. Deep Cleansing Brush:

Deeply cleans dirt, rounded tips that are safe for all skin types and gently glide over the skin.



2. Daily Cleaning Brush

Designed for sensitive skin, this brush head gently and effectively removes blackheads and acne. It provides a soft yet thorough cleanse, ensuring that your skin is free from impurities while minimizing irritation.



3. Silicone Cleansing Brush

This brush head is ideal for sensitive skin, especially during sensitive periods. Made with soft silicone bristles, it gently cleanses and cares for your skin, offering a soothing experience without causing discomfort or redness.



4. Exfoliating Facial Brush

Perfect for oily and combination skin, this brush head penetrates deep into your pores to remove dirt, oil, and other impurities. Its exfoliating action helps to clear up clogged pores and prevent breakouts, leaving your skin feeling refreshed and balanced.



Washing Instructions

1. Detach the Brush:

Carefully separate the brush head from the body of the device. This helps ensure that all parts are properly cleaned and dry.

2. Rinse the Brush:

Hold the brush head under running water for 5 -10 seconds to rinse away any residue thoroughly. Make sure water flows through the bristles to remove any buildup.

3. Dry the Brush:

Gently wrap the brush in a dry towel to absorb excess water. Avoid squeezing or pressing too hard, as this may damage the bristles.

4. Allow to Air Dry:

Place the brush in a cool, dry place to air dry naturally. Ensure the brush is fully dry before reattaching it to the body of the device or storing it.

5. Important Tips:

- a.** Never submerge the body of the device in water.
- b.** Avoid using harsh chemicals or cleaning agents, as they can damage the brush's material.

Charging Instructions

1. How to Charge

Open the silicone USB port on the device and connect the charging cable to the charging terminal on the charging stand.

(USB port must connect to a wall charger; charger not included.)

2. Charging Mode

- a.** When charging, the indicator light will display a red color.
- b.** Once fully charged, the indicator light will turn green.



Charging

Fully Charged

Safety Precautions

1. Always read the instructions and precautions before using the device and follow them accordingly.
2. If you suspect damage to the product, stop using it immediately and contact your distributor or manufacturer.
3. Do not connect the charging cable with wet hands to avoid the risk of electrocution.
4. Keep the device out of reach of children and avoid contact with chemicals.
5. If you have skin conditions, consult a physician before use. If you experience skin irritation or inflammation, discontinue use.
6. Avoid pressing the device too hard to prevent skin discomfort or injury.
7. For hygiene purposes, do not share the facial brush with others.
8. Exercise caution when using the device around the eyes and ensure it does not make direct contact with them.
9. Do not expose the facial brush to direct sunlight, high heat, or boiling water, as this may damage the product.
10. Do not soak the device in water or expose it to water beyond the recommended limits.
11. When washing the head of the brush, separate it from the main body.
12. Avoid pressing the button excessively or holding the rotating brush for prolonged periods, as it may affect the motor or waterproof features.

Maintenance

1. Turn off the device when not in use.
2. Avoid dismantling or breaking the device.
3. After charging, disconnect the product from the cable.
4. Store the device in a cool, dry place, away from high temperatures, dust, or inflammable materials like those found in kitchens or cars.
5. Keep out of Children's reach.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:
porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:
info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **[porodo](https://www.instagram.com/porodo)**